

# Bellini®

## OPERATION INSTRUCTIONS



**60cm Freestanding Dishwasher**

Model No. **BDWM48B**





# Thank you.

Thank you for choosing Bellini Appliances.

Bellini prides itself on 'affordable living' making sure there is not compromise in your favourite room...The Kitchen.

All Bellini appliances carry a 3 year In Home warranty, be sure to retain your installation and user manual and receipt.

For all warranty and technical queries please phone:

**1300 373 199**



# CONTENTS


|    |    |                                         |
|----|----|-----------------------------------------|
| 01 | 4  | <b>USING YOUR DISHWASHER</b>            |
|    | 4  | Control Panel                           |
|    | 7  | Preparing And Loading Dishes            |
|    | 10 | Function Of The Rinse Aid And Detergent |
|    | 11 | Filling The Rinse Aid Reservoir         |
| 02 | 12 | Filling The Detergent Dispenser         |
|    | 13 | <b>PROGRAMMING THE DISHWASHER</b>       |
|    | 13 | Wash Cycle Table                        |
|    | 14 | Starting A Cycle Wash                   |
|    | 14 | Changing The Program Mid-cycle          |
| 03 | 15 | Forget To Add A Dish?                   |
|    | 16 | <b>ERROR CODES</b>                      |
| 04 | 17 | <b>TECHNICAL INFORMATION</b>            |

## NOTE:

- If you cannot solve the problems by yourself, please ask for help from a professional technician.
- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- If lost or out-of-date, you can receive a new user manual from the manufacturer or responsible vendor.

# QUICK USER GUIDE


Please read the corresponding content on the instruction manual for detailed operating method.

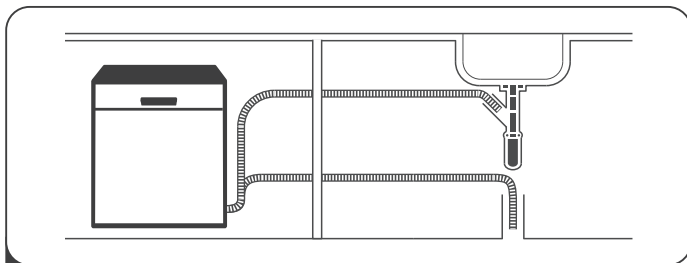


- 1 Install the dishwasher  
(Please check the section 5 "INSTALLATION INSTRUCTION "  
of PART I : Generic Version.)



- 2 Removing the larger residue on the cutlery

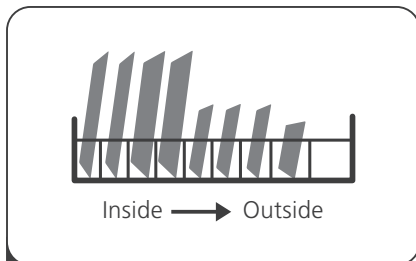

- 3 Loading the baskets

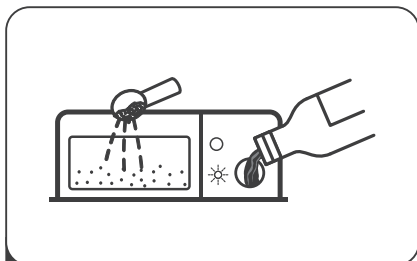


- 4 Filling the dispenser



- 5 Selecting a program and running the dishwasher

# USING YOUR DISHWASHER

## Control Panel

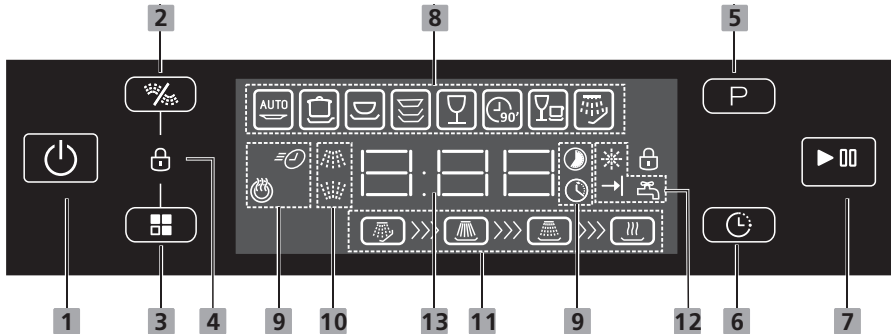

### Operation (Button)

|                        |                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1 Power</b>         | Press this button to turn on your dishwasher, the screen lights up.                                                                                                                                                                                                                                                                                                          |
| <b>2 Alt</b>           | Press the button to select either upper basket or lower basket loaded, and the response indicators (   ) will be lit.                                                                                      |
| <b>3 Function</b>      | Press the button to select a function, corresponding indicator will be lit.                                                                                                                                                                                                                                                                                                  |
| <b>4 Child lock</b>    | <p>This option allows you to lock the buttons on the control panel - so children cannot accidentally start the dishwasher by pressing the buttons on the panel.</p> <p>To lock or unlock the buttons on the control panel, press and hold the Alt button + Function button for 3 seconds simultaneously. When pressing this button, corresponding indicator will be lit.</p> |
| <b>5 Program</b>       | Select the appropriate washing program, the selected program indicator will be lit.                                                                                                                                                                                                                                                                                          |
| <b>6 Delay</b>         | Press the Delay button to increase the delay start time. Delay a cycle for up to 24 hours in one-hour increments. After setting the delay time, press the Start/Pause button to start. When pressing this button, corresponding indicator will be lit.                                                                                                                       |
| <b>7 Start / Pause</b> | To start the selected washing program or pause it when the dishwasher is working.                                                                                                                                                                                                                                                                                            |

## Display

### 8 Program indicator



#### Auto

For lightly, normally or heavily soiled crockery with or without dried-on food.



#### Intensive

For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for some time.



#### Heavy

For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.



#### Normal

This is the standard program suitable for normally soiled loads, such as pots, plates, glasses and lightly soiled pans.



#### Glass

For lightly soiled crockery and glass.



#### 90 Min

For normally soiled loads that need quick wash.



#### Rapid

A shorter wash for lightly soiled loads that do not need drying.



#### Soak

To rinse dishes that you plan to wash later that day.

### 9 Function indicators



#### Program time indicators



#### Delay time indicators



#### Express

Reduce the program time.



#### Extra Drying

To dry dishes more completely. (It can only be used with Intensive, Heavy, ECO, Glass, 90min)

### 10 Alt indicator



#### Upper

When you select Upper, only the upper rack nozzle is activated. The lower nozzle will not operate.



#### lower

When you select Lower, only the lower rack nozzle is activated. The upper nozzle will not operate.

## Display

|                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>11 Progress Indicator</b>                                                                  | <p>The progress light that corresponds to the current operation turns on to show the progress of the cycle.<br/>(Pre-wash, Main-wash, Rinse, Drying)</p> <p> Pre-wash</p> <p> Main-wash</p> <p> Rinse</p> <p> Drying</p>                                                                                                                                                                                      |
| <b>12 Warning indicator</b>                                                                   | <p> <b>Rinse Aid</b><br/>If the "  " indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.</p> <p> <b>Cycle finish</b><br/>when the program is end, the indicator will be lit.</p> <p> <b>Water Faucet</b><br/>If the "  " indicator is lit, it means the water faucet closed.</p> |
| <b>13 </b> | To show the reminding time, delay time, error code etc.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## • Preparing And Loading Dishes

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

### For washing the following cutlery/dishes

#### Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

#### Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolour during washing
- Glazed patterns may fade if machine washed frequently

### Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

For best performance of the dishwasher, follow these loading guidelines.

**(Features and appearance of baskets and cutlery baskets may vary from your model.)**

Place objects in the dishwasher in following way:

- Items such as cups, glasses, pots/pans, etc. are faced downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.

## Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

For best performance of the dishwasher, follow these loading guidelines.

**(Features and appearance of baskets and cutlery baskets may vary from your model.)**

Place objects in the dishwasher in following way:

- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.

### **NOTE:**

Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

## Removing the dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.

### **WARNING**



**Items will be hot!** To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.

## Loading the upper basket


The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.



## Loading the lower basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

The maximum diameter advised for plates in front of the detergent dispenser is of 19 cm, this not to hamper the opening of it.

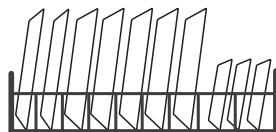

## Loading the cutlery basket

Cutlery should be placed in the cutlery rack separately from each other in the appropriate positions, and do make sure the utensils do not nest together, this may cause bad performance.

### ⚠ WARNING



Do not let any item extend through the bottom.

Always load sharp utensils with the sharp point down!



For the best washing effect, please load the baskets refer to standard loading options on last section of PART I : Generic Version

## Function Of The Rinse Aid And Detergent

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids.

### ⚠ WARNING

Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

### When to refill the rinse aid dispenser

Unless the rinse-aid warning light (  ) on the control panel is on, you can always estimate the amount from the color of the optical level indicator located next to the cap. When the rinse-aid container is full, the indicator will be fully dark. The size of the dark dot decreases as the rinse-aid diminishes. You should never let the rinse aid level be less than 1/4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

● Full      ● 3/4 full      ● 1/2 full      ● 1/4 full      ○ Empty

### Function of detergent

The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

### ⚠ WARNING


- Proper Use of Detergent

Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.  
Don't put powdered detergent into the dispenser until you are ready to wash dishes.




**Dishwasher detergent is corrosive! Keep dishwasher detergent out of the reach of children.**


## • Filling The Rinse Aid Reservoir

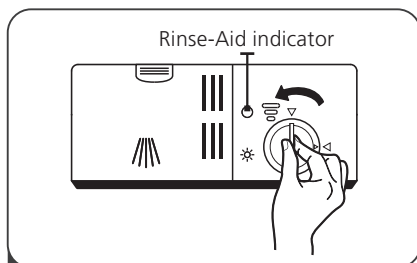

- 1 To open the dispenser, turn the cap to the "open" (left) arrow and lift it out.

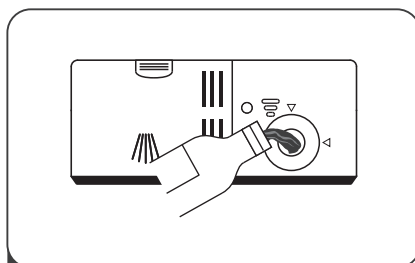

- 2 Carefully pour in the rinse-aid into its dispenser, whilst avoiding it to overflow.

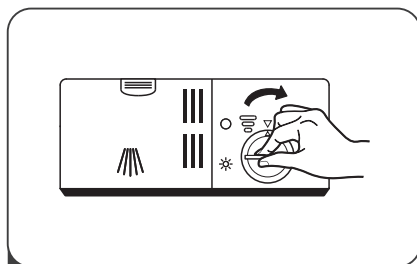


- 3 Replace the cap by inserting it aligned with "open" arrow and turning it to the closed (right) arrow.

### 💡 NOTE:


Clean up any spilled rinse aid with an absorbent cloth to avoid excessive foaming during the next wash.

## Adjusting the rinse aid reservoir

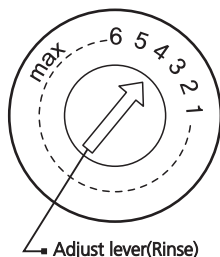


The rinse aid reservoir has six settings. Both the recommended setting and the factory setting is "4". If the dishes are not drying properly or are spotted, adjust the dial to the next higher number until your dishes are spot-free. Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades.


## • Filling The Detergent Dispenser

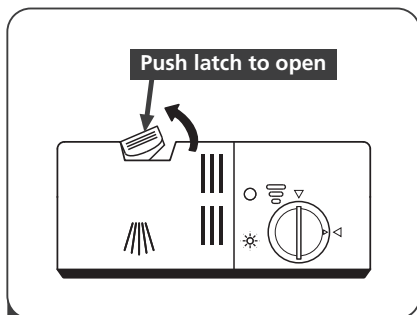

- 1 Press the release catch on the detergent dispenser to open the cover.

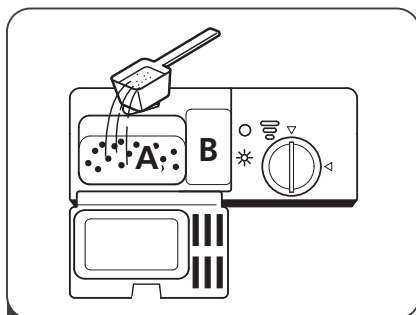

- 2 Add detergent into the larger cavity (A) for the main wash cycle .  
For more heavily soiled wash loads, also add some detergent into the smaller cavity (B) for the pre-wash cycle .

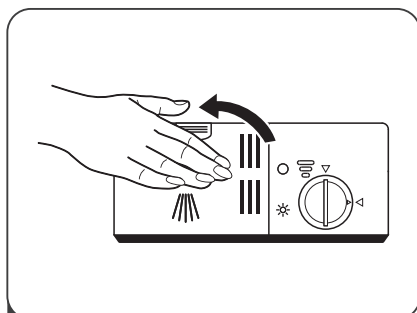

- 3 Close the cover and press on it until it locks into place.

### 💡 NOTE:

- Be aware that depending on the soiling of water, setting may be different.
- Please observe the manufacturer's recommendations on the detergent packaging.

# PROGRAMMING THE DISHWASHER

## Wash Cycle Table

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs.

(●) Means: need to fill rinse into the Rinse-Aid Dispenser.

| Program                                                                                                                  | Description Of Cycle                                                    | Detergent Pre/Main                   | Running Time(min) | Energy (Kwh) | Water (L) | Rinse Aid |
|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|--------------------------------------|-------------------|--------------|-----------|-----------|
| <br><b>Auto</b>                         | Pre-wash(45°C)<br>Autowash (45-55°C)<br>Rinse<br>Rinse(65°C)<br>Drying. | $\frac{5/27.5g}{\text{Or all in 1}}$ | 150               | 0.9 -1.3     | 11~15     | ●         |
| <br><b>Intensive</b>                    | Pre-wash(50°C)<br>Wash(60°C)<br>Rinse<br>Rinse<br>Rinse(65°C)<br>Drying | $\frac{5/27.5g}{\text{Or all in 1}}$ | 170               | 1.5          | 17.5      | ●         |
| <br><b>Heavy</b>                       | Pre-wash(45°C)<br>Wash(55°C)<br>Rinse<br>Rinse(65°C)<br>Drying          | $\frac{5/27.5g}{\text{Or all in 1}}$ | 160               | 1.3          | 13.5      | ●         |
| <br><b>Normal</b><br>(*AS/NZS 2007.1) | Pre-wash<br>Wash(45°C)<br>Rinse(48°C)<br>Drying                         | $\frac{5/27.5g}{\text{Or all in 1}}$ | 170               | 0.73         | 12.7      | ●         |
| <br><b>Glass</b>                      | Pre-wash<br>Wash(42°C)<br>Rinse<br>Rinse(60°C)<br>Drying                | $\frac{5/27.5g}{\text{Or all in 1}}$ | 125               | 0.8          | 13        | ●         |
| <br><b>90 Min</b>                     | Wash(65°C)<br>Rinse<br>Rinse(65°C)<br>Drying                            | $\frac{25g}{\text{Or all in 1}}$     | 90                | 1.2          | 11.5      | ●         |

| Program                                                                                           | Description Of Cycle               | Detergent Pre/Main | Running Time(min) | Energy (Kwh) | Water (L) | Rinse Aid |
|---------------------------------------------------------------------------------------------------|------------------------------------|--------------------|-------------------|--------------|-----------|-----------|
| <br><b>Rapid</b> | Wash(40°C)<br>Rinse<br>Rinse(45°C) | 25g                | 30                | 0.6          | 11.5      | ○         |
| <br><b>Soak</b>  | Prewash                            |                    | 8                 | 0.02         | 4         | ○         |

**NOTE:**

**\*AS/NZS 2007.1:** This program is the test cycle. The information for comparability test in accordance with \*AS/NZS 2007.1.


## Starting A Cycle Wash

1. Draw out the lower and upper basket, load the dishes and push them back.  
It is commended to load the lower basket first, then the upper one.
2. Pour in the detergent.
3. Insert the plug into the socket. The power supply refer to last page "Product fiche".  
Make sure that the water supply is turned on to full pressure.
4. Close the door, press the Power button, to switch on the machine.
5. Choose a program, the response light will turn on. Then press the Start/Pause button, the dishwasher will start its cycle.

## Changing The Program Mid-cycle

A wash cycle can only be changed if it has been running for a short time otherwise, the detergent may have already been released and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, follow the instructions below:


1. Press the Start/Pause button to pause the washing.
2. Press program button for more than 3 seconds - the program will cancel.
3. Press the program button to select the desired program.
4. Press the Start/Pause button, after 10 seconds, the dishwasher will start.

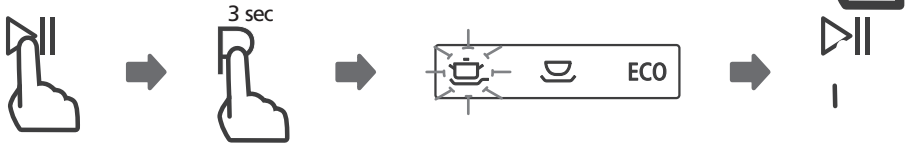

## • Forget To Add A Dish?

A forgotten dish can be added any time before the detergent dispenser opens. If this is the case, follow the instructions below:

1. Press the Start/Pause button to pause the washing.
2. Wait 5 seconds then open the door.
3. Add the forgotten dishes.
4. Close the door.
5. Press the Start/Pause button after 10 seconds, the dishwasher will start.

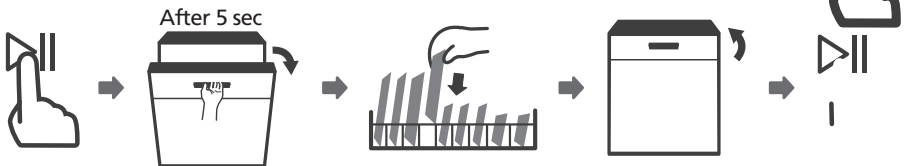

### ⚠ WARNING



It is dangerous to open the door mid-cycle, as hot steam may scald you.

## ERROR CODES


If there is a malfunction, the dishwasher will display error codes to identify these:

| Codes | Meanings                                      | Possible Causes                                                                     |
|-------|-----------------------------------------------|-------------------------------------------------------------------------------------|
| E1    | Longer inlet time.                            | Faucets is not opened, or water intake is restricted, or water pressure is too low. |
| E3    | Not reaching required temperature.            | Malfunction of heating element.                                                     |
| E4    | Overflow.                                     | Some element of dishwasher leaks.                                                   |
| E8    | Failure of orientation of distributary valve. | Open circuit or break of distributary valve.                                        |

### ⚠ WARNING

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.

## TECHNICAL INFORMATION

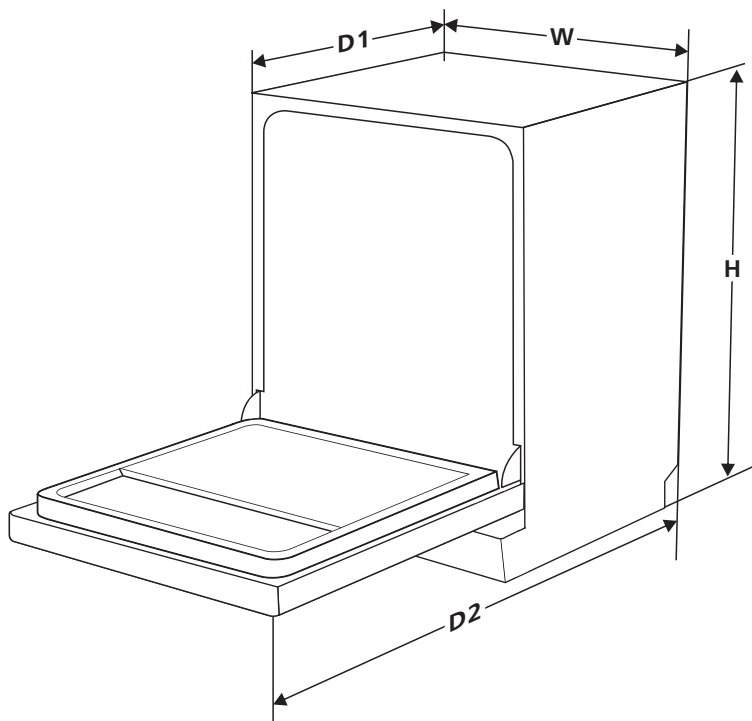

|                   |                                    |
|-------------------|------------------------------------|
| <b>Height (H)</b> | 845mm                              |
| <b>Width (W)</b>  | 598mm                              |
| <b>Depth (D1)</b> | 600mm (with the door closed)       |
| <b>Depth (D2)</b> | 1175mm (with the door opened 90° ) |

## Product fiche

|                                                   |                        |     |
|---------------------------------------------------|------------------------|-----|
| Manufacturer                                      | Bellini                |     |
| Type / Description                                | BDWM48B                |     |
| Standard place settings                           | 14                     |     |
| Energy efficiency class                           | ★★★★☆                  | 3.5 |
| Water consumption class                           | ★★★★☆                  | 4.5 |
| Standard cleaning cycle                           | Normal                 |     |
| Energy consumption of the standard cleaning cycle | 0.73 kWh               |     |
| Water consumption of the standard cleaning cycle  | 12.7 liter             |     |
| Program duration of the standard cleaning cycle   | 170 min                |     |
| Noise level                                       | 49 dB(A) re 1 pW       |     |
| Mounting                                          | Free standing          |     |
| Could be built-in                                 | YES                    |     |
| On/Off consumption                                | 1760-2100W             |     |
| Rated voltage / frequency                         | AC 220-240V/50Hz       |     |
| Water pressure (flow pressure)                    | 0.04-1.0MPa=0.4-10 bar |     |

## WARRANTY

### 1.1 In this warranty:

- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
- 1.1.2 Company means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email [admin@gsmretailgroup.com](mailto:admin@gsmretailgroup.com);
- 1.1.3 Consumer means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Bellini product;
- 1.1.4 Consumer Guarantees means the guarantees under the Australian Consumer Law;
- 1.1.5 You means the Consumer.

### 1.2 Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.

### 1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Bellini product will be free of manufacturing defects and will perform to the Company's specifications.

### 1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Bellini product which installed in a domestic household area.

\*The in Home warranty does not apply to Commercial and or industrial usage. \*Please See 1.7.7 for additional information

### 1.5 This warranty commences on the date of purchase of the Bellini product by the Consumer and continues for the benefit only of the Consumer until the expiry of three (3) year (Warranty Period).

### 1.6 If within the Warranty Period a manufacturing defect is discovered in the Bellini product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Bellini product or supply a replacement Bellini product free of charge. A replacement Bellini product may differ from the original product purchased by the Consumer.

### 1.7 This warranty will not apply to any Bellini product:

- 1.7.1 Installed by any person other than a qualified tradesperson; or
- 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
- 1.7.3 Operated in any way contrary to any operating or maintenance instructions; or
- 1.7.4 Improperly handled, installed or maintained; or
- 1.7.5 Altered or modified prior to or after installation; or
- 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply
- 1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel/ motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian consumer law requires the following statement with this product

*Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*

**IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY THE CONSUMER MUST CALL 1300 373 199  
(AUSTRALIA) OR 0800 764 912 (NEW ZEALAND) TO CONNECT TO THE NEAREST  
AUTHORISED CENTRE**



- 1.8 You must provide proof of your purchase of the Bellini product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Bellini product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Bellini product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Bellini product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Bellini product to the Company and for redelivery of the Bellini product by the Company (whether it is the original or a repaired and/or a replacement Bellini product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Bellini product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Bellini product in accordance with this warranty.

#### **DO NOT SEND IN THIS WARRANTY**

Fill out the following details and file with your purchase invoice.

#### **RETAIN & FILE WITH YOUR RECEIPT**

Your Purchase Receipt/Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges. GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

- Purchased from:
- Co. Name:
- Address:
- Date of Purchase:
- Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR WARRANTY SERVICE CALL 1300 373 199  
(AUSTRALIA) OR 0800 764 912 (NEW ZEALAND) TO  
CONNECT YOU TO THE NEAREST AUTHORISED SERVICE  
CENTRE**

**WE ENCOURAGE YOU TO REGISTER YOUR PURCHASE ON  
OUR WEBSITE, [WWW.BELLINIAPPLIANCES.COM.AU](http://WWW.BELLINIAPPLIANCES.COM.AU) TO  
RECEIVE PRODUCT SUPPORT, UPDATES & NEWS.**

