

Pet Hair Eraser Slim Cordless Vacuum Cleaning Filters | Support


Maintaining your filters is very important to the function of your vacuum

The steps below provide instruction on how to clean and maintain your Dirt Tank and Filters

- If you are experiencing issues with reduced suction you'll want to follow the complete list of steps before continuing > Go to [No Suction](#)


These steps are considered a part of routine maintenance

- Remove Dirt Tank from Hand Vac
- Grip the top portion of tank and pull up to remove the separator (the bottom ring of the separator will activate to "wipe" debris from screen & deposit into tank)
- Clean debris from Separator
- Empty debris from Dirt Tank

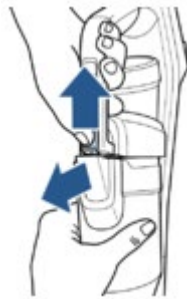


- Twist the top to remove Filter from Separator
- Remove Pre Motor Filter and clear debris (**machine should not be used without Filters installed**)
- Pre Motor Filter can be rinsed in warm water > Allow to completely air dry (24 - 48 hours) before reinstalling



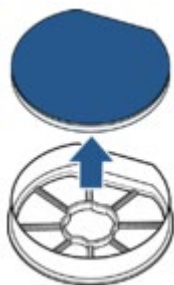

- Insert the Filter with tag towards the Filter Frame
- Insert Filter Frame into Separator > Separator into Dirt Tank
- Attach Dirt Tank to Hand Vac
- You should hear a click when Tank is secure

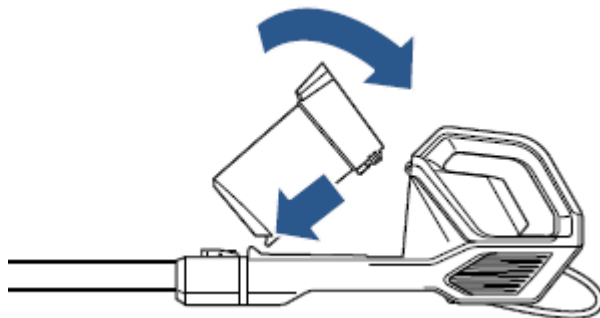

- The Post Motor Filter is located on the back of the Hand Vac
- Pinch the latch on the back of the Hand Vac > Remove Filter Cover
- Press up on bottom tab to pull Filter out
- Post Motor Filter can be rinsed in warm water > Allow to completely air dry (24 - 48 hours) before reinstalling

