

REFLEX ACTIVE

PARTY

THANK YOU FOR CHOOSING REFLEX ACTIVE!

We know you want to get straight to the music, but please take a minute to read these instructions, they'll help you get the most from your Reflex Active product.

SETTING UP

1. Open Bluetooth connections within phone or tablet settings. Search 'REFLEX-PARTY' and select.
2. Your speaker will show a blue light to show pairing has been successful.

Your connection will now be automatic, but if you do have any connection issues, please repeat steps 1-2. After the unit has paired and connected, it will reconnect automatically when the unit is powered on and device in range.

To disconnect Bluetooth, use your phones bluetooth settings.

TRUE WIRELESS STEREO (TWS) MODE

You can connect multiple Reflex Active Party speakers for an amazing sound experience. **(PARTY speakers only, will not work with CHILL).**

1. Once you have switched on, briefly press the power button of your first speaker.
2. The Bluetooth indicator flashes quickly and enters the TWS mode.
3. After two speakers are connected, the blue indicator of the main speaker flashes slowly, and the Bluetooth indicator of satellite speaker remains blue.
4. After the phone or device is connected, the Bluetooth indicator remains blue on both speakers.
5. To disconnect press and hold the power button.

CHARGING THE SPEAKER

1. Insert charging cable into the charging port & connect to power supply.
2. The charging indicator light will illuminate red to show case is charging.
3. The charging indicator light will turn off once the speaker is fully charge.
4. A full charge will take around 2.5 - 3 hours, do not exceed a 3 hour charge time.

LED INDICATOR STATUS

When charging your speaker

Red LED solid = Charging

Red LED light off = Fully charged

When pairing your speaker to a Bluetooth audio source

Rapid blinking blue LED : Bluetooth ready to pair

Solid blue LED : Bluetooth Connected

CARING FOR YOUR PRODUCT

Please follow these simple instructions to keep your speaker looking & sounding great!

• Clean product with a damp cloth & mild soap. • Not designed to be submerged in water, should this occur product will malfunction. • Avoid excessive twisting / turning of charging cable as this can cause malfunction. • Contains no serviceable components. Do not attempt to open the speakers or the casing as this may cause harm. • Keep away from strong magnetic fields to avoid interference.

GUARANTEE

Your Reflex Active product is guaranteed against any defective construction or parts for 2 years from date of purchase. Please retain your receipt as proof of purchase. Breakages caused by water damage, accident or mishandling are not covered. This guarantee is in addition to your statutory consumer rights. In the unlikely event you need to return your Reflex Active product, please contact us and we'll be happy to guide you through the process.

IMPORTANT INFORMATION

Enjoy your music, but please stay safe & ensure you stay aware of your surroundings at all times. Do not use this product whilst driving or in other potentially dangerous situations. This product is not a toy, not for use by children. This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Made in China by Peers Hardy UK Ltd. Precision House, Starley Way, Birmingham International Business Park, B37 7GN. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DISPOSAL OF GOODS

The crossed out wheellie bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility • Do not dispose of your product within household waste • Disposal of the packaging & your product should be done in accordance with local regulations • Batteries are not to be disposed of in municipal waste stream and require separate collection.

EU DECLARATION OF CONFORMITY

The full UK & EU declaration of conformity can be viewed online at the following web page: <https://www.reflex-active.com/pages/audio-docx>

HELP AND CONTACT

If you need any help with your product, then please get in touch, we'll be happy to hear from you! We are available Monday - Friday 9am - 4pm.

✉ Support@Reflex-Active.Com ☎ +44 (0) 121 524 1400

CONTROLS

POWER ON Press & hold the power button, the indicator light will flash blue.

POWER OFF Press & hold the power button.

VOLUME UP Press the plus button.

VOLUME DOWN Press the minus button.

PAUSE Tap on power button.

PLAY NEXT TRACK Hold plus button.

PLAY PREVIOUS TRACK Hold minus button.

LIGHTS Double tap the power button to switch between the 3 colour modes.

HANDS-FREE FUNCTIONS

When you have your phone & speaker connected you can take the following actions.

PICK UP A CALL Press the Bluetooth symbol button.

REJECT A CALL Press and hold the Bluetooth symbol button for 2 seconds.

END A CALL During a call, press the Bluetooth symbol button to end the call.

SPECIFICATIONS

- **BLUETOOTH VERSION / V5.0**
- **MAXIMUM OUTPUT / 5W**
- **BUILT-IN POWER / Li-ion 1200mAh**
- **CHARGING / USB MICRO B**
- **WIRELESS WORKING FREQUENCY / 2.402 - 2.480GHz**
- **CHARGING TIME / 3 HOURS**
- **PLAYBACK TIME / 10 HOURS**
- **STAND BY TIME / 1 YEARS**
- **WIRELESS RANGE / 10M**
- **WATERPROOF / IP66**



COME JOIN US OVER ON SOCIAL!



REFLEX.ACTIVE



REFLEX.ACTIVE