

 
Taper Wall Light Installation Instructions



Product Specifications

Model No.	HV3601T-BLK	HV3601T-WHT	HV3601T-SS316	HV3601T-CP
Name	Taper			
Material	316 Stainless Steel			316 Stainless Steel + Copper
Colour	Black	White	Stainless Steel	Copper
IP Rating	IP44			
Input Voltage	240v AC			
Protection Class	⚡ (Requires Earth)			
Lamp Base	E27			
Lamp Wattage				
Colour Temp	TRI Colour - 3000k, 4000k, 5500k			
Lumens	700lm, 720lm, 740lm			
CRI	>80+			
Wiring	Parallel			
Dimmable	No			
Warranty	3 Years Replacement*			


Dimensions

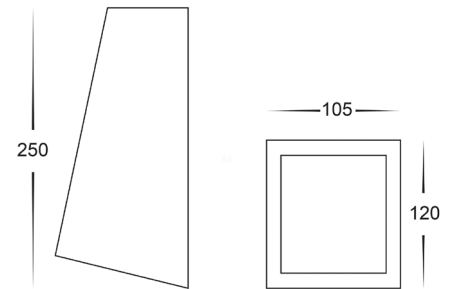

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Must not exceed maximum wattage - 60w E27
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

 Mounting Base

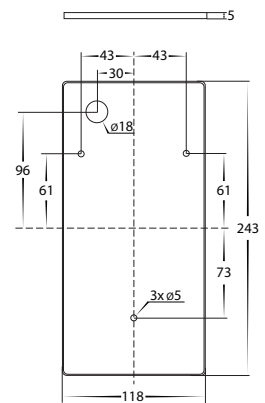

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove the screws from side of fitting and remove cover and set aside
3. Install base plate to wall in desired location
4. Seal all holes including cable entry and mounting holes
5. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire
6. Colour temperature is set to 3000K. To change, Remove globe by twisting anti clockwise and select desired colour temperature by moving switch on side of globe and then reinsert globe.
7. Reattach cover to base plate making sure screws are tight to avoid water penetration
8. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
9. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

1. Remove cover from fitting by removing the 2 screws and removing cover
2. Remove globe by twisting anti clockwise.
3. Re-insert the appropriate globe by twisting clockwise into the lamp holder (Make sure not to exceed max wattage, see product label for correct info)
4. Reattach cover to base plate making sure screws are tight to avoid water penetration
5. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia
Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

