

Wacom One DTH134

OF SUCH DAMAGES. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

In the event that any of the above limitations are held unenforceable, Wacom's liability for any damages to you or any party shall not exceed the purchase price you paid, regardless of the form of any claim.

This Limited Warranty is governed by the laws of the United States of America and the state of Oregon. This Limited Warranty is valid for and only applies to products purchased within the United States of America, South America or the Caribbean.

WARRANTY SERVICE
To obtain Warranty service within Central America, South America or the Caribbean contact your local dealer or distributor.
Wacom Customer Center Center Spanish:
http://www.wacom.com/sp/productsupport/email.cfm Portuguese:
http://www.wacom.com/pr/productsupport/email.cfm

Should you have any questions about this Agreement, or if you desire to contact with Wacom for any reason, please contact in writing: Wacom Technology Corporation, 1455 NW Irving Street Suite 800 Portland OR 97209 USA

LIMITED WARRANTY (USA AND CANADA)
WHO MAY USE THIS WARRANTY?
Wacom extends this limited warranty to the original consumer purchaser only. It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER?
This limited warranty covers defects in materials and workmanship of Wacom products, except for excluded products described below, for a period of one (1) year from the date of original retail purchase ("Warranty Period"), as evidenced by a copy of the receipt and registration with Wacom within 30 days of purchase.

WHAT IS EXCLUDED FROM THIS WARRANTY?
Software and consumable items such as the nibs are excluded from this limited warranty. In addition, this limited warranty does not cover any damage due to accident, abuse, misuse, negligence, or unauthorized modification or repair, or if it has been handled or stored other than in accordance with Wacom's storage instructions.

WHAT ARE THE REMEDIES UNDER THIS WARRANTY?
Wacom will pay for return shipping by United Parcel Service or by an equivalent service as chosen by Wacom. Wacom's sole obligation and entire liability under this limited warranty shall be, at Wacom's option, either the repair or replacement of the defective product or parts thereof of which Wacom is notified during the Warranty Period, provided, however, that you are responsible for (i) the cost of transportation of the product to the designated service location and (ii) any loss or damage resulting from such transportation.

HOW CAN YOU OBTAIN WARRANTY SERVICES?
Upon discovery of a defect in a covered product within the Warranty Period, you should contact Wacom Technical Support via telephone or email to obtain a Return Merchandise Authorization (RMA) number and instructions for shipping the product to a service location designated by Wacom.

To obtain Warranty service within the U.S. or Canada contact:
Wacom Customer Center Center Spanish:
Visit: <http://support.wacom.com>

You should send the product, shipping charges prepaid, to the designated service location, accompanied by the RMA, your name, address and telephone number, proof of purchase date, and a description of the defect.

DISCLAIMER, LIMITATION OF LIABILITY
Any descriptions, drawings, specifications, samples, models, bulletins, or similar material, used in connection with the sale of the product, shall not be construed as an express warranty that the product will conform or comply with your requirements. EXCEPT FOR THE LIMITED WARRANTY DESCRIBED ABOVE, THERE ARE NO OTHER WARRANTIES MADE BY WACOM ON ANY COVERED PRODUCT. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY WACOM, ITS DEALERS, DISTRIBUTORS, AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY, AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. WACOM LIMITS THE DURATION OF ANY LEGALLY IMPLIED WARRANTIES INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE DURATION OF WACOM'S EXPRESS WARRANTY, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. NEITHER WACOM NOR ANYONE ELSE WHO HAS BEEN INVOLVED IN THE CREATION, PRODUCTION, OR DELIVERY OF THIS PRODUCT SHALL BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF WACOM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

In the event that any of the above limitations are held unenforceable, Wacom's liability for any damages to you or any party shall not exceed the purchase price you paid, regardless of the form of any claim. This Limited Warranty is governed by the laws of the United States of America and the State of Oregon. This Limited Warranty is valid for and only applies to products purchased and used inside the United States of America (or its territories or possessions) or Canada.

CONTACT US
Should you have any questions about this Limited Warranty, or if you desire to contact Wacom for any reason, please contact in writing: Wacom Technology Corporation, 1455 NW Irving Street Suite 800 Portland OR 97209 USA

LIMITED WARRANTY (CENTRAL AMERICA AND THE CARIBBEAN)
Wacom extends the product, to the original consumer purchaser, except for the Software and consumable items such as the nibs, to be free from defects in materials and workmanship under normal use and service for a period of one (1) year, from the date of original retail purchase, as evidenced by a copy of the receipt and registration with Wacom within 30 days of purchase.

The Software is licensed "as is." Wacom makes no warranty with respect to its quality or performance. Wacom cannot guarantee you uninterrupted service or the correction of any errors.

Upon discovery of a defect in the product, except in the Software, within the Warranty Period, you should contact Wacom Technical Support via telephone, email, or fax to obtain a Return Merchandise Authorization (RMA) number and instructions for shipping the product to a service location designated by Wacom. You should send the product, shipping charges prepaid, to the designated service location, accompanied by the return authorization number, your name, address and telephone number, proof of purchase date, and a description of the defect.

Wacom will pay for return shipping by United Parcel Service or by an equivalent service as chosen by Wacom.

Wacom's sole obligation and entire liability under this warranty shall be, at Wacom's option, either the repair or replacement of the defective product or parts thereof of which Wacom is notified during the Warranty Period, provided, however, that you are responsible for (i) the cost of transportation of the product to the designated service location and (ii) any loss or damage resulting from such transportation.

Wacom shall have no responsibility to repair or replace the product if the failure of the product has resulted from accident, abuse, misuse, negligence, or unauthorized modification or repair, or if it has been handled or stored other than in accordance with Wacom's storage instructions. Any descriptions, drawings, specifications, samples, models, bulletins, or similar material, used in connection with the sale of the product, shall not be construed as an express warranty that the product will conform or comply with your requirements. EXCEPT FOR THE LIMITED WARRANTY DESCRIBED ABOVE, THERE ARE NO OTHER WARRANTIES MADE BY WACOM ON THIS PRODUCT. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY WACOM, ITS DEALERS, DISTRIBUTORS, AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY, AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM COUNTRY TO COUNTRY. WACOM LIMITS THE DURATION OF ANY LEGALLY IMPLIED WARRANTIES INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE DURATION OF WACOM'S EXPRESS WARRANTY, SOME COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. NEITHER WACOM NOR ANYONE ELSE WHO HAS BEEN INVOLVED IN THE CREATION, PRODUCTION, OR DELIVERY OF THIS PRODUCT SHALL BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF WACOM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

APPLY TO YOU in the event that any of the above limitations are held unenforceable, Wacom's liability for any damages to you or any party shall not exceed the purchase price you paid, regardless of the form of any claim. This Limited Warranty is valid for and only applies to products purchased and used inside the countries and territories of Asia/Pacific excluding China, Hong Kong, and countries in the Middle East. This Limited Warranty is a statement of the current warranty policy of Asia Pacific Division of Wacom Co., Ltd. and takes precedence over all other warranty statements contained in packaging, brochures, manuals, or other documents.

This Limited Warranty is governed by the laws of Japan and is subject to change without prior notice.

Australian Consumer law
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Our hardware products come with a one (1) year warranty given in accordance with the Australian Consumer Law. Wacom Co., Ltd. with a subsidiary located in Australia (PL Ground Floor, Building 1, 3 Richardson Place, North Ryde NSW 2113, Australia) is the authorised agent for the sale of the product in Australia. Wacom does not provide the general features and functions described in the User Documentation in the one (1) year period after delivery to you please contact Wacom Australia Pty. Ltd. at +61-29422 6700 with details of your product, serial number, and proof of purchase. You may be required to return the hardware product to the address we provide to you at the time, in which case such return will be at your own cost. The benefits under this warranty are in addition to other rights and remedies that you may have at law.

Warranty Service / Wacom Technical Support in Asia Pacific (except Japan, the Peoples Republic of China, Hong Kong, and countries in the Middle East) Detailed Asia Pacific Limited Warranty policy and product registration may be found online at <http://support.wacom.com>. Wacom will pay for return shipping by United Parcel Service or by an equivalent service as chosen by Wacom. Wacom's sole obligation and entire liability under this limited warranty shall be, at Wacom's option, either the repair or replacement of the defective product or parts thereof of which Wacom is notified during the Warranty Period, provided that the product was unused at the time of purchase. If, during the applicable warranty period, a defect in the product is discovered, it is discovered to be defective, it should be returned immediately to the place of purchase in its original packaging, accompanied by a copy of the receipt, and a telephone number, a description of the problem, and a copy of the original receipt. The customer shall be responsible for the cost of transportation of the product resulting from such transportation.

Wacom will pay for return shipping by United Parcel Service or by an equivalent service as chosen by Wacom. Wacom's sole obligation and entire liability under this limited warranty shall be, at Wacom's option, either the repair or the replacement of the product or parts thereof of which Wacom is notified during the Warranty Period, provided, however, that you are responsible for (i) the cost of transportation of the product to the designated service location and (ii) any loss or damage resulting from such transportation.

Precaution
For the full version of the Wacom One Important Product Information document click on www.wacom.com and click on Support.
To ensure the safe operation of the product, be sure to follow all instructions, cautions, and warnings found within this guide. Failure to do so may be dangerous to the product results from misuse, improper use, negligence or unauthorized attention or repair. (b) the product was not handled properly according to the designated service location.

WACOM, (c) the damage resulted from normal wear and tear of product parts; or (d) the serial number affixed by WACOM has been removed or rendered unrecognizable. Any descriptions, drawings, specifications, samples, models, notifications or similar material, used in connection with the sale of the product, shall not be construed as an explicit guarantee that the product corresponds to the specifications, instructions and environmental ranges stated in this document, quick start guide and catalog.

For details, please see "support" on wacom.com. • Improperly setting up, using, or caring for this product can increase the risk of an accident or human injury. • Do not, and do not allow any third party other than to fulfill your requirements, to open the product, to disassemble or modify the product. • Prevent children from playing with the product, materials or wrapping, as a choking or suffocation hazard may exist.

• Touching the same part of your body to the product (LCD panels and other areas) for extended periods of time may cause low temperature burns to the skin. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

• Environments subject to temperature and humidity ranges that the product is not designed for (such as outdoors or inside vehicles). • Environments subject to dusty conditions. • Environments with high humidity. • Move the product periodically to another place on the desk or on a table. • Do not use the product for a longer period of time than the permitted time, which is essential to the proper performance of the contract on which the other party will typically rely. • Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws.

• Only use a power adapter that Wacom specifies for the product. • Do not use a power adapter with a power rating used, it may cause the product to malfunction, damage, or catch fire. Use of a power adapter with a power rating lower than the one specified may void your warranty. • Do not use or store the product in the following environments: • Employees, agents and subcontractors subject to severe temperature fluctuations.

FR:
– Accertarsi di smaltire correttamente il prodotto secondo gli ordinamenti e le leggi locali.

– Utilizzare solo un adattatore di alimentazione indicato da Wacom per l'uso con il prodotto. L'utilizzo di un altro tipo di adattatore può causare malfunzionamenti del prodotto, danni o principi di incendio. L'utilizzo di un diverso tipo di adattatore di alimentazione può causare danni. – Non usare o riporre il prodotto nei seguenti ambienti:

• Ambienti soggetti a elevati sbalzi di temperatura e umidità che non rientrano nelle condizioni specifiche di utilizzo (ad esempio, all'aperto o all'interno di veicoli).

• In prossimità di fiamme libere.

– Spostare periodicamente il prodotto in una posizione diversa della superficie di lavoro per evitare di scolorire o alterare l'aspetto estetico del prodotto. – Se l'alimentazione USB-C del PC o Wacom One è inferiore a 15 W, utilizzare sia l'adattatore di alimentazione che il cavo USB-C.

– Veillez à mettre ce produit au repos conformément aux lois et réglementations locales en matière de pollution.

– Employez impérativement un adaptateur secteur que Wacom recommande pour l'utilisation avec le produit. L'utilisation d'un autre adaptateur secteur risque d'entraîner un dysfonctionnement de l'appareil, de l'endommager ou de le voir prendre feu. Si vous utilisez un autre adaptateur secteur, votre garantie est annulée.

– N'utilisez pas et ne stockez pas le produit dans les environnements suivants:

• Environnements sujets à d'importantes fluctuations de température.

• Environnements sujets à des plages de température et d'humidité qui excèdent les conditions d'utilisation spécifiées (en extérieur, à l'intérieur de véhicules).

• Environnements poussiéreux.

• À proximité de flammes nues.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Evitare di esporre il prodotto a un altro ambiente di vostro surface di lavoro per evitare di scolorire o di modificare di fatto permanente l'aspetto di la superficie.

– Si la puissance transmise au Wacom One par le port USB-C du PC est inférieure à 15 W, utilisez à la fois l'adaptateur secteur et le câble USB-C.

– Accertarsi di smaltire correttamente il prodotto secondo gli ordinamenti e le leggi locali.

– Utilizzare solo un adattatore di alimentazione indicato da Wacom per l'uso con il prodotto. L'utilizzo di un altro tipo di adattatore può causare malfunzionamenti del prodotto, danni o principi di incendio. L'utilizzo di un diverso tipo di adattatore di alimentazione può causare danni. – Non usare o riporre il prodotto nei seguenti ambienti:

• Ambienti soggetti a elevati sbalzi di temperatura e umidità che non rientrano nelle condizioni specifiche di utilizzo (ad esempio, all'aperto o all'interno di veicoli).

• In prossimità di fiamme libere.

– Spostare periodicamente il prodotto in una posizione diversa della superficie di lavoro per evitare di scolorire o alterare l'aspetto estetico del prodotto. – Se l'alimentazione USB-C del PC o Wacom One è inferiore a 15 W, utilizzare sia l'adattatore di alimentazione che il cavo USB-C.

– Veillez à mettre ce produit au repos conformément aux lois et réglementations locales en matière de pollution.

– Employez impérativement un adaptateur secteur que Wacom recommande pour l'utilisation avec le produit. L'utilisation d'un autre adaptateur secteur risque d'entraîner un dysfonctionnement de l'appareil, de l'endommager ou de le voir prendre feu. Si vous utilisez un autre adaptateur secteur, votre garantie est annulée.

– N'utilisez pas et ne stockez pas le produit dans les environnements suivants:

• Environnements sujets à d'importantes fluctuations de température.

