



PORTABLE BEAUTY FRIDGE 4L

(PINK & WHITE)

 
ESBUFDG4PKA & ESBUFDG4WHA

SAFETY & WARNINGS

- Read all instructions before use and retain this user guide for future reference.
- Read all following safety precautions carefully before use.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should be always supervised and not allowed to play with this product.
- This product is not suitable for camping use.
- Do not expose this product to rain.
- Do not store any explosive substances such as aerosol cans with a flammable propellant inside this product.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments
 - farmhouses and by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
 - catering and similar non-retail applications
- **WARNING:** When positioning the appliance, ensure the power cord is not trapped or damaged.
- **WARNING:** Do not place portable power outlets or portable power supplies at the rear of the appliance.
- If the power cord shows any sign of damage, cease use immediately and contact Kogan.com for support.
- This product should be cleaned regularly if there are signs of residual water inside it.
- Unplug the power cord before cleaning. Wipe the dust from the surface using a slightly damp cloth. Ensure any water does not come in contact with any internal parts or connectors.
- Do not clean using any harsh detergents or solvents.
- Before using this product, ensure to only use a power supply that matches the rating as outlined in the specifications (100-240V~ /DC 12V).
- When using inside your vehicle, only do so while the vehicle's engine is running. Ensure to always turn off the fridge and unplug the 12V power cord after the vehicle stops running.
- This product should not be used for transporting acidic or corrosive items.
- Do not block the ventilation openings during operation.
- Do not use this product in any way other than what is outlined in this user guide.
- Do not disassemble or modify this product in any way.

- When using the heating function, the inside of this product can reach a temperature of approximately 65°C. Caution should be used to avoid contact burns.
- Before switching between heating and cooling modes, turn the fridge off and allow to rest for 15 minutes before turning back on.
- Always store this product in a clean, dry and well-ventilated environment.
- Do not expose this product to water or any other liquids.
- Do not expose this product to any open flames and other sources of heat.
- This product cannot be used as a freezer and isn't suitable for the freezing of fresh meats and produce. It is recommended to place already frozen foods inside for storage.
- To help keep food fresh, avoid opening the door frequently or leaving the door open for extended periods of time.



OVERVIEW

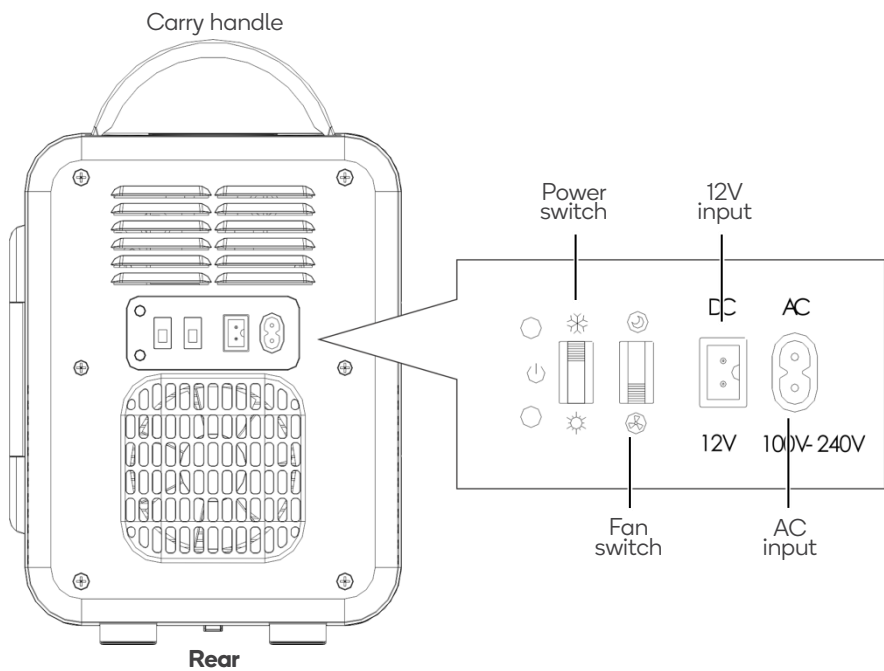

OPERATION



Vehicle use (DC 12V)

  1. Connect the 12V power cable into the 12V input on the rear of the fridge.
2. Firmly insert the 12V power cable into your vehicle's 12V socket (cigarette lighter).

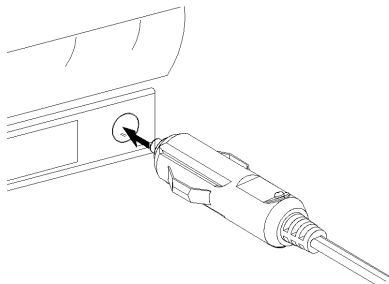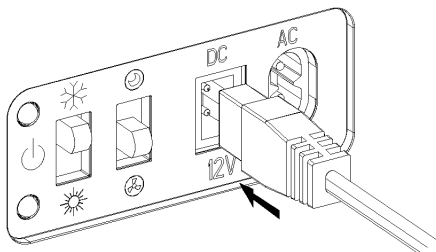

Home use (AC 100V-240V)

  
1. Connect the AC power cable into the AC input on the rear of the fridge.
2. Plug the AC power cord into an electrical outlet.

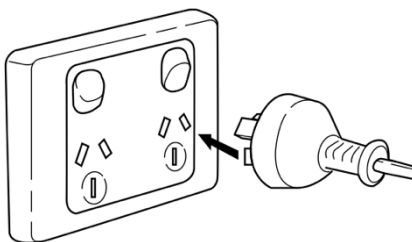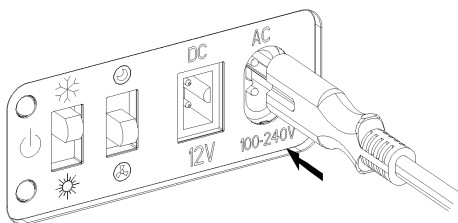

Heating and cooling

Cooling:

 
1. Place the power switch up into the “cool” position.
2. The indicator will turn green and the fridge will begin cooling.

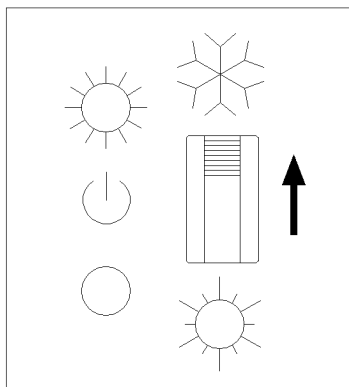

Cool: Green indicator

Heating:

 1. Place the power switch down into the “heat” position.
2. The indicator will turn red and the fridge will begin heating.

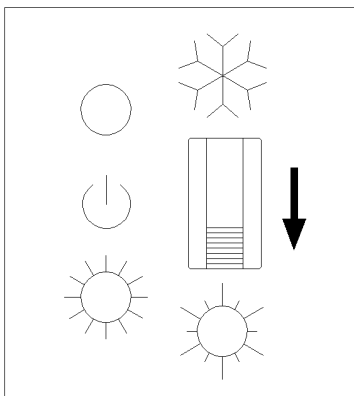


Heat: Red indicator

Note:

To avoid damaging the fridge, when you need to switch between the heating and cooling modes, first place the power switch into the middle “OFF” position and allow the fridge to rest for 15 minutes before turning back on.

Fan control

 - **Normal mode:** Placing the fan switch down puts the fridge into “normal” mode. The fan runs at a higher speed. This is suitable for normal daytime operation.
- **Silent mode:** Placing the fan switch up puts the fridge into “silent” mode. The fan runs at a lower speed. This mode is recommended for night-time operation.

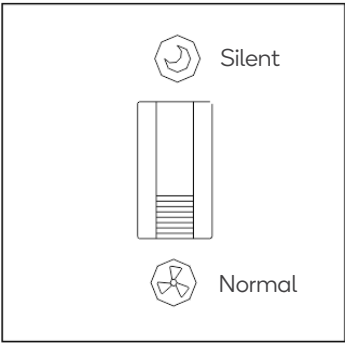

Suggested Temperatures

Item	Temperature range
Fresh produce	0-10°C
Beer	0-15°C
Tea	5-10°C
Cosmetics / skincare	10-18°C
Medicine	Below 20°C

Recommended applications

- **Locations:** Car, home, boat, office, dormitory and cosmetics store etc.
- **Suitable for refrigeration:** Fresh produce, bottled/canned beverages, tea, medicines, breast milk and cosmetics etc. Cooked food can be stored for 5-8 hours.
- **Not suitable for refrigeration:** frozen foods such ice cream, acidic or corrosive liquids, raw meats.

CLEANING & CARE

- Before performing any cleaning or maintenance, ensure the power switch is placed into the middle “OFF” position and unplugged from the power source.
- Wipe any dust or dirt from the surface of the fridge using a soft cloth dipped in a solution of water and a mild detergent.
- Wiped down the inside of the fridge with a soft cloth and warm water.
- To avoid damage and possible electrical shock, never rinse or submerge the fridge in water or any other liquids.

SPECIFICATIONS

Rated voltage 100-240V~ /DC 12V

Rated power 48W

Heating up to 65°C

Cooling range 15-18°C

Disposal



This marking indicates that this appliance should not be disposed with other house-hold wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

TROUBLESHOOTING

The fridge is not turning on:

1. Check that the power cord is properly connected to a power outlet or 12V socket.
2. Ensure the power switch is in either the “cool” or “heat” position.
3. If the fridge is still not turning on, contact **help.Kogan.com** for support.

The fridge is not cooling effectively:

1. Place the fan switch into the “normal” position. Check to see if the fan is running.
2. Run the fridge for 15 minutes.
3. Touch the four screws inside the fridge to check if it is cold.
4. If the fridge is not cooling, contact **help.Kogan.com** for support.

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com