



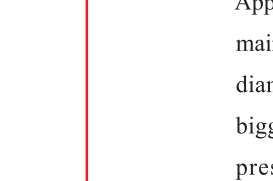



MANUAL

Compressor

P23704US

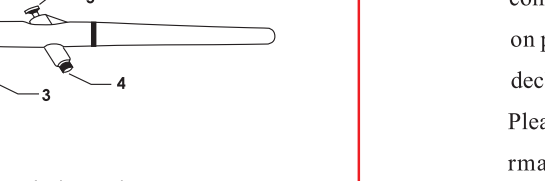

very steady, means the altitude is very

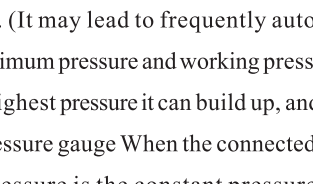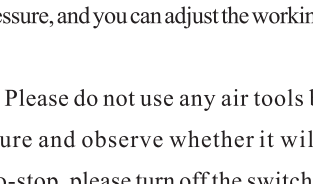

the gauge reflect the working pressure of the air tools.

Turn the Pressure regulator up; turn clockwise to increase the pressure; turn counter-clockwise to reduce the pressure.

Turn the pressure regulator to get the right working pressure needed, and fix it. Do not turn the button when it can not be adjusted.

Turn the button water-release valve to release the water.

This diagram illustrates the components of a car stereo system, including the main unit, speakers, amplifier, and various accessories, each labeled with a number for identification.

- 1**: Main stereo unit (head unit)
- 2**: Speaker grille
- 3**: Speaker
- 4**: Power cable
- 5**: Speaker terminal
- 6**: Speaker terminal
- 7**: Fuse
- 8**: Fuse holder
- 9**: Speaker terminal
- 10**: Speaker terminal
- 11**: Speaker terminal
- 12**: Speaker terminal
- 13**: Speaker terminal
- 14**: Speaker terminal
- 15**: Speaker terminal
- 16**: Speaker terminal
- 17**: Speaker terminal
- 18**: Speaker terminal
- 19**: Speaker terminal
- 20**: Speaker terminal
- 21**: Speaker terminal
- 22**: Speaker terminal
- 23**: Speaker terminal
- 24**: Speaker terminal
- 25**: Speaker terminal
- 26**: Speaker terminal
- 27**: Speaker terminal
- 28**: Speaker terminal
- 29**: Speaker terminal
- 30**: Speaker terminal
- 31**: Speaker terminal
- 32**: Speaker terminal
- 33**: Speaker terminal
- 34**: Speaker terminal
- 35**: Speaker terminal
- 36**: Speaker terminal
- 37**: Speaker terminal
- 38**: Speaker terminal
- 39**: Speaker terminal
- 40**: Speaker terminal
- 41**: Speaker terminal
- 42**: Speaker terminal
- 43**: Speaker terminal
- 44**: Speaker terminal
- 45**: Speaker terminal

PARTS NO.	DESCRIPTION	QTY	PARTS NO.	DESCRIPTION	QTY
#1	Round-Head Screw	8	#41	Handle	1
#2	On/Off Switch	1	#42	O-Ring	1
#3	Housing	1	#43	Pressure Switch	1
#4	Power Cord with Plug Spring	1	#44	Condenser	1
#5	Back Cover	1	#45	Front Cover(paperboard)	1
#6	Fixed Screw	4			
#7	Ply-yatra drill	1			
#8	Ply-yatra drill	1			
#9	Best-head Sheath	1			
#10	Plug Spring	1			
#11	Line	1			
#12	Pipe	1			
#13	Best-head Sheath	1			
#14	Plug Spring	1			
#15	Wire Connector	3			
#16	Fixed Motor	1			
#17	Bearing	2			
#18	Rotary Motor	1			
#19	Rubber Feet	4			
#20	Crank	1			
#21	Bearing	1			
#22	Connect Rod	1			
#23	Snap Ring	1			
#24	Front Cover	1			
#25	Piston Ring	1			
#26	Connect Rod Cover	1			
#27	Metal Sheet	1			
#28	Stainless Gasket	1			
#29	Connect Rod Screw	1			
#30	Cylinder	1			
#31	Compressor Body	1			
#32	O-Ring	1			
#33	Clapboard	1			
#34	Mushroom Ring	1			
#35	O-Ring	1			
#36	Screw	1			
#37	Air Filter	1			
#38	Cylinder Cap	1			
#39	Gasket	4			
#40	Screw	4			