

USER GUIDE

DB

V 1.0



DANTE NDI BRIDGE

NDI®

 BirdDog | DANTE NDI BRIDGE

NDI®



Network: Office 2.4

Office 2.4



☒ Dante to NDI

CONFIGURE

No. of Audio Channels:

Stereo Pair

Audio Sample Rate:

48,000hz

NDI Output name:

Dante_to_NDI_01

Dante_to_NDI_02

Dante_to_NDI_03

☒ NDI to Dante

No. of Audio Channels:

Stereo Pair

Audio Sample Rate:

48,000hz

NDI source:

NDI_to_Dante_01

NDI_to_Dante_02

NDI_to_Dante_03



A SHORT WALK THROUGH DANTE NDI BRIDGE

- 1 Choose your Network Adaptor (your Dante Network).
- 2 Activate or Deactivate the BirdDog Comms Pro compatibility.
- 3 Dante to NDI
 - If No. of Audio Channels is set on "6 Channels", you need to choose an NDI Output Name for your Dante to NDI.
 - If No. of Audio Channels is set on "Stereo Pair", you need to choose all 3 NDI Output Names for your Dante to NDI.
- 4 NDI to Dante
 - You need to select which NDI Source you prefer to use.
- 5 Once the above settings are complete you can activate Dante with the toggle.


Allow the software to load

- 6 Once running you can turn ON/OFF Dante to NDI or NDI to Dante (these functions are only active once Dante is turned on as per instruction 5)

NOTE:

To modify the NDI Output Name or the NDI source, you need to turn OFF the Dante main toggle (5)

To access the free Dante Controller just press the CONFIGURE button on the top-right side. (7). Dante Controller is required to be running somewhere on the network.

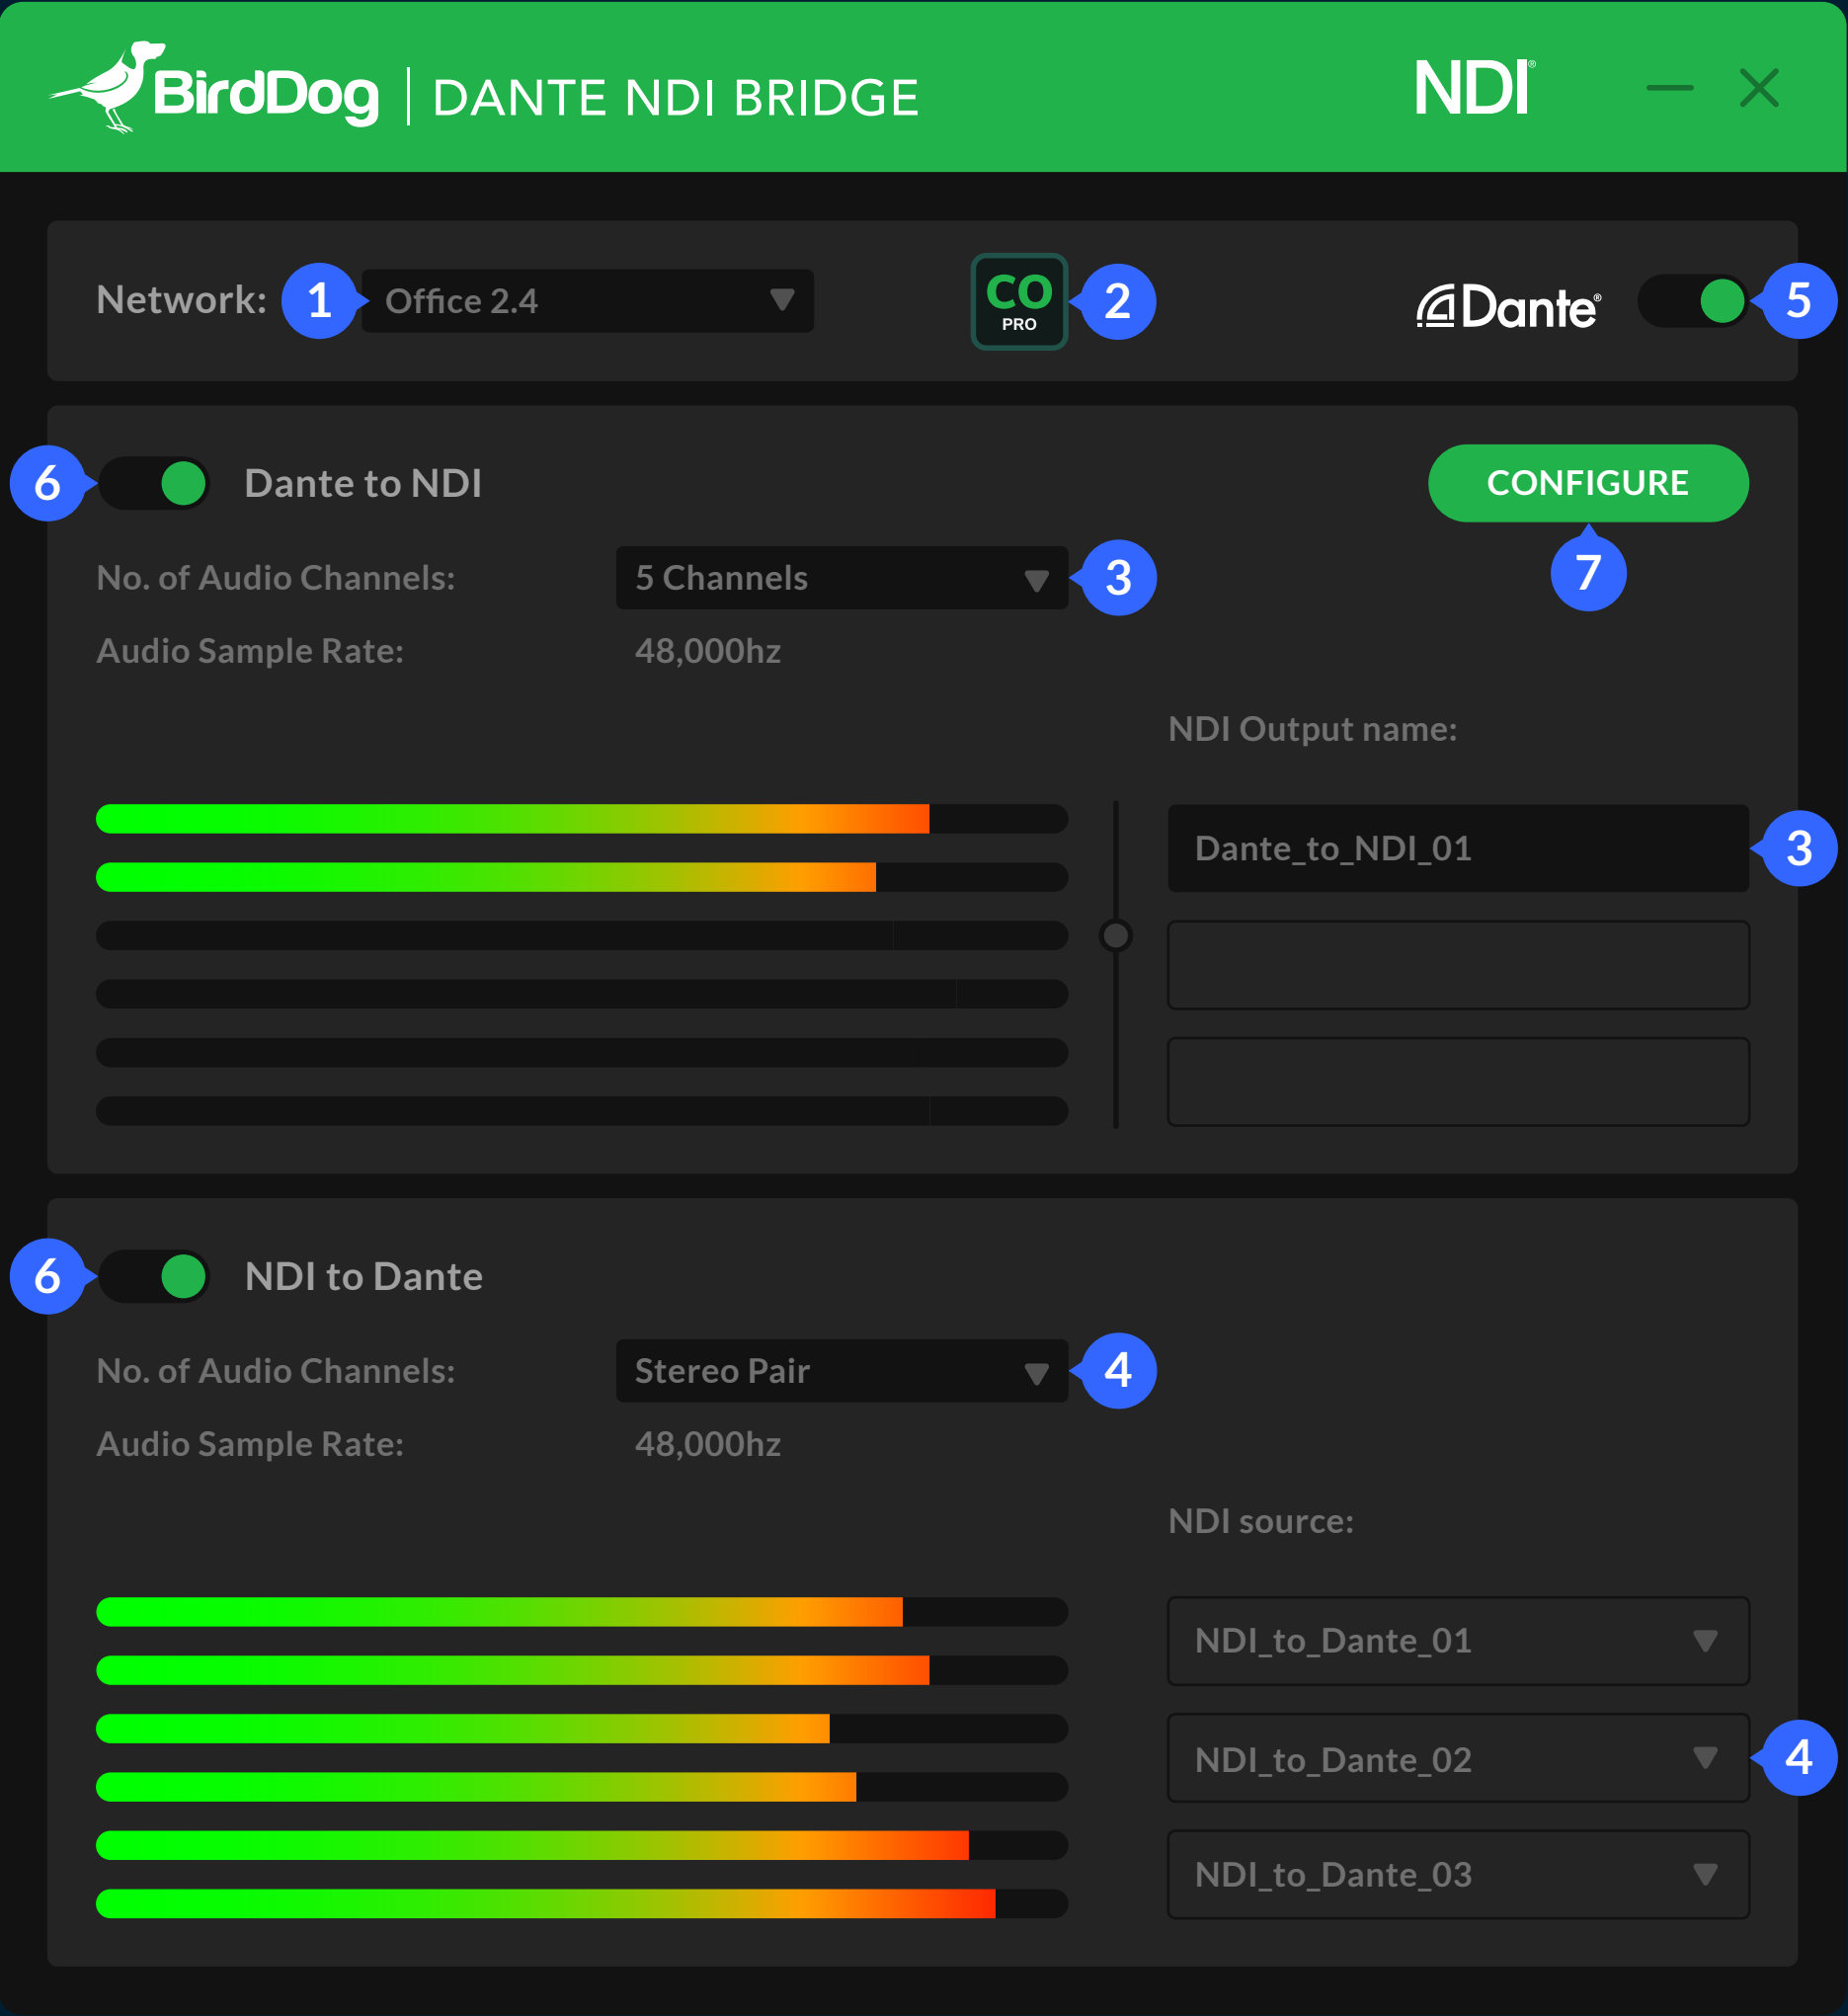

Click the main logo
to go to settings

 DANTE NDI BRIDGE

NDI — ✕

Network: Office 2.4



 Dante to NDI

COMMS Compatibility inactive

CONFIGURE

Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI Output name:

Dante_to_NDI_01

Dante_to_NDI_02

Dante_to_NDI_03

 NDI to Dante

Turn Dante ON to control this switch

Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI source:

NDI_to_Dante_01

NDI_to_Dante_02

NDI_to_Dante_03

 DANTE NDI BRIDGE

NDI — ✕

Network: Office 2.4



 Dante to NDI

COMMS Compatibility active

CONFIGURE

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI Output name:

Dante_to_NDI_01

Dante_to_NDI_02

Dante_to_NDI_03

 NDI to Dante

Turn Dante OFF to control this section

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI source:

NDI_to_Dante_01

NDI_to_Dante_02

NDI_to_Dante_03



BirdDog

DANTE NDI BRIDGE

NDI

Network:Office 2.4

CO PRO

Dante

Dante to NDI

CONFIGURE

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI Output name:

Dante_to_NDI_01

Dante_to_NDI_02

Dante_to_NDI_03

NDI to Dante

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI source:

NDI_to_Dante_01

NDI_to_Dante_02

NDI_to_Dante_03

Select the desired Network

Activate/Deactivate Dante

Activate/Deactivate Dante to NDI

Select the number of Audio Channels between Stereo Pair and 6 Channels

Access to your device settings

Type your personal NDI Output name

Activate/Deactivate NDI to Dante

Select the number of Audio Channels between Stereo Pair and 6 Channels

Select your NDI source

IMPORTANT NOTES:

Ensure Internet connection

Install NDI Tools
click here

Install Dante Configuration
click here

