

LEITNER

H E A D S E T S



LH670/675





WHEN THE CALL COUNTS



CONTENTS

Understanding your...

Headset controls.....	4
Charging base	5
Indicator lights	6
Audio signals	7

How to...

Set up your headset	8
Make a call	11
Answer a call	12
Use UniBase® Technology.....	13
Control your volume	14
Activate auto-on feature	15
Turn on call control	15
Connect a 2nd headset for conference calls or training	16
Register a new primary headset	18


Troubleshooting & Frequently Asked Questions	19
--	----

Health and Safety Instructions	21
--------------------------------------	----




UNDERSTANDING YOUR HEADSET CONTROLS

- A** Speaker Volume Up & Mute
- B** Speaker Volume Down & Mute
- C** FocusLight
- D** Headset ON/OFF

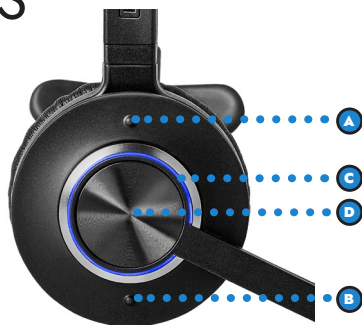

- E** Battery
- F** Battery Door

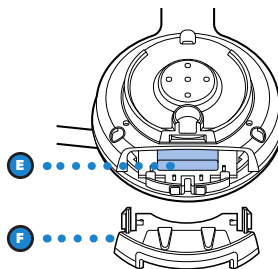

WHAT'S IN THE BOX

Headset
Charging Base
Lithium-Ion Battery

Battery Door
8.5v AC Adaptor
RJ-9 Phone Cord
Type C-to-A USB Cord




UNDERSTANDING YOUR CHARGING BASE

- 1 Battery Indicator
- 2 Computer Mode Button
- 3 Bluetooth Mode Button
- 4 Telephone Mode Button
- 5 Bluetooth Connection Light
- 6 Charging Cradle
- 7 USB Connector Port
- 8 Power Port
- 9 EHS and Handset Lifter Port
- 10 Telephone Connector Port
- 11 Handset Connector Port
- 12 Microphone Volume Up/Down
- 13 Accessory Selection Switch
- 14 Compatibility Switch



UNDERSTANDING THE INDICATOR LIGHTS

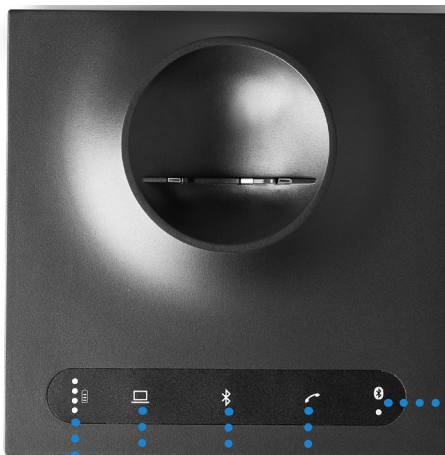

Battery Lights %

- 4 solid lights = 100% charge
- 3 solid / 1 flashing lights = 75% charge
- 2 solid / 2 flashing lights = 50% charge
- 1 solid / 3 flashing lights = 25% charge
- 4 flashing lights = less than 25% charge

Device Lights

- Telephone mode
- Bluetooth mode
- Computer mode
- Bluetooth connection light

UNDERSTANDING THE AUDIO SIGNALS

SOUND	WHAT IT MEANS
2 quick beeps (60 sec repeat)	Low battery
2 beeps	Nearly out of range
2 pitch tone	Out of range
2 rapid beeps	Back in range
1 beep	Receiver volume up/down
2 pitch tone (8 sec repeat)	Mute is on
1 beep	Mute off/on

When you walk out of range of the base, you will hear warning beeps in the headset. If the headset disconnects due to being out of range, the call will not drop. The headset will automatically reconnect when you are back in range.



NOTE: If you do not move back in range within 5 minutes, the call will disconnect.



HOW TO

SET UP YOUR HEADSET

- 1 Plug the power adaptor into the charging base. The power light on the base will light up. *We recommend charging your headset for at least 4 hours before use.*
- 2a **CONNECTING TO A TELEPHONE WITH A HEADSET JACK** Use the included connector cord to connect the telephone port on the base to the headset port on your desk phone. You may need to adjust the compatibility switch on the bottom of the base to find the correct setting for your phone model. Most phones use 1. Cisco phones should be set to 4 when using the headset jack.
- 2b **CONNECTING TO A TELEPHONE WITHOUT A HEADSET JACK** Connect the curly cord of your handset to the handset port on the charging base. Use the included connector cord to connect the telephone port on the the charging base to the handset jack on your desk phone. See 2a on using the compatibility switch.

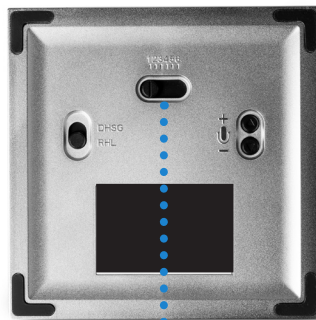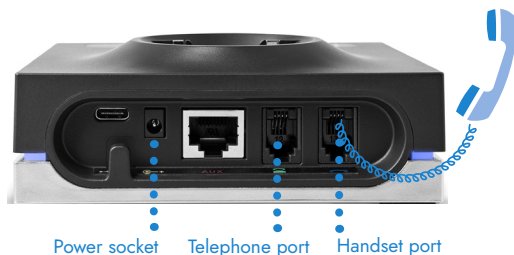

Compatibility switch

- 3** CONNECTING TO A LEITNER HANDSET LIFTER (OPTIONAL) Connect your headset to your desk phone as shown in Step 2b. Attach the handset lifter to your desk phone and connect it to the AUX port on the charging base. Set the accessory selection switch on the bottom of the base to RHL. See the included user guide or go to headsets.com/LifterSetup for more help.




- 4** CONNECTING TO A LEITNER ELECTRONIC HOOKSWITCH (EHS) CABLE (OPTIONAL)* Each office phone is a bit different so please refer to the EHS cable instructions for quick and easy setup.

* With a handset lifter or EHS cable connected, you'll be able to answer and end calls using the ON/OFF button on the headset—up to 350 feet away from your desk!

- 5** **CONNECTING TO YOUR COMPUTER** Use the included USB cable to connect the charging base to an available USB port on your computer. If your computer doesn't recognize the device after a minute, go to your sound settings and select "Leitner Headset" as both your default microphone and default speakers.



- 6** **CONNECTING TO BLUETOOTH** With your headset turned off, hold down the Bluetooth button (1) for three seconds until the light starts flashing. Make sure Bluetooth is enabled on the device you're trying to connect to. Select 'Leitner Headset' from the list of available devices (2). The light on your charging base will stop flashing once it's successfully connected.

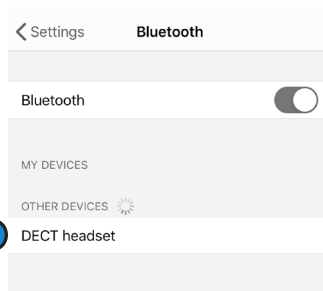

HOW TO

MAKE A CALL

- 1 Make sure the base is in the mode that you want to make the call on - Computer (1), Bluetooth (2), or Telephone (3)
- 2 Press the ON/OFF button (4).
- 3 Place your call on the device you are calling from.
- 4 Dial the number you're calling.
- 5 To end the call: Place the headset on the charging base or press the ON/OFF button (4). If you have a handset lifter or an EHS cable, the call will disconnect automatically from your landline phone. If not, then manually hang up the call from your telephone, computer, or Bluetooth device.



HOW TO

ANSWER A CALL

For incoming landline call:

- 1 Press the ON/OFF button (1) and make sure your base is in telephone mode (2).
- 2 Press the headset button on your phone. If your phone doesn't have a headset button, simply lift the handset to activate the call.*

If you have a handset lifter or EHS cable connected to the charging base, the line will be connected automatically.

For incoming Bluetooth call:

- 1 Press the ON/OFF button (1) and your call will connect automatically.

To end the call:

- 1 Press the ON/OFF button (1) or place the headset on the charging base.
- 2 Manually hang up the call from your landline phone or Bluetooth device.*

If you have a handset lifter or EHS cable connected to the charging base, the call will end automatically.



HOW TO

USE UNIBASE®

UniBase Technology allows you to conference calls between any two devices. Have a call on your cell phone and one on your landline? Conference them together with UniBase!

- 1 Begin a call on your first device.
- 2 Hold the mode button for the second device you want to add: Computer (1), Bluetooth (2) or Telephone (3).
- 3 After a few seconds, the mode button lights for the two selected devices will light up.
- 4 To exit UniBase mode, simply press the mode button of the device you want to stay on with.



Sounds from your computer will be shared automatically with the conference



HOW TO

CONTROL YOUR VOLUME

To adjust the headset listening volume:

While the headset is on, use the control buttons on the headset raise (1) or lower (2) the volume. The headset will beep each time the volume is adjusted.



To mute the headset microphone:


Press and hold either volume control button (1) or (2) for 2 seconds. While in mute mode, the FocusLight will turn purple on both the headset and base and the headset will beep every 60 seconds. To unmute, press and hold either volume control button for 2 seconds again.

To adjust the microphone volume:

Use the volume control buttons on the bottom of the headset base (3) or (4).

To adjust the ring detection volume:

If you're using a handset lifter or EHS cable, you'll hear a ring tone in your headset when you have an incoming call. While the headset is off, use the volume control buttons (1) or (2) on the headset to adjust the headset's ring tone and notification sound levels.

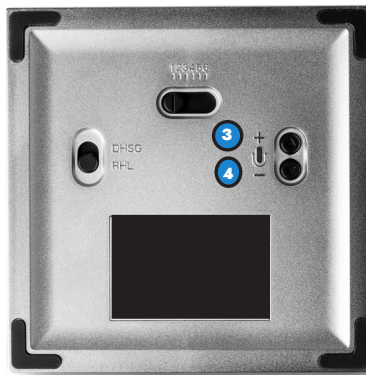

HOW TO

ACTIVATE AUTO-ON

Turn this feature on if you'd like your headset to turn on automatically when you pick up your headset off the charging base.

To turn this feature on: With your headset turned off, hold the + and – buttons on your headset together for three seconds. Once auto-on is activated, the light on your headset will flash *slowly*.

To turn this feature off: Follow the same steps again. This time the light on your headset will *quickly* flash.

HOW TO

TURN ON CALL CONTROL

Your Headset can answer and end Skype for Business calls directly from your headset.

To turn this feature on: Hold the up button (+) on the bottom of your charging base together with the Computer Mode button on the top of your base for three seconds. Your base will quickly flash 6 times to confirm.

To turn this feature back off: Hold the down button (–) on the bottom of your charging base together with the Computer Mode button on the top of your charging base for three seconds. Your base will flash 6 times to confirm.



HOW TO

CONNECT A SECONDARY HEADSET FOR

- 1 Turn on the primary headset.
- 2 With the secondary headset turned off, place the secondary headset on the charging base.*
- 3 After a moment, the secondary headset's FocusLight (2) will turn on and the charging base's FocusLight (3) will flash to show that the headset is registering with the base.
- 4 Once the registering has completed, the base's FocusLight (3) will stop flashing and the headset's FocusLight (2) will begin flashing.



TRAINING OR CONFERENCE CALLS

- 5 If the secondary headset has Auto-On enabled, it will automatically connect when you lift it from the base. If it has Auto-On disabled, press the ON/OFF button (1) on the headset to connect.

NOTE: The secondary headset will remain registered to the base until the primary headset is turned off or if either headset is returned to its original base. It takes about ten seconds for the secondary headset to re-register to its original base.

** Your Leitner headset can be conferenced with any single or dual-ear Leitner wireless headset*



HOW TO

REGISTER A NEW PRIMARY HEADSET

In the event that you need to replace your headset, you'll need to register it to your charging base

- 1 Set the headset into the charging cradle of the base.
- 2 The FocusLight on headset and the base will both flash purple when the headset goes into registration mode
- 3 Once the registration completes the FocusLight on the headset will turn off and the base light will turn solid blue
- 4 The headset will now be registered to the base. The whole process should take about 10 seconds or less.



TROUBLESHOOTING

- Q.** I don't have any battery lights on my headsets base and its been charging for more than 4 hours
- A.** Check the battery orientation inside of your headset. The arrow on the battery should be pointing into your headset and the Leitner Logo facing the buttons of the headset.
- Q.** My headset is charged and turned on but I can't hear anything
- A.** If you set up your headset through the headset jack, make sure your telephone's headset button is on. Check the compatibility switch underneath your base is set to 1. Most Cisco phones should be set to 4.
- Q.** My headset turns on and the lifter goes up but I'm not hearing anything in the headset
- A.** Ensure that the charging base is connected to the telephone's handset port and not the headset port (if the telephone has one).

For any and all other issues:

Call us at 1-800-432-3738, Monday through Friday 9am-7pm Eastern Time



TROUBLESHOOTING

Q. I can hear people on the phone but they can't hear me.

A. Try adjusting the microphone volume from the controls underneath the charging base. Call us at 1-800-432-3738 and we'll make sure you sound perfect!

Q. I can't get my headset to work with my computer.

A. Make sure the USB cord is connected between your charging base and computer. If your computer doesn't automatically recognize your headset, go to your computer's sound settings and make sure "Leitner Headset" is selected as your output and input device. Your sound settings can be found on most Windows computers by searching 'sound settings' in your search bar.

For any and all other issues:

Call us at 1-800-432-3738, Monday through Friday 9am-7pm Eastern Time



HEALTH AND SAFETY

It might seem a bit silly, but we're required to tell you these safety instructions about your Leitner headset. Please keep these instructions for your reference. When using this product, these basic safety precautions and warnings should be followed to reduce the risk of fire, electrical shock, injury to persons, and damage to property.

Operating, charging and storage temperatures are 32 °F to 104 °F (0 °C to 40 °C).

General Warnings

- Never allow children to play with the product; small parts may be a choking hazard.
- Do not disassemble the product or AC adaptor as this may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock or fire when the product is subsequently used.
- Do not insert anything into the product because this may cause damage to the internal components or cause personal injury.
- Avoid contact with liquids. Do not locate this product near water, for example, near a bathtub, or sink, in a wet basement, or near a swimming pool.



- Discontinue use of product if the product overheats, has a damaged cord or plug, if the product has been dropped or damaged, or if the product has come into contact with liquids.
- This product should never be placed over or near a heat source and should not be placed in locations which do not have proper ventilation.
- If you experience skin irritation after using this product, discontinue use.

Charging Warnings

- Use only the charger provided with your headset to charge the product. Do not use the charger for any other purpose. Ensure that the voltage rating corresponds to the power supply you intend to use.
- Charge the headset according to the instructions supplied with the unit.
- Plug the AC adaptor or charger into an outlet that is near the equipment and will be easily accessible.



Headset Battery Warnings

- The headset is equipped with a replaceable battery. To reduce the risk of fire or injury to persons read and follow these instructions.
- Do not dispose of the battery in a fire. The battery may explode. Check your local laws for disposal instructions.
- Do not open or mutilate the battery. There may be corrosive materials which can cause damage to eyes or skin and may be toxic if swallowed.
- Never charge the battery where the temperature may fall below 32 °F (0 °C) or rise above 104 °F (40 °C).

***RECYCLING:** Your battery used in the headset must be recycled or disposed of properly. Contact your local recycling center for proper disposal of your headset battery.*

To Protect Your Hearing

- Set the volume control in a low position before putting your headset on your ear and use as low volume as possible.
- Avoid turning up the volume to block out noisy surroundings.
- Limit the amount of time you use headsets at high volume levels.
- Turn the volume down if the sound from the headset prevents you from hearing people speaking near you.





For live product support

1-800-432-3738

Mon-Fri 9am-7pm Eastern Time

www.leitnerheadsets.com

