

N1F PRO

Portable Monitor Quick Start Guide



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Thank you for choosing Innocn® !

We hope the Innocn® product you purchased will serve you well. To ensure safety and trouble-free operation of your device, please read the user guide carefully and keep it for future needs.

Please email us for customer service & technical support at ✉ service@innocn.com.

We recommend you go online to our homepage for the most up-to-date guidance for your product.
registering Innocn membership; referring to warranty information.

🌐 <http://www.innocn.com>



Safety Precautions

1. Read all warnings and follow all instructions. Keep this user guide for later reference.
2. Do not use this device near water. To reduce the risk of fire or electric shock, do not expose the device to moisture.
3. Do not place the device on an uneven or unstable surface. The device may fall over resulting in an injury or malfunction.
4. Avoid exposing the device to direct sunlight or other sources of sustained heat.
5. Always use genuine INNOCN components to ensure safety and product performance.
6. To avoid the risk of electric shock or component damage, switch off the power before connecting other components to the display.
7. Disconnect the power plug from the AC outlet if the device will not be used for a long period of time.
8. When connecting to a power outlet, DO NOT remove the grounding prong. Please ensure grounding prongs are NEVER REMOVED.
9. Place the device in a well-ventilated area. Do not place anything on the device that prevents heat dissipation.
10. The power adaptor must be replaced when using different voltage from that specified in the User Guide. For more information, please contact us.
11. Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
12. Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
13. Plastic bags can be dangerous. Keep plastic bags away from babies and children to avoid danger of suffocation.
14. Do not attempt to repair the product by yourself. Opening the back cover may expose you to high voltages, the risk of electric shock, and other hazards. If repair is required, please contact us anytime. (service@innocn.com)
15. If there are visual smoke or sparks, unplug the power cord and contact us (service@innocn.com). Do not try to repair the product yourself.
16. To avoid risk of electric shock, do not touch the power plug and ports with wet hands.

Table of Contents

Packaging List	4
Product Instruction	4
Key Instruction	4
Input Connector	5
OSD(On-Screen Display) Menu	6
Troubleshooting(FAQ)	11
Product Specification	12
Warranty Information	13

Packaging List



Monitor x1



Mini HDMI cable x1



Type-C data cable x1



Charger x1



 
USB Type-C power cable x1



Quick Start Guide

Product Instruction


Key Instruction

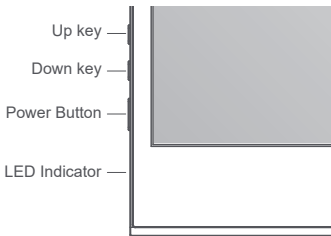

1	Power Button: Blue: On Red: No input signal / Standby mode Dark: Off
2	LED Indicator: Press it once to pop up the navigation interface Press it twice to select signal source Long press the power button to turn the monitor on/off
3	Up Key: Press it once to pop up the navigation interface Press it twice to adjust brightness Long press the Up key to adjust volume
4	Down Key: Press it once to pop up the navigation interface Press it twice to enter the OSD menu

Product Instruction

 Input Connector

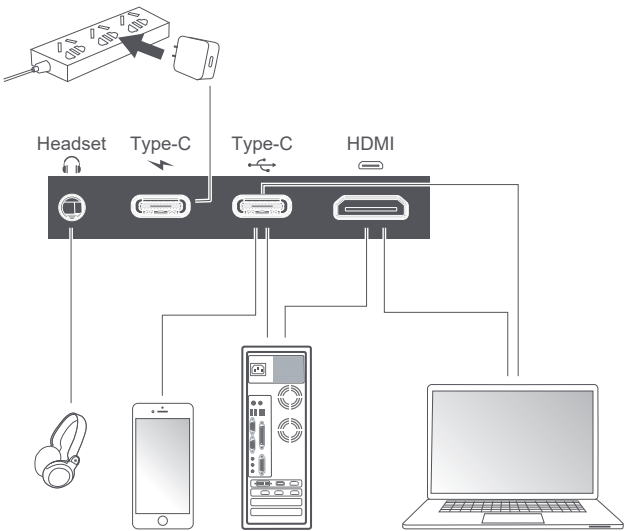

1. Connect the Type-C data cable to the data port of the monitor  and the Laptop/Phone
2. Connect the Type-C power cable to the power port of the monitor  and the Charger.

Notes:

1. The monitor is touchable only when the input source is from USB Type-C; for HDMI input source, you need a USB-A to USB Type-C cable(not included) connected to use the touch function.
2. If the cable is damaged, please replace with new Innocn cable.

 
OSD(On-Screen Display) Menu

1. Press any key to pop up the navigation interface.
2. Press the Up key to enter brightness Adjustment; press the Down key to enter OSD menu; press the Power button to enter signal source selection.




Press the Up key twice: Pop up the brightness adjustment window

- Press the Up/Down key to adjust the brightness
- Press the Power button to enter and exit.
- The window disappears when it is not operated for 3S.

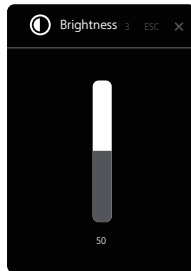


Press the Power button twice: Pop up the signal switch window

 - Press the Up/Down key to select signal input.
- Press the Power button to enter and exit.
- The window disappears when it is not operated for 3S.

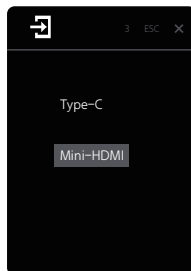


Press the Down key twice: Enter the OSD menu.

 - Press the Up/Down key to switch the options.
- Press the Power button to enter the next-level menu. Press it to select final option and return to previous level.
- The window disappears when it is not operated for 5S.

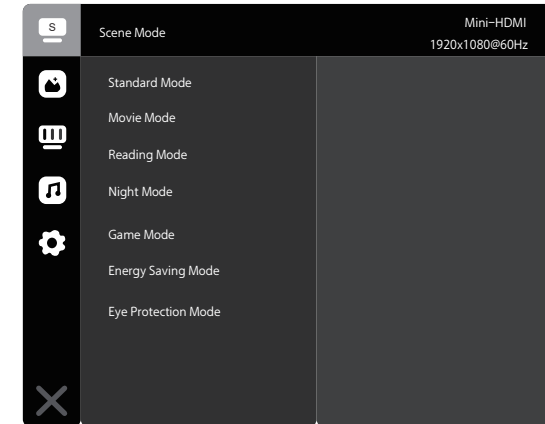


Scene Mode: Switch the specified mode.

 - Press the Up/Down key to switch the options.
- Press the Power button to enter the next-level menu. Press it to select final option and return to previous level.
- The window disappears when it is not operated for 5S.

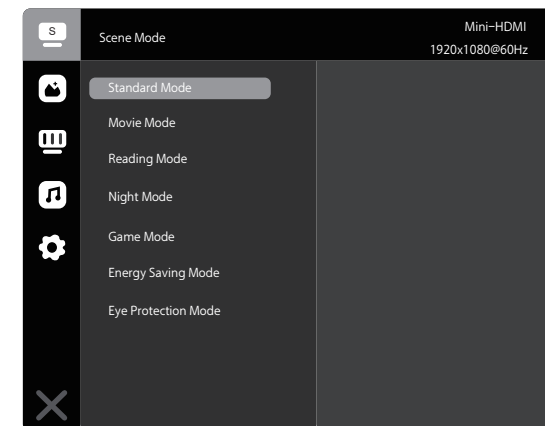

Picture Setting: Image setting, adjust the brightness and color etc.

 - Press the Up/Down key to switch the options.
- Press the Power button to enter the next-level menu. Press it to select final option and return to previous level.
- The window disappears when it is not operated for 5S.

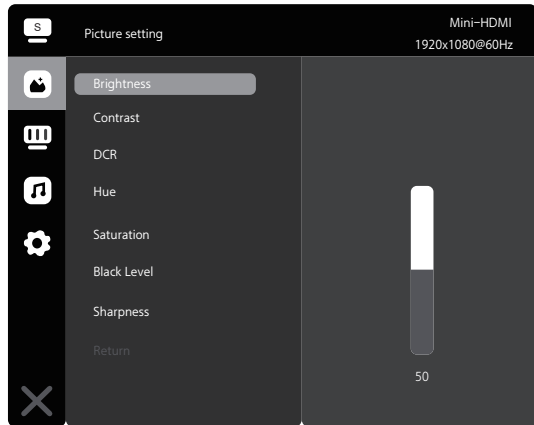


Color Temperature Setting: Adjust the color temperature warm\cold\design color temperature, corresponding color temperature (7000K\9300K\5700K)

- Press the Up/Down key to switch the options.
- Press the Power button to enter the next level if it is available. Press it to select final option and return to previous level.

For example: In User mode, there's next option. Press the Power button to enter the Red/Green/Blue option, press the Power button again to adjust the brightness bar. Then press the button again to enter and return to the previous Red/Green/Blue list.

 - The window disappears when it is not operated for 5S.

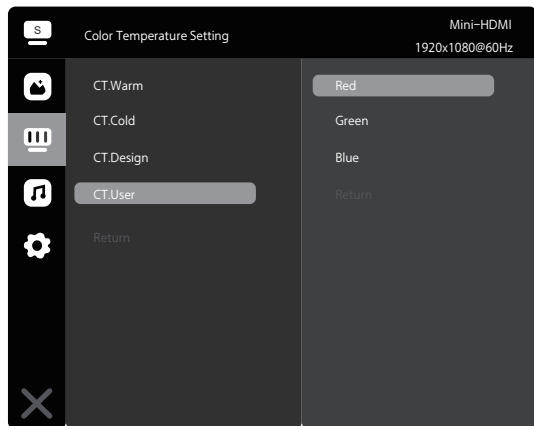


Audio Setting: Adjust volume/mute

- Press the Up/Down key to switch the options.
- Press the Power button to enter the next level if it is available. Press it to select final option and return to Previous level.

For example: When the Volume has the next level, press the Power button to enter the volume bar, press the Power button again to enter and return to the previous level.

 - The window disappears when it is not operated for 5S.

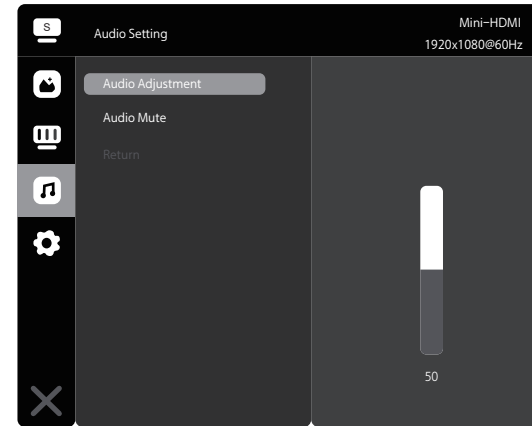


OSD Setting: language selection, display time setting, Over drive, restore to factory setting etc.

- Press the Up/Down key to switch the options.
- Press the Power button to enter the next level if it is available. Press it to select final option and return to previous level.

For example: The Language Setting has the next level. Press the Power button to enter language option, press the Power button again to select and return.

 
- The window disappears when it is not operated for 5S.

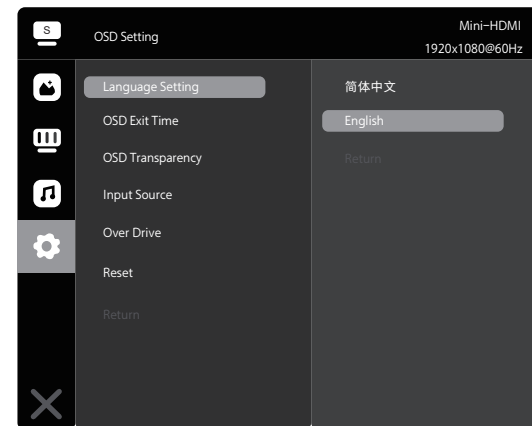

Exit: Exit the menu (two methods)

1. The window disappears when it is not operated for 5S.

 2. For example: If entering to level-3 menu → press Power button → return to previous menu → press Up/Down key to select (return) → return to first level interface → "x" close the menu

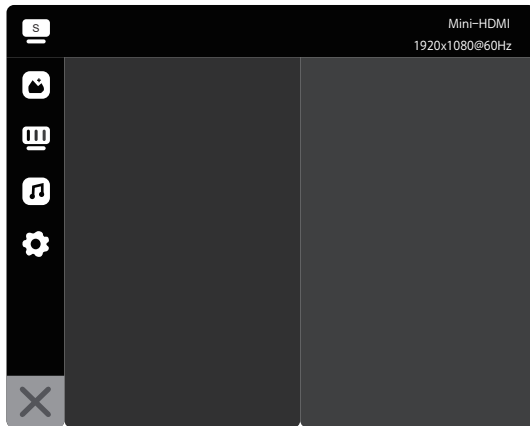

Troubleshooting

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	Possible Solutions
No display after turning monitor ON (screen is black but power supply lights is ON)	• Ensure that the video cable connecting the monitor and the computer is properly connected and secure. • Make sure if the operating system had entered hibernation, sleep or power-save mode. Press any key (Enter key / Power key) or move the mouse to wake it up. • Check for bent or broken pins in the video cable connector. • Ensure that the correct input source is selected in the Input Source menu. • Replace other identical signal cable (HDMI / Type-C) to take cross-test. Attention: Not every computer/phone 's USB Type-C port will support video out signals. Please check your cable and your computer/phone to make sure those will support a video signal.
No display after turning monitor ON (not boot, black screen & no power lights)	• Verify that the power outlet is functioning properly using any other electrical equipment. • Make sure the power button is pressed fully and hold for 5s.
Missing Pixels. LCD screen has spots	• Cycle power On-Off. • Pixel that is permanently Off is a natural defect that can occur in LCD technology. • For more information on Innocn Monitor Quality and Pixel Policy, see Innocn warranty information at: http://www.innocn.com.
Safety Related Issues (Visible signs of smoke or sparks)	• Do not perform any troubleshooting steps. • Contact Innocn immediately.
Image does not fill entire viewing area.	• Check the resolution setting in your PC.
The screen appears yellow	• Make sure the device was not set to "Eyes Care mode" • Check here:  → Eye Protection Mode
Control panel keys do not work	• Press only one key at a time. • Make sure to have a valid video signal going through the monitor before you can turn on the OSD.
I cannot adjust the brightness/ contrast ratio/ color saturation through OSD	• Make sure the device was set to "User mode" • Check here:  → CT.User

Product Specification

Product Name	INNOCN 15.6" portable monitor
Product Model	N1F PRO
Screen Size	15.6"
Screen Type	IPS
Resolution	1920*1080
Brightness (Typ.)	420±20 cd/m²
Touchable	Yes
Speaker	2*1W
Refresh Rate	60Hz
Color Gamut	100% sRGB
Display Colors	16.7M (8bits)
Contrast (Typ.)	1500:1
Digital Input	Type-C*2、Mini HDMI*1、Audio out*1
Phys. Dimension	362*240mm
Phys. Thickness	6.4mm
Net weight	1060g
Voltage Rating	DC 20V== 1.5A
Operating Temp.	0°C~45°C

Warranty Information

1. What is covered in your warranty?

Item	Warranty term
Monitor	3 Years
Panel	1 Years
Battery	1 Years

2. Contact us

Service Email	service@innocn.com
Service Website	http://www.innocn.com

3.Members only

Signing up to become our members, to exchange new one without repair in one year.

Register website	https://www.innocn.com/user/register
QR code	

4. This Warranty is not applicable:

- 1.The product is not purchased from an Authorized Innocn dealer.
- 2.The product is not used according to instructions given in the instruction manual.
- 3.Defects caused by improper use as determined by company personnel.
- 4.Modification or alteration of any nature is made in the electrical circuitry / or physical construction of the set.
- 5.Installation / repair work is carried out by persons / agency other than authorized by the company.
- 6.The original serial number is removed, obliterated or altered from the machine or cabinet.
- 7.Accidents, Acts of God, lightning, water, fire, public disturbances, improper ventilation, voltage fluctuations or any cause beyond the control of Innocn.

物料号码	108.007.15003		
厂内型号	15N1F-A	厂外型号	N1F PRO
物料名称	QSG	品 牌	INNOCN
协力厂商		日 期	2021.08.26
规 格	140*197mm		
要 求	105g哑粉纸，骑马钉，单色印刷		
版 本	V01	设 计	梁丽
确 认		核 准	

备注：页码统一朝外

变更list:

- 1. 删除三包凭证，擦镜布
- 2. P13保修说明

