



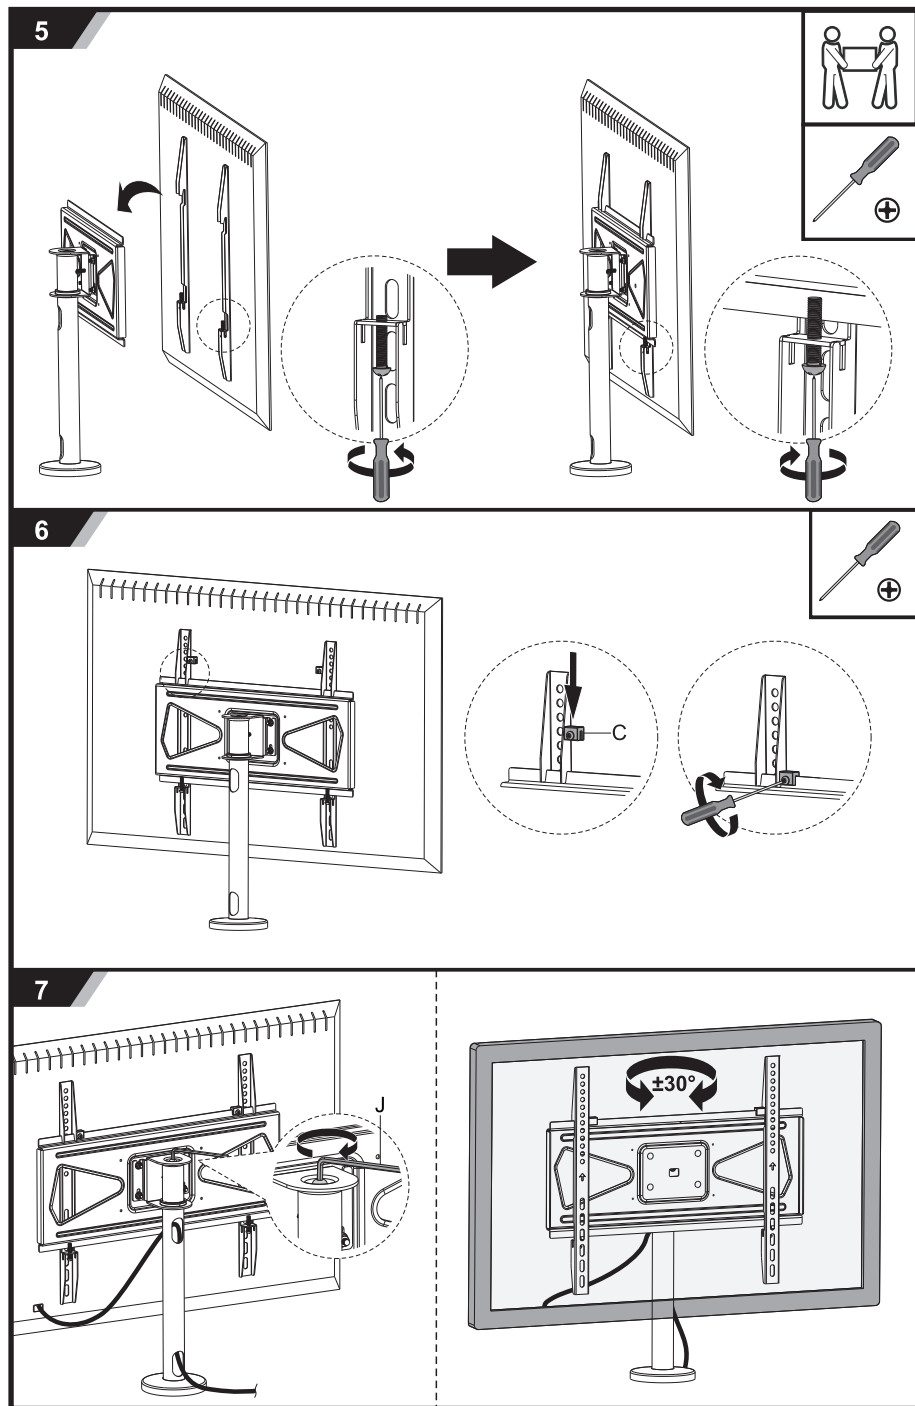

 
 
 

nedis

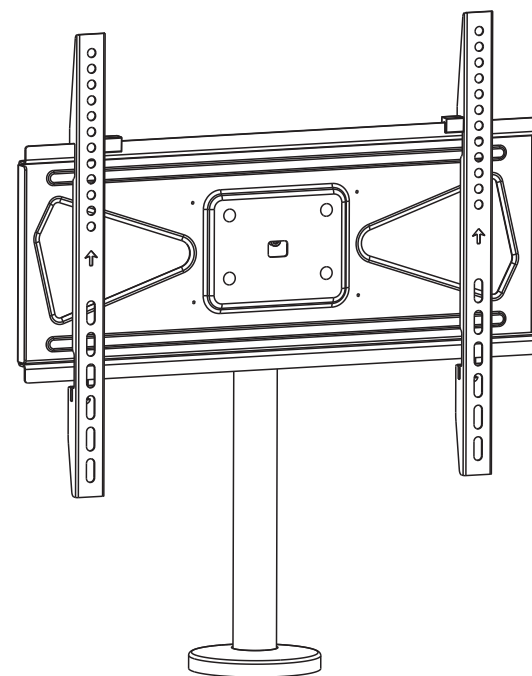

DESKTOP TV MOUNT

ASSEMBLY INSTRUCTIONS

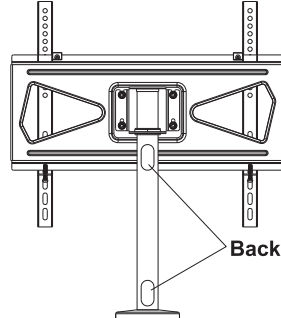

 A (x1)	 B (x2)	 C (x2)	 D (x1)
 M6x16 (x4) E	 M6x4 F	 M6x25 (x4) G	 M6x30 (x4) H
 I (x1)	 J (x1)		
 M5x14 (x4) M-A	 M6x14 (x4) M-B	 M6x30 (x4) M-C	 M8x30 (x4) M-D
 M8x50 (x4) M-E	 M-F (x4)	 M-G (x8)	 M-H (x8)
Note: Before installation, please make sure the front side face toward the viewing direction. Otherwise, you will find the TV difficult to adjust. 			
1 