



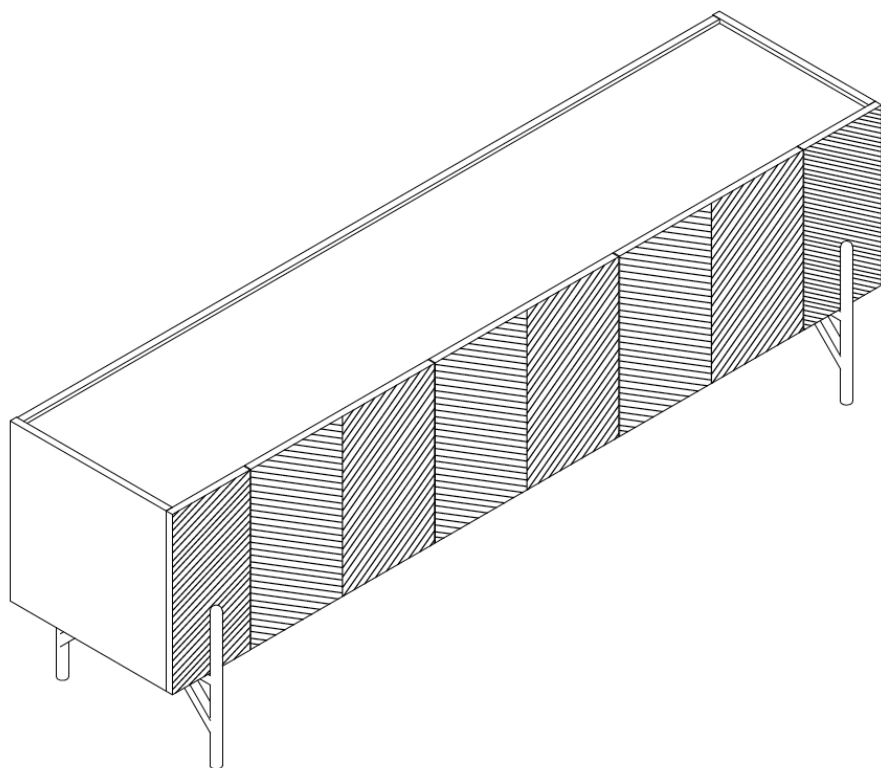

RIO ENTERTAINMENT UNIT

SLRIOENTUOA & SLRIOENTUWA




COMPONENTS

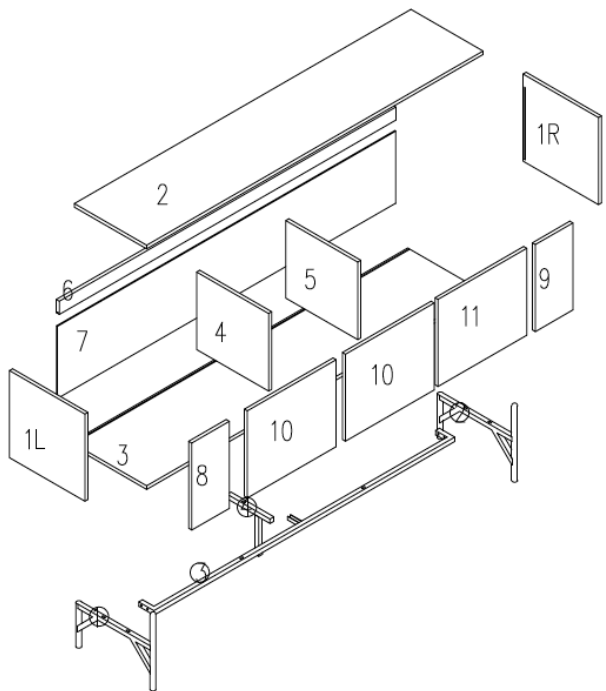

Parts list

NO	SIZE	CARTON NO.	NO	SIZE	CARTON NO.
1	396x396x16 (x2)	2-2	7	1778x328x5 (x1)	2-1
2	1768x379x16 (x1)	2-1	8	396x197x16 (x1)	2-2
3	1768x396x16 (x1)	2-1	9	396x197x16 (x1)	2-2
4	353x379x16 (x1)	2-2	10	396x465x16 (x2)	2-2
5	353x379x16 (x1)	2-2	11	396x465x16 (x1)	2-2
6	1768x60x16 (x1)	2-1			

 Hardware

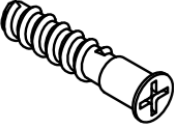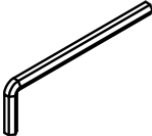			
A Cam Bolt (x26)	B Cam Connector (x26)	C Dowel (x24)	D M7x50mm Bolt (x3)
			
E Allen Key	F M6x25 Screw (x2)	G M6x30 (x11)	H M6x16 (x2)
			
I Flat Hinge (x4)	J Bent Hinge (x2)		



Note:

This product includes two different types of hinges. Ensure the correct ones are used during assembly.

ASSEMBLY


Step 1:


Attach the two legs **(1)** & **(2)** to the centre support **(3)** using the four M6x30 Screws **(G)**.

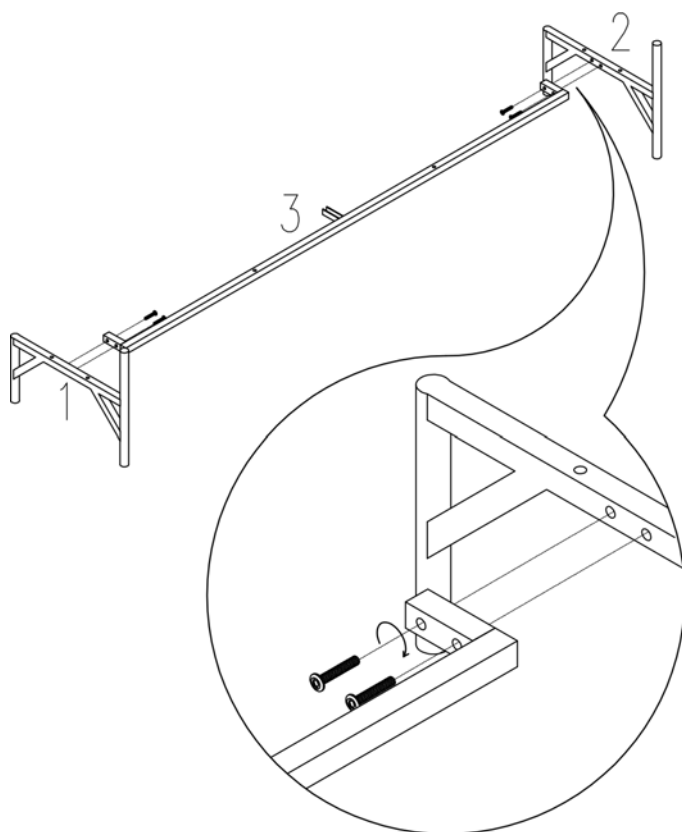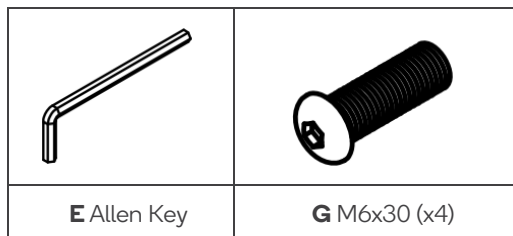

Step 2:

Attach the centre leg **(4)** to the centre support **(3)** using the two M6x16 Screws **(H)**.

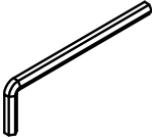	
E Allen Key	H M6x16 (x2)

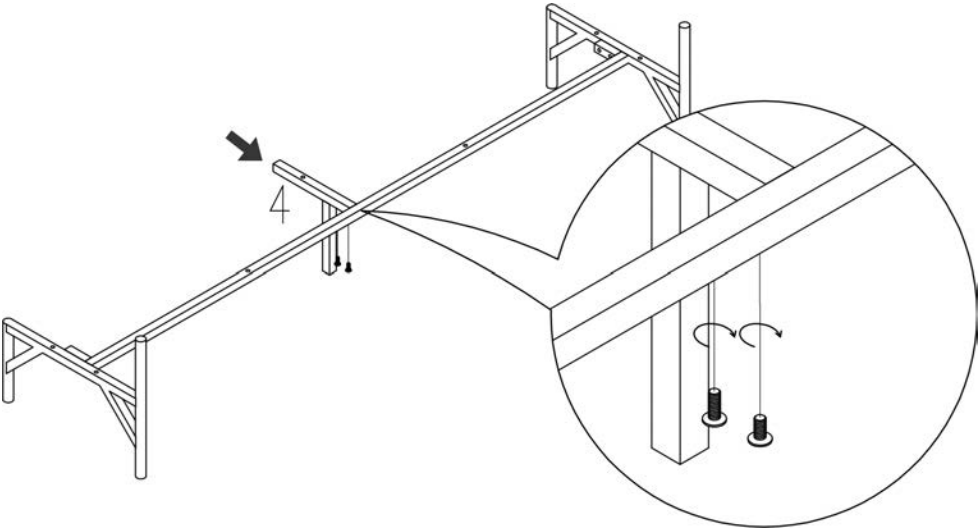


Step 3:

Insert eight Cam Bolts **(A)** and eight Dowels **(C)** into parts **(2)** & **(3)** in the locations shown below.

Important: Ensure the Dowels **(C)** are placed in the inner holes and the Cam Bolts **(A)** are in the outer holes.

	
A Cam Bolt (x8)	C Dowel (x8)

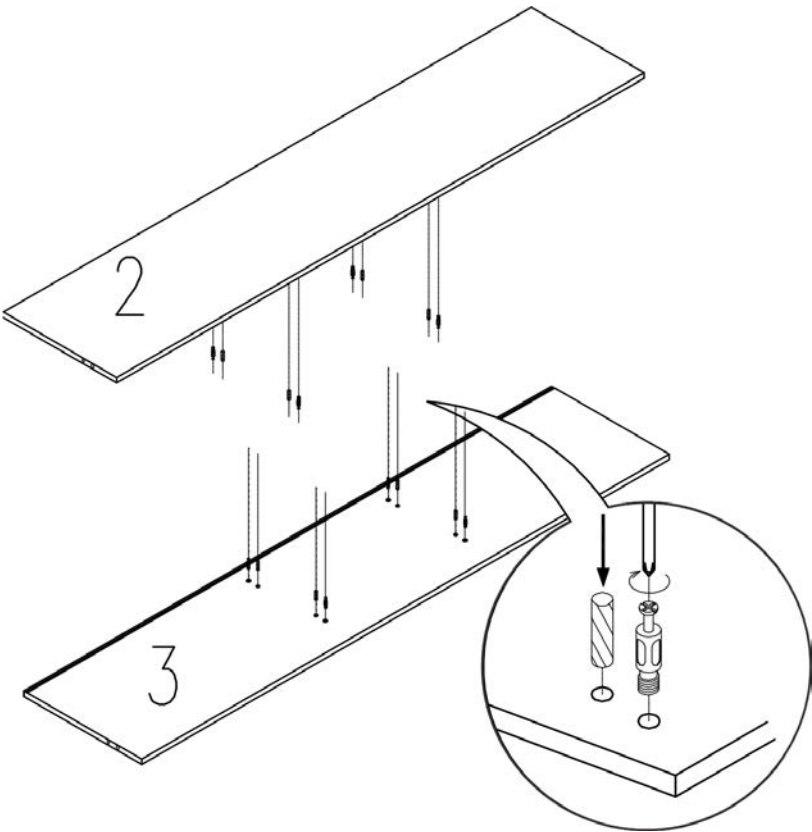

Step 4:


- Insert eight Cam Connectors **(B)** into all the holes adjacent to the corresponding Cam Bolts.

Note: Ensure the arrow on the Cam Connector **(B)** is facing the direction of the hole.

- Attach parts **(2)**, **(3)**, **(4)** & **(5)** together by screwing the Cam Connectors **(B)** clockwise.




B Cam Connector (x8)

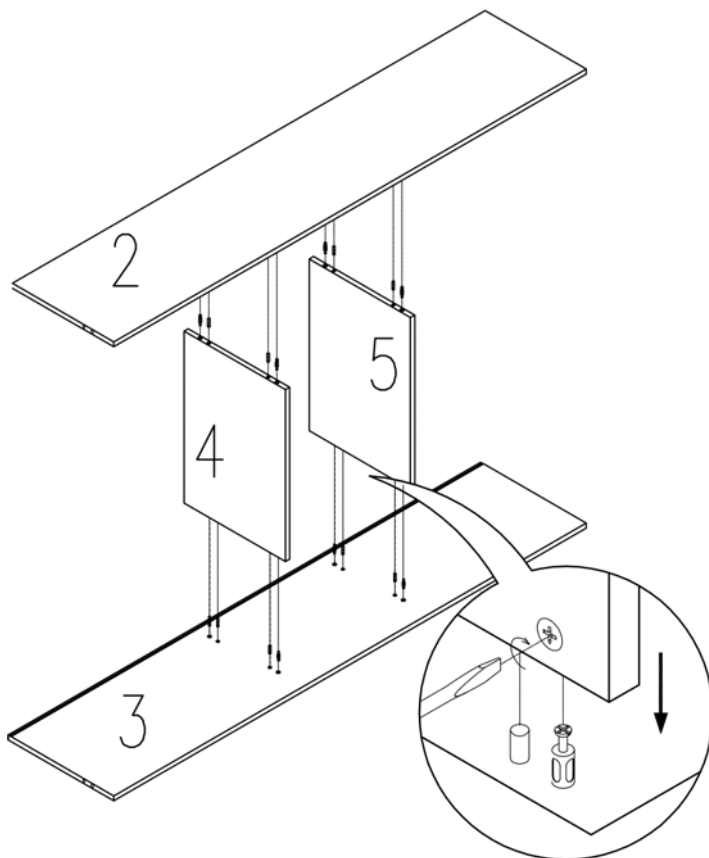

Step 5:

Insert 10 Cam Bolts **(A)** and 10 Dowels **(C)** into parts **(1L)** & **(1R)** in the locations shown below.

	
A Cam Bolt (x10)	C Dowel (x10)

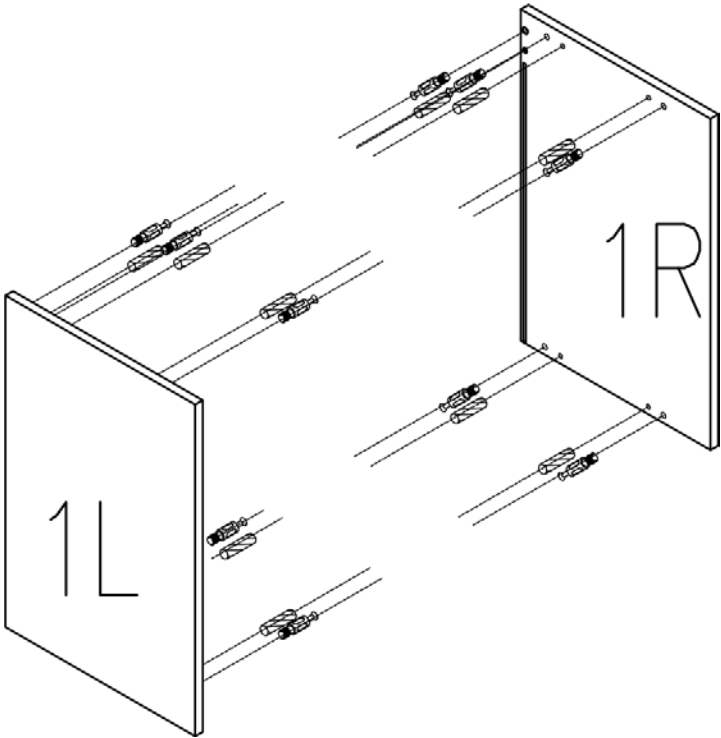

Step 6:


- Insert 10 Cam Connectors **(B)** into all the holes adjacent to the corresponding Cam Bolts.

Note: Ensure the arrow on the Cam Connector **(B)** is facing the direction of the hole.

- Attach parts **(1L)**, **(1R)**, **(6)** & **(7)** to the assembled frame by screwing the Cam Connectors **(B)** clockwise.



B Cam Connector (x10)


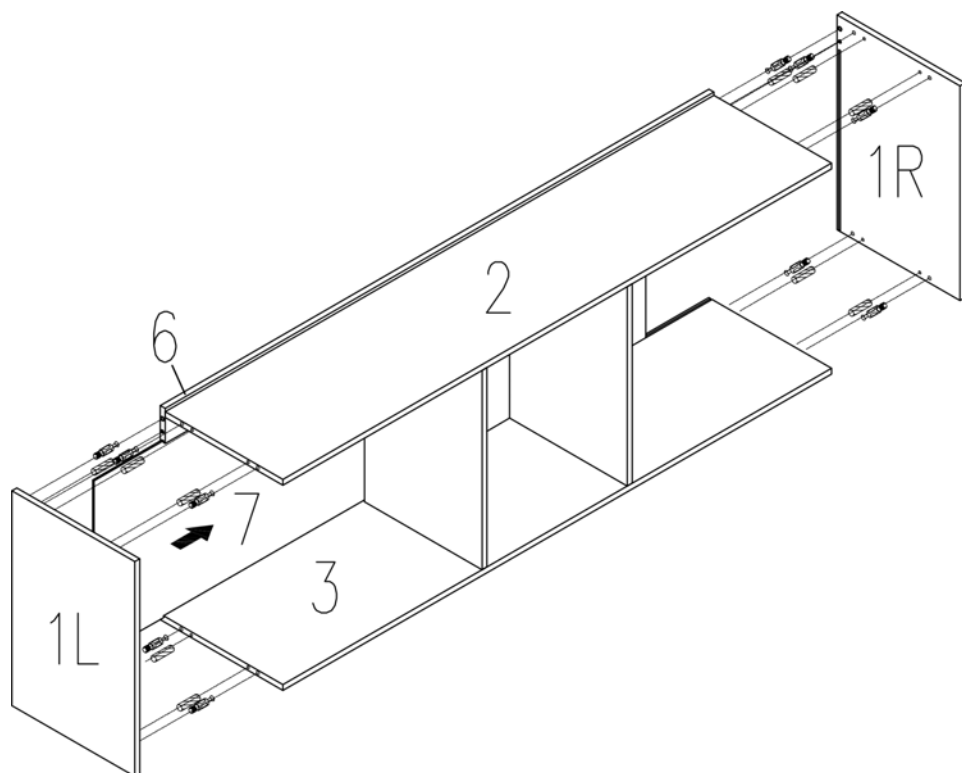


Step 7:

- Secure the two Flat Hinges (**H**) to parts **(8)** & **(10)** using the included hinge fasteners.

IMPORTANT: Ensure only the Flat Hinges (**I**) are used in this step. The Bent Hinges (**J**) will not fit.

- Repeat with parts **(9)** and **(11)**.

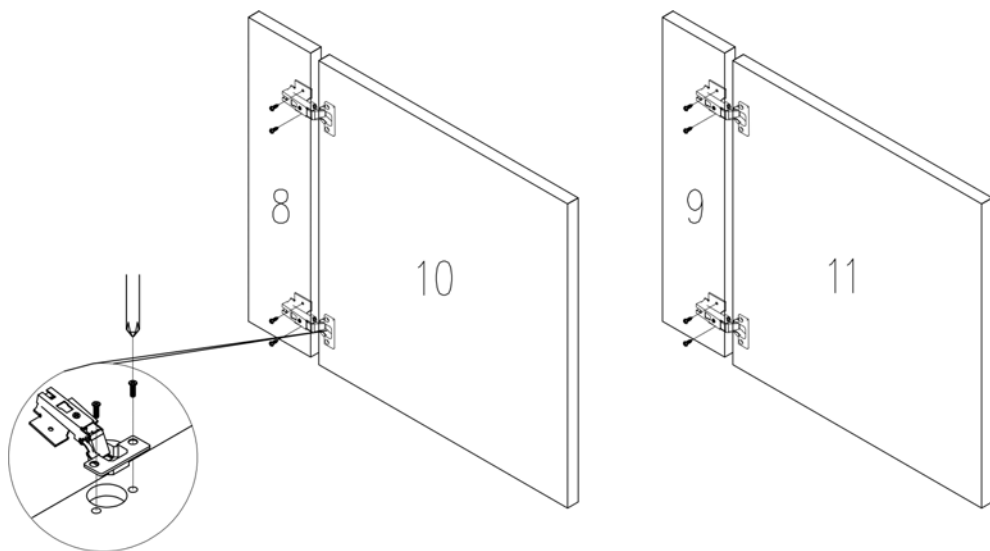
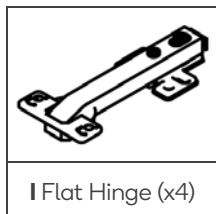


Step 8:

- Insert eight Cam Bolts **(A)** and six Dowels **(C)** into parts **(8)** & **(9)** in the locations shown below.
- Insert eight Cam Connectors **(B)** into all the holes adjacent to the corresponding Cam Bolt **(A)**.


Note: Ensure the arrow on the Cam Connector **(B)** is facing the direction of the hole.

- Secure parts **(8)** & **(9)** to the entertainment unit assembly by screwing the Cam Connectors **(B)** clockwise.

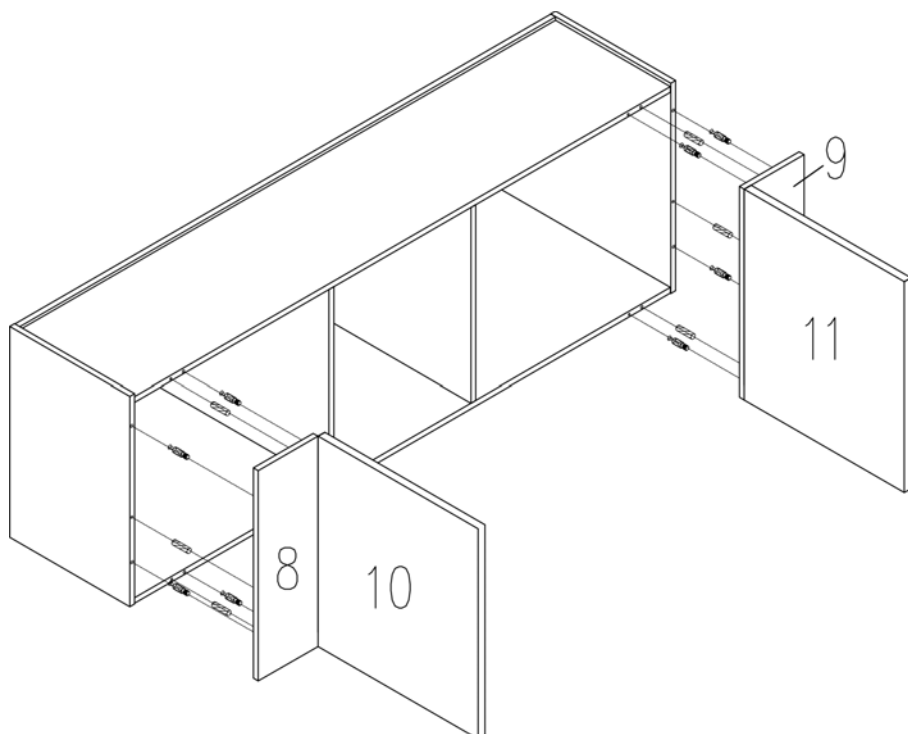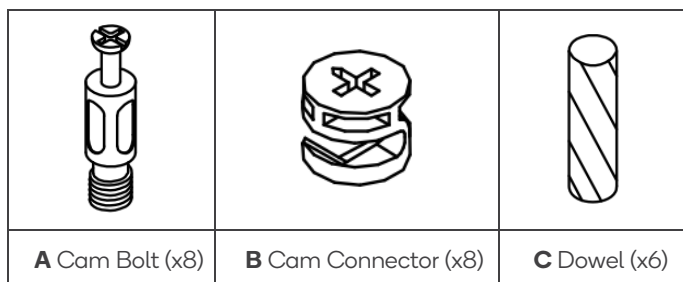



Step 9:

Secure the legs to the underside of the entertainment unit using the seven M6x30 Hex Screws (G).

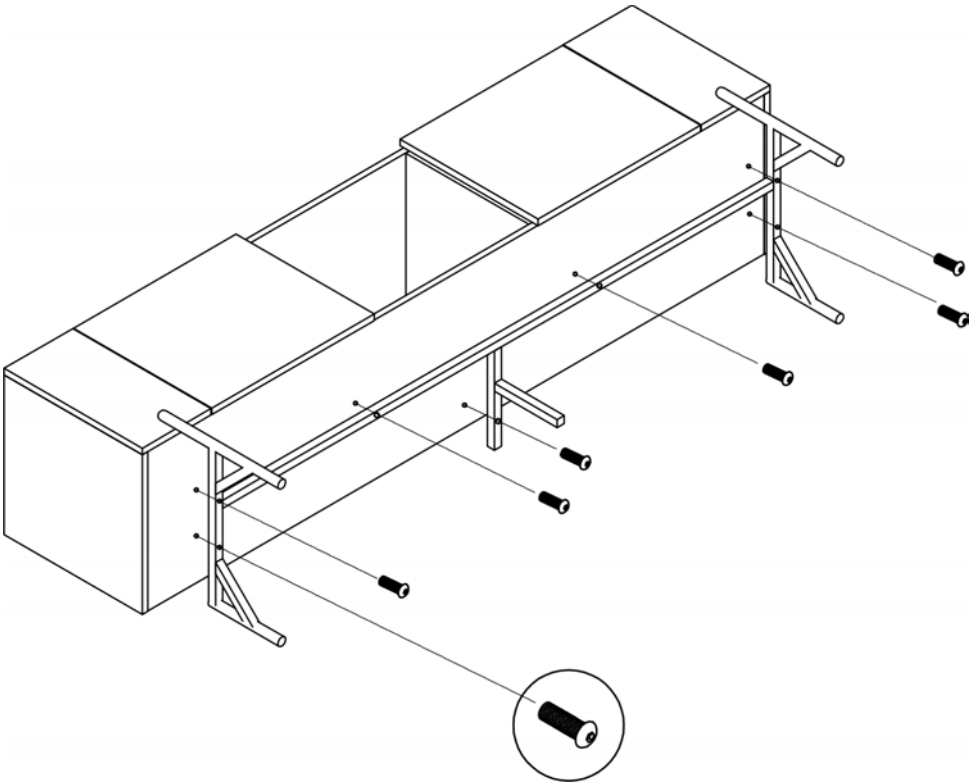



Step 10:

Secure the legs in place using the two M6x25 Screws (**F**) from inside the entertainment unit.

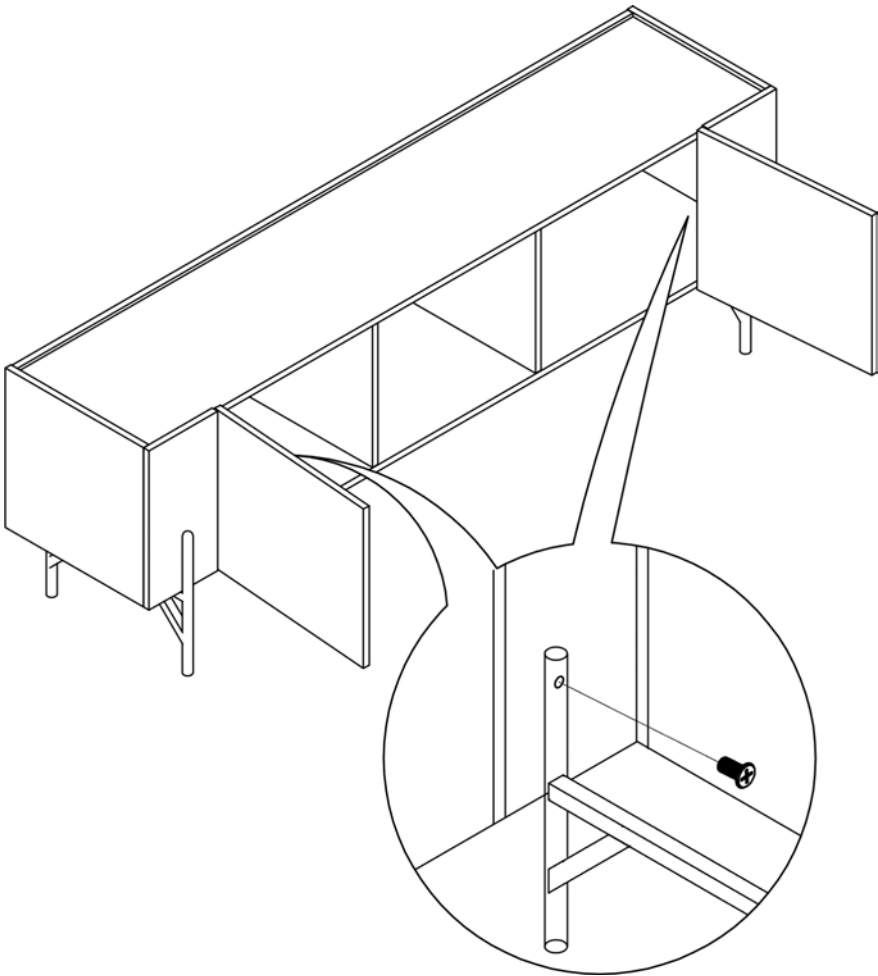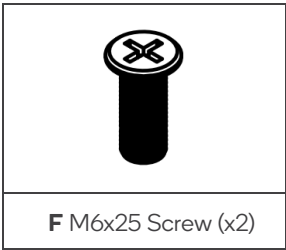



Step 11:

Insert the three M7x50 Screws **(D)** in the rear of the entertainment unit.

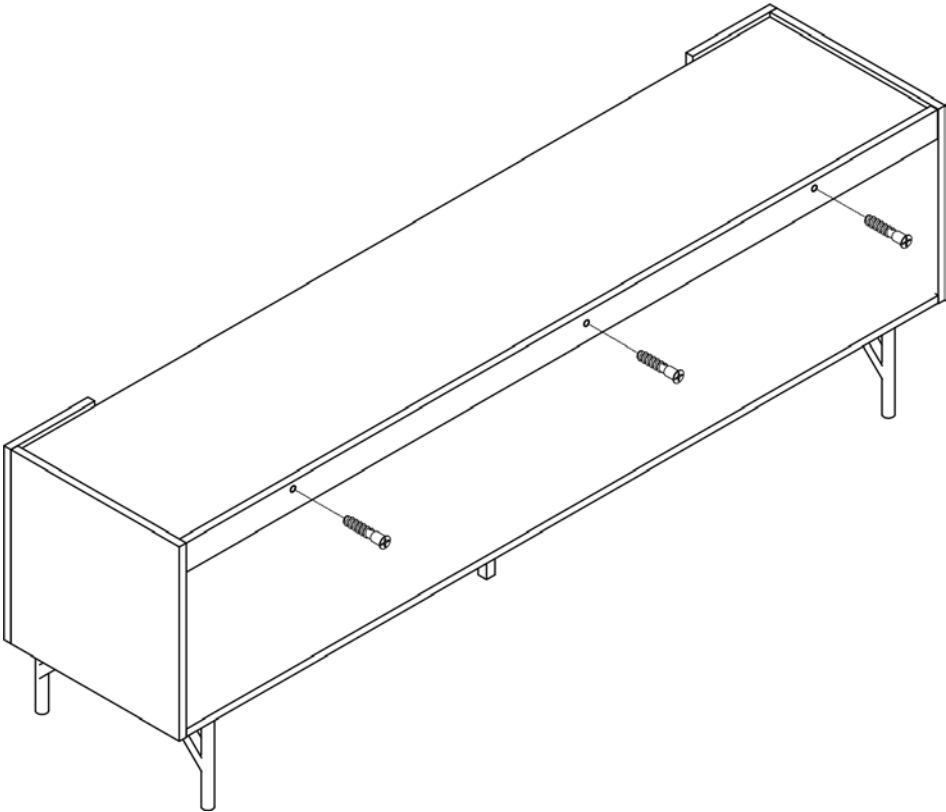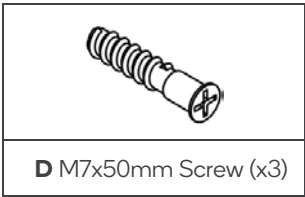


Step 12:

Secure part **(10)** to the entertainment unit assembly using the two Bent Hinges **(J)** and the included hinge fasteners.

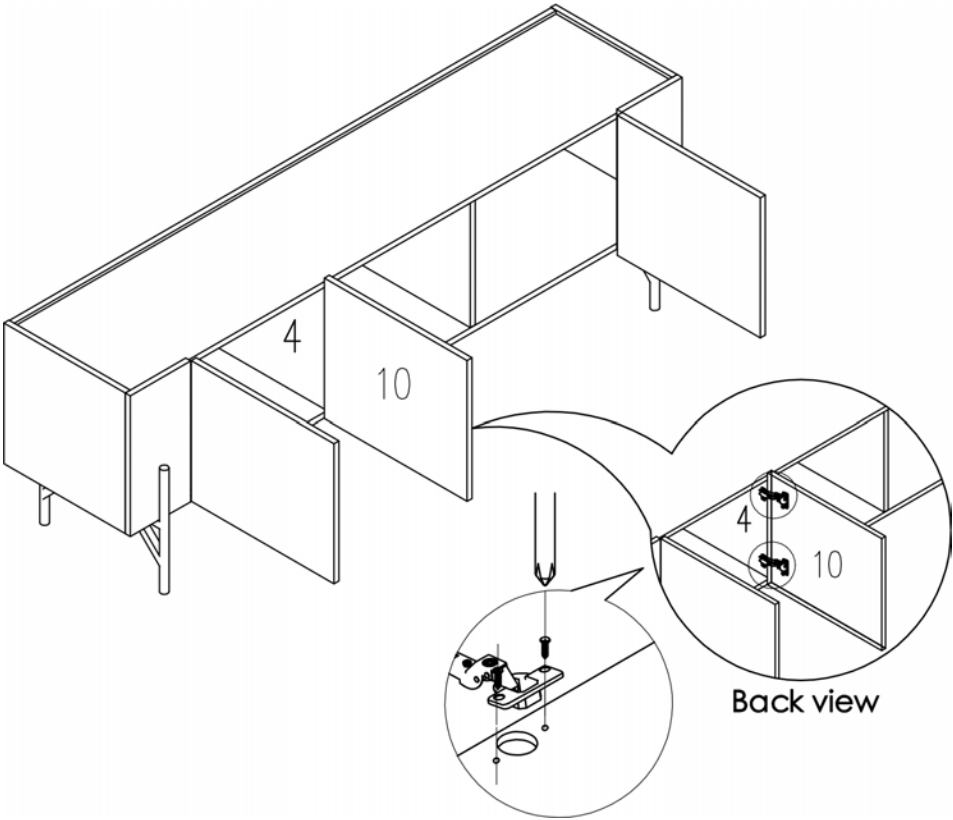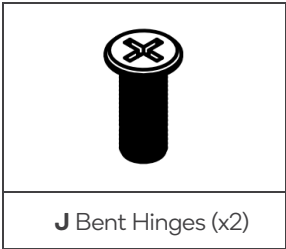

Adjustments

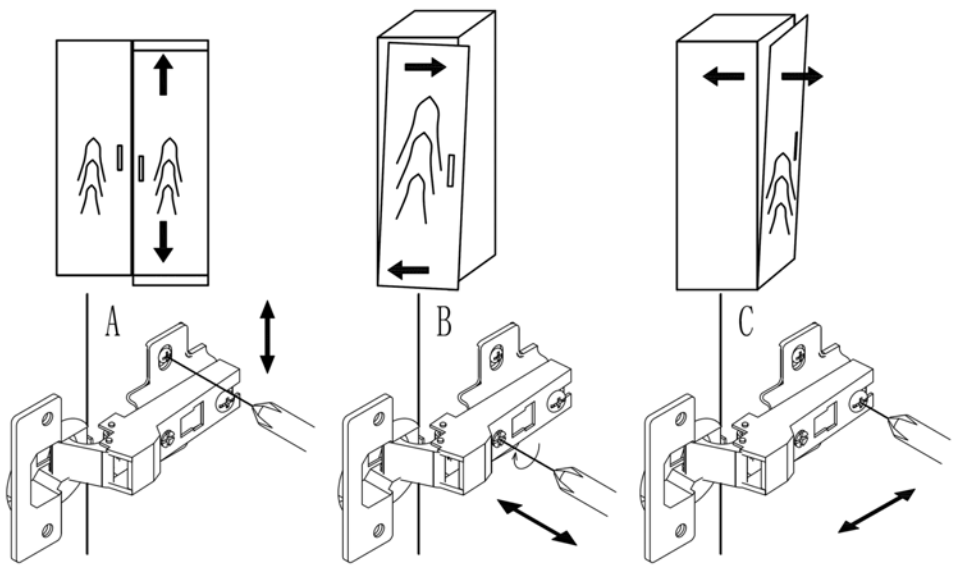

Adjust door up and down using screw A

Adjust door left and right using screw B

Adjust door and back using screw C

Assembly Completed

NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com