


Dell Wyse Cloud Client

Wyse 3030

Quick Start Guide




1 Install the vertical stand or the VESA mount

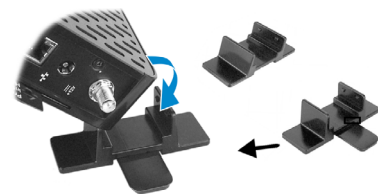


Vertical stand

Or

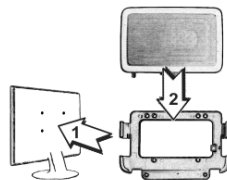


VESA mount

2 Connect the keyboard and mouse

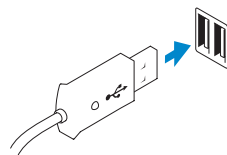


USB connector

 3 Connect the network




Network connector

Or

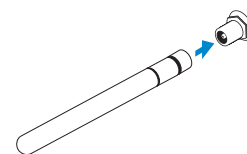

Wireless antenna

Or

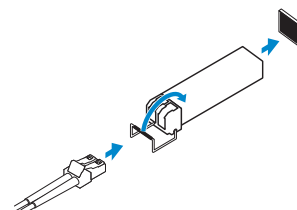

Fiber SFP module

NOTE: To remove the Fibre SFP module, rotate the latch and unplug it from its slot.

Product support and manuals

Contact Dell

Regulatory and safety

Regulatory model

Computer model

dell.com/support

dell.com/support/manuals

dell.com/contactdell

dell.com/regulatory_compliance

N03D

Dell Wyse Cloud Client
Wyse 3030




0KX0J8A00

© 2015 Dell Inc.


Printed in China.
2015-05

4 Connect the display

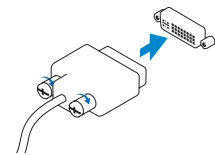


DVI-I connector

Or

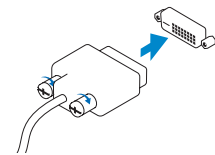


DVI-D connector

Or

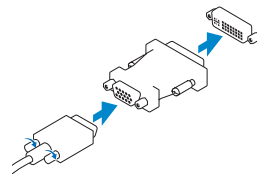


VGA adapter

5 Connect the power cable on your client device and display

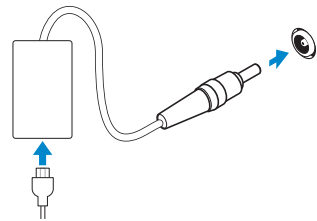

Client device power connector

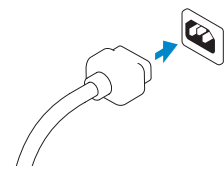


Display power connector

NOTE: Your client device is ready to use when the client device activity light goes off.

6 Turn on your client device and display

Features

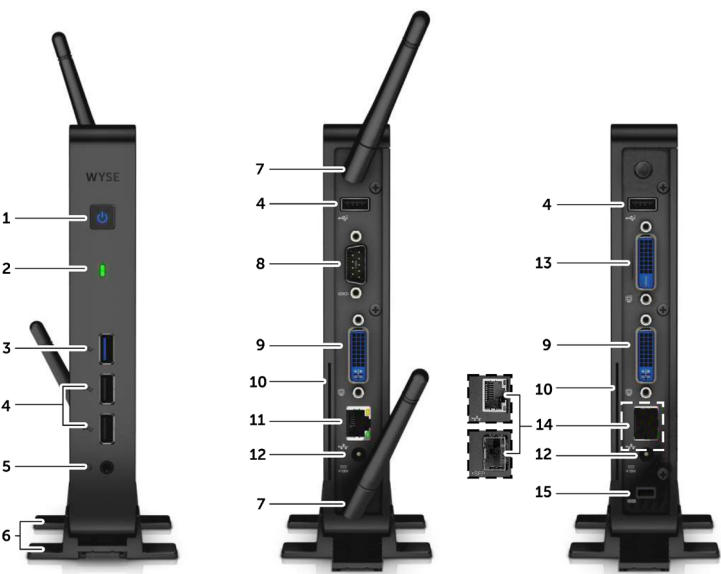

- | | |
|-------------------------------------|---|
| 1. Power on/off button and light | 10. Product information tab |
| 2. Activity light | 11. Network port, 10/100/1000 Base-T |
| 3. SuperSpeed USB 3.0 port | 12. +12V Power adapter input |
| 4. USB 2.0 port (3x) | 13. DVI-D port |
| 5. Headphone/microphone jack | 14. Network port, 10/100/1000 Base T, or SFP/Mini-GBIC slot |
| 6. Feet | 15. Lock receptacle (non-wireless only) |
| 7. Wireless antenna port (optional) | |
| 8. Serial port | |
| 9. DVI-I port | |



NOTE: Components may vary based on model and location.