


PREDATOR[®]

ENGINES

QUICK START GUIDE

Horizontal Shaft Gas Engine 69727 69730

Engine Components

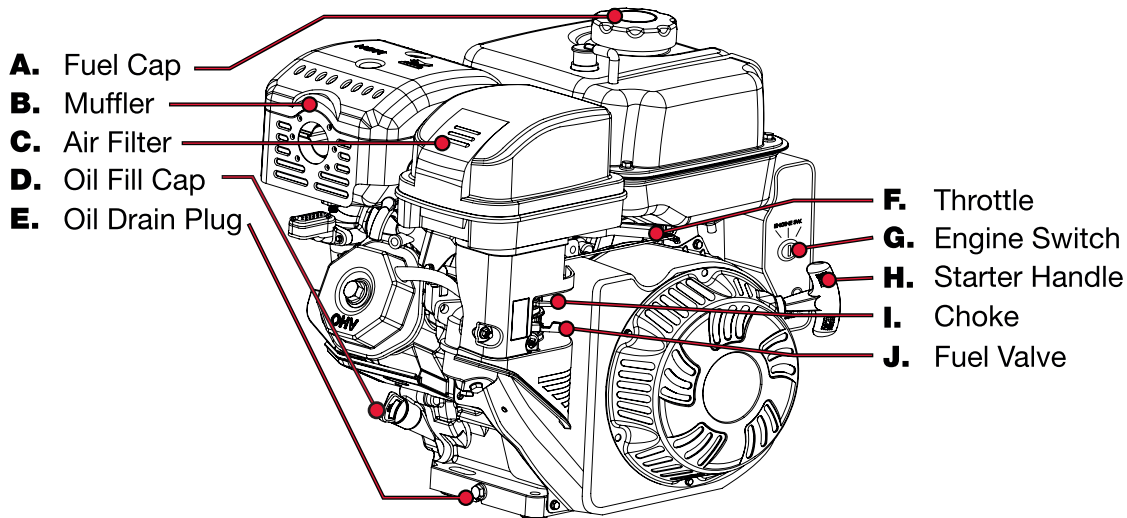


READ AND UNDERSTAND USER MANUAL BEFORE USE.




Add Fluids

Check oil and fuel levels
If needed, fill as shown below

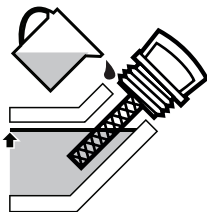

**Add oil to engine
crankcase**

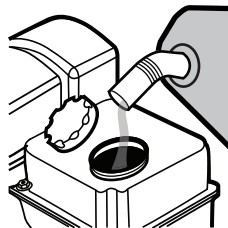


**Add fuel to within
1" of the rim of the tank**

Note: Use regular Unleaded 87 Octane.
10% Ethanol blend ok.


Engine not designed for E85 Ethanol blend.

Assembly

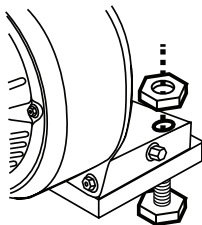


**Mount the engine
securely in place**


Starting Procedure

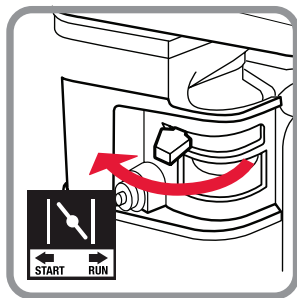


1. CLOSE CHOKE

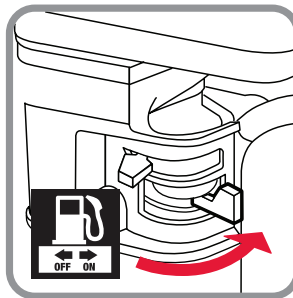


2. OPEN FUEL VALVE

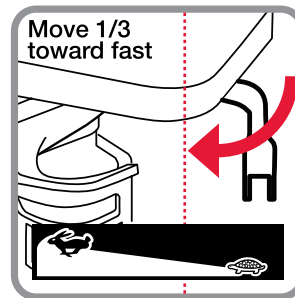


3. ADJUST THROTTLE

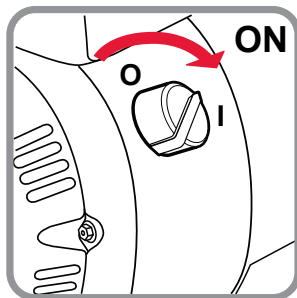

4. SWITCH ON

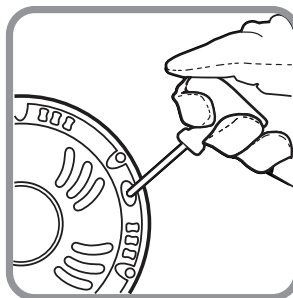

5. PULL START

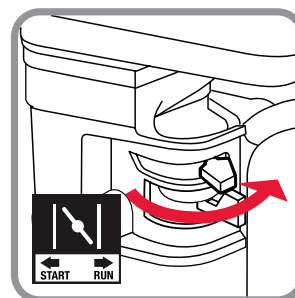

6. CHOKE TO RUN

IMPORTANT: Breaking-in the engine will help to ensure proper equipment and engine performance. The operational break-in period will last about 3 hours of use. During this period: • Do not apply a heavy load. • Do not operate the engine at its maximum speed.



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: predator@harborfreight.com

READ AND UNDERSTAND USER MANUAL BEFORE USE.

