



Instructions

All the instructions should be read carefully before operating and follow the instructions.

- The speaker should be kept away from heat sources such as radiators, and do not expose to moist air or water
- The speaker should be connected to a power supply only of the type described in the operating instructions
- Do not attempt to repair the speaker if you are not professional.
- When cleaning the unit, only use a soft cloth and do not use harsh abrasives or chemicalsto clean, as it will damage the surface finishing.
- The power switch should be off when left unused for a long period of time.



OFF / ON

- "OFF" means Power off, "ON" means Power on, speaker will enter into the play mode when knob is turned to on position
- Insert the USB cable to "LINE IN" DC 5.0V and the other USB cable to recharge the built in battery

Play / Pause / Mode

- Insert the audio equipment to the "LINE IN" slot using the USB plug and press Mode to switch to AUX function and the speaker can play music from mobile phone, MP3, computer and other audios.
- MP3 Function
SD card / USB: insert SD card to "SD/MMC", it will play music from SD card. Insert USB, it will play music from USB.
- FM: Press "Mode" for long time, it enters into the FM mode after light turns red.

Mode / Play

- Mode ▶ II
MP3 Mode: Short press to play / pause function
FM MODE: Short press to search and save channel function
Insert Audio: press shortly to pause
Short press, you can choose SD / USB / FM / AUX function



- FM- / ⏮

Short press ⏮, it will play previous song, long press to turn the volume down; FM mode, short press to save channel, long press to turn the volume down; Audio mode has no function.

- FM+ / ⏭

MP3 MODE, short press ⏭ to play the NEXT song, long press the turn the volume up. FM mode, short press it's save channel; long press to turn the volume up.

Audio mode has no function.

Remote Control

- "POWER" key: press the "Power" key, it will turn the power off; press one more time, it will turn the power on.
- "MODE" key: Press the "Mode" key, you can choose SD / USB / FM / AUX mode.
- "NEXT" key: in MP3 mode, short press to go to the next song; long press to fast forward. In FM mode, short press to save channel, long press to search FM channel.
- "PREVIOUS" key: in MP3 mode, short press to PREVIOUS song; long press to fast backward.
- "VOLUME - " key: Press "VOLUME-" for volume down, and "VOLUME+" for volume up
- "EQ" key: Press it, you can choose different mode (Jazz, Rock, Bass, Normal, and Class).
- "USB / SD" key: Choose the USB or SD function.
- Repeat Function: press "Repeat" key for one time to single song repeat, while press one more time, for all songs repeat.
- "0-9 number" key:

Wireless Function

- Press "M" button to select wireless function, then pair the device to your mobile phone. It should show the Bluetooth name "PartyFunLights" on your mobile phone.



Specs

Outer put	RMS 5W x 2
Frequency	150HZ - - - 18KHZ
Drive Unit	5"*1/2Ω
S/N	≥ 80db
Power Supply	5V - USB / 3.5 Jack Plug
Lithium Battery	3.7V 1500 mAh

Packing list

- Speaker (1pc)
- User Manual (1pc)
- Stereo Audio and USB Charging Cable (1pc)
- Remote Control (1pc)
- Microphone (1pc)



The symbol above and on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The Waste of Electrical and Electronic Equipment (WEEE) Directive has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill. Contact local authorities for information on the correct disposal of Electrical or Electronic equipment.

