




EN Instruction manual



Fondue Pure White
01.173030.02.002

PARTS DESCRIPTION

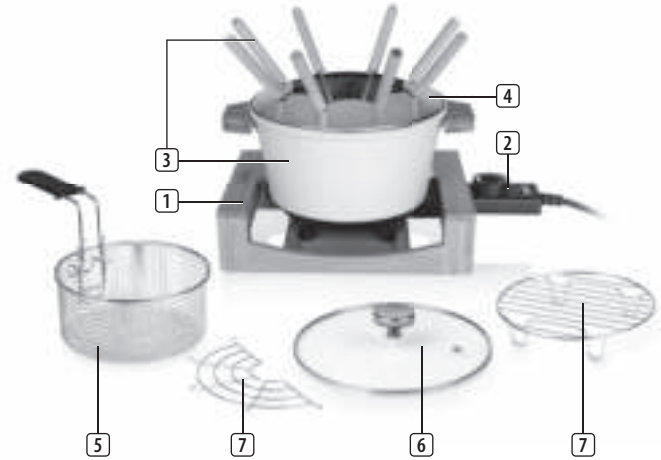

EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The connector must be removed before the appliance will be cleaned, please make sure the inlet is completely dry before the unit will be used again.
- Disconnect the mains plug from the mains when the appliance is not in use, before assembly or disassembly and before cleaning and maintenance.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- Children shall not play with the appliance.

- Surface is liable to get hot during use.

PARTS DESCRIPTION

1. Base
2. Thermostat
3. Fondue pan with 8 forks
4. Fondue ring
5. Fryer basket
6. Glass lid
7. Steam rack

BEFORE THE FIRST USE

NOTE: NEVER USE THE FONDUE POT ON ANOTHER HEATING SOURCE THAN THE SUPPLIED HEATING BASE.

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Clean the forks and the fondue pot in warm soapy water and dry them thoroughly.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Suitable for frying, steaming and multi cooking. Including fryer basket for frying, glass lid for multi cooking and steam rack for steaming.

USE

- The fondue pan is suitable for various types of fondue, such as the classic meat fondue, as well as cheese fondue, a chocolate fondue or a Chinese fondue (with broth).
- Also suitable for frying, steaming and multicooking.
- Including glass lid for multicooking and steam rack for steaming.
- You can preheat the ingredients in a pan before pouring it into the fondue pot.
- Fill the pan with oil, cheese, stock or chocolate, but do not fill it above the 1.5l maximum mark.
- Place the plug into the socket and set the thermostat to the desired setting.
- Set the thermostat at the desired temperature.

Thermostat settings:

1. Chocolat
2. Cheese
3. Broth
4. Oil

- These temperature settings are indicative. It is possible you have to adjust the thermostat in order to reach the ideal temperature.
- As soon as the appliance has reached the set thermostat setting, the indicator light will go out.
- While in use, the temperature light will go on and off: this shows that the thermostat is working correctly and that the contents of the pan are being heated at the set thermostat setting.
- Stir the fondue to make sure that it is fully melted.
- Prick the food onto the fondue fork
- Dip the food into the fondue and stir it into the fondue for a few seconds.
- Take the fondue fork from the fondue pot and remove the food.
- To switch off the appliance, turn the thermostat dial to the minimum temperature and remove the main plug from the wall socket.

CLEANING AND MAINTENANCE

- Before cleaning or maintenance, always switch off the appliance, remove the mains plug from the wall socket and wait until the appliance has cooled down.
- Do not immerse the appliance in water or any other liquids for cleaning.

- Clean the forks and the fondue pot in warm soapy water and dry them thoroughly.
- Clean the bamboo base with a clean, dry cloth. The bamboo base cannot be washed.
- The appliance, bamboo base and accessories are not dishwasher proof.

ENVIRONMENT




This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!

大昌貿易行有限公司

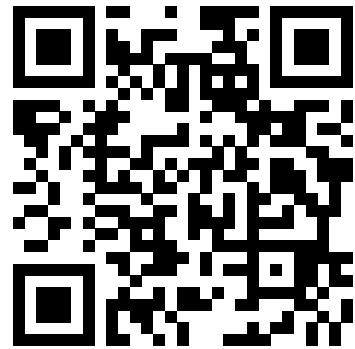

請於購買後 14 日內掃描以上 QR code 或造覽點:
www.dchread.com/services.html 完成產品保養登記及詳閱保養條款及細則
如有任何查詢, 請致電 3193 9888
Please scan the above QR code Or visit our website:
<https://www.dchread.com/services.html> to complete for the online
warranty registration within 14 days of purchase and perusal the warranty
terms & conditions. Should you have any enquiry, please feel free to
contact our service Hotline 3193 9888.

Do you want to get the most out of your product?
Visit www.princesshome.eu/accessories
for accessories and spare parts.

