

User Manual

BRIEF INTRODUCTION:





When you open the lids of other trash bins you must touch them with your hands or your foot. It is not convenient and definitely not hygienic. Now, we have introduced the automatic lid-opening touchless trash bins.

The automatic trash bin uses infrared technology. As your hand or debris approaches the bin (about 7.8 inches/20 cm away) the infrared sensor on the lid (Picture 1) automatically opens the lid. After your hand is withdrawn the lid will close automatically (7-seconds delay). Lid will remain open if debris or hand is within 6 inches of the infrared sensor zone. There are 2 buttons on the front to open and close the lid manually, as well as an ON/OFF switch on the back of the trash bin.

The automatic trash bin creates a germ free, odor free, automated environment. It is convenient to use and it is very hygienic.

ATTENTION: 1. Do not immerse the Lid Cover in water because it is equipped with many electronic parts. You can clean it with a damp cloth.

2. Do not press or force the lid of the trash bin to close when it is opening. Waiting for it to close by itself.
3. Change used or inefficient batteries as soon as possible to prevent possible damage to the electronic components by chemicals leaked from the batteries.
4. Avoid direct sunlight onto the infrared sensor.
5. Make sure there is enough room to operate the automatic trash bin without blocking the opening or closing of the lid.

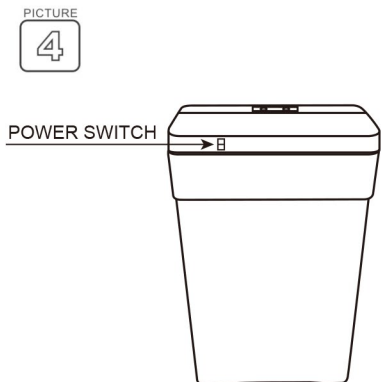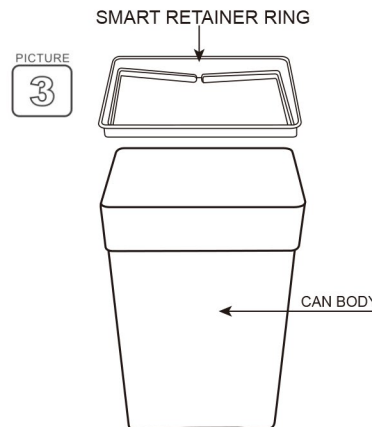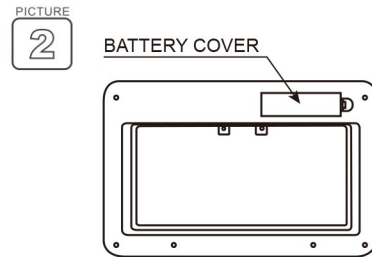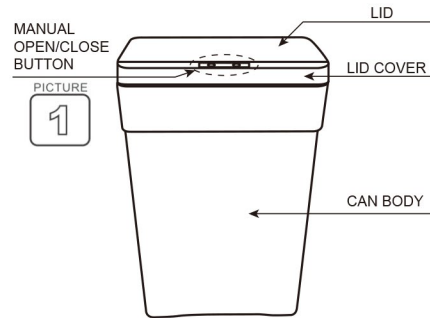

TC-P605 TC-P3580
TC-P2470 TC-P4692

OPERATING INSTRUCTIONS:

How does smart retainer ring work?

- a. Remove the Lid Cover from the bin. Open the cover of the battery compartment located on the underside (Picture 2) and insert four "AA" size batteries according to the mark of "positive and negative poly". Close the battery cover.
- b. Insert the garbage bag through the smart Retainer Ring. Place top of bag up through center of ring and wrap over Ring. Put the Ring onto the top edge of the bin (Picture 3) body.
- c. Hold the front of the Lid Cover and press down onto the top of the bin body. Place the rear side of the Lid Cover first and align the front then press down straightly until lock.
- d. Turn on the power switch on the back of the Lid Cover (Picture 4).
- e. To open the lid, just place your hand or any object about 6 inches above the Infrared Sensor on the front of the Lid Cover. The lid will remain open if it detects objects within the Sensor Zone. It will close automatically 3 seconds after your hand or object moves away.
- f. If you press the open button next to the LED light indicator, the lid will open and remain open until you press the close button. This manual function allows flexible choice. If you want to close the lid, press the close button. After 2 seconds, the trash bin returns to the automatic mode.

9. Four new "AA" size alkaline batteries can last up to 10,000 usages before changing batteries.

STEP 1 Put a garbage bag inside the can first.



STEP 2 Wrap the bag over the ring and put the ring and bag onto the top edge of the can body.



STEP 3 The final should look like the photo



FACTORY DIRECT WHOLESALE RETURN AND WARRANTY POLICIES

Return Policy:

All returns have to be pre-approved by Factory Direct Wholesale, LLC customer service within 30 days of receiving the item. All other returns will not be refunded without authorization to return the items. If the item has not arrived damaged nor defective the buyer is held responsible for all return shipping costs, and along with restocking fees. All items must be re packaged in the original box it was received in. We will not provide any additional packaging materials to return the item. We are not held responsible for any packages returned to us that are not originally shipped by us. If the buyer refuses delivery of an item that did not arrive damaged in transit they are held responsible for all return shipping costs.

FACTORY DIRECT WHOLESALE THREE MONTH LIMITED WARRANTY

Factory Direct Wholesale always has your needs and wants in mind. It is our goal to provide safe, reliable products that provide our customers with years of satisfaction.

Factory Direct Wholesale products are warranted against manufacturing defects in material and workmanship for six months from the ORIGINAL PURCHASE DATE with the following exceptions: Upholstery materials,foam,gas,cylinders,wood components, control mechanisms,and electronic components.Upholstery materials and foam are warranted against unusual wear or deterioration and gas cylinders,wood components,and controls against structural failure or unusual wear for three months.All electronic components for the units have a 30-day warranty period.

The warranty obligation is limited to the replacement or repair, at Factory Direct Wholesale’s option, of defective parts and components. The warranty of this product is null and void if the product is subject to negligence, abuse, misuse, modification or accident. The warranty is only rated for the original purchaser of the product and will not be honored if the product is resold. All warranties are for normal household usage .

Should any component be found to be defective under normal single shift usage, that component will be replaced free ofcharge. In order to get the replacement part please contact Factory Direct Wholesale to obtain a return authorization.

This warranty applies only to the product; Factory Direct Wholesale is not responsible in any way for loss, inconvenience or any other special or consequential damages caused by any product defect.

PRODUCT DISCLAIMER:

Factory Direct Wholesale is in no way liable to you for any direct, indirect, incidental, special, consequential or exemplary damages including but not limited to damages for loss of profits, goodwill, use, or other intangible and tangle losses (even if Factory Direct Wholesale has been advised of the possibility of such damages), resulting from negligence, abuse, misuse, modification or accident.

All of our products are intended for experienced adults over 18 years of age and for personal use only.Factory Direct Wholesale, LLC will not be held liable under any circumstance for incidental or consequential loss or damage or injury, due directly or indirectly to the use of our product, including any malfunction from negligence or defect. The seller makes no claims as to the suitability of our product for any specific purpose or use. The buyer holds seller and its agents and affiliates harmless from any liability arising out of or relating to the use or ownership of our product. Buyer fully accepts responsibility & releases the seller from any and all personal injuries, death of the user and others, losses, costs, and damages incurred as a result of buyer or anyone else’s operation of our product. By purchasing this item, you acknowledge that you have read and understood, and you agree, to the terms and conditions of the agreement, and you represent that you are of legal age (age 18 or older) to enter this agreement and become bound by its terms.



WARRANTY CARD

Warranty policy:
·We strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.
·Factory Direct wholesale, LLC products are covered with a 90 day warranty starting from the time you receive the item.
·Each customer must provide record of their order such as the order number, or item receipt. This can be mailed to 100 Pottery Rd Commerce, Ga 30529, or emailed to our customer service.
·For any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

TELEPHONE MAIL	678-726-0247 fdwcustomerservice@yahoo.com
ADDRESS	Factory Direct Wholesale, LLC 100 pottery road,commerce GA 30529

NOTE: FOR YOUR PROTECTION
Please obtain your purchase receipt to ensure proof of date of purchase can be established. Any failure to supply correct information may result in service being charged.

.....

WARRANTY CARD	
NAME: _____	
COMPANY (If applicable): _____	
STREET: _____	
CITY: _____	STATE: ____ POST CODE: _____
PHONE: _____	E-MAIL: _____
MODEL NAME: _____	ORDER ID: _____
DATE OF PURCHASE: _____ PURCHASED FROM: _____	
DESCRIPTION OF PROBLEM:	

