

USER GUIDE



 
Streaming Media Player

FULL HD
With Voice Search Remote Control



Powered by
androidtv

CONTENTS OF THE PACKAGING

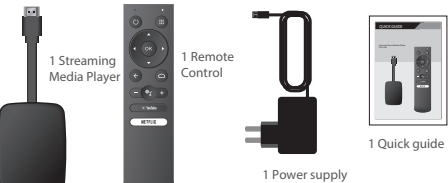

DEVICE INFORMATION



SECURITY INFORMATION


Care! To prevent fire and electric shock, do not expose this appliance to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the Appliance. In the event of a defect in the appliance, recondition should be carried out by qualified technicians. No part of this device should be repaired by users.

Attention!

- Place the appliance in a well-ventilated place to prevent internal heat build-up
- Protect the appliance from high temperatures, humidity, water and dust
- Do not place near the appliance, objects that may damage it (e.g. such as objects full of liquid or candles).

This equipment is not entitled to protection against harmful interference and cannot cause interference in properly authorized systems

INSTALLATION DIAGRAM

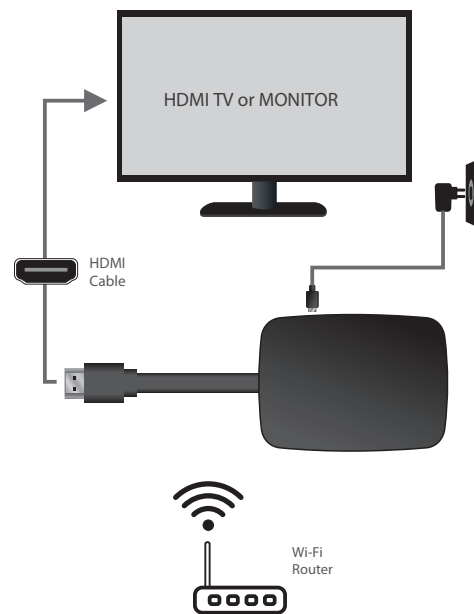

REMOTE CONTROL



REMOTE CONTROL

Pairing instructions:
Press and hold the **BUTTONS BACK + HOME** at the same time, until the LED red start flashing, and then release the buttons. At that time the remote control starts pairing mode.
Wait a few seconds without pressing any buttons until the successful pairing message appears on your TV screen.




A little help on your big screen with Android TV and Google Assistant
Android TV with Google Assistant provides a smarter viewing experience. Easily search for what's playing on Live TV, access blockbuster movies, stream apps and enjoy multiplayer games. You can change the channel, control the volume, pause, fast forward, rewind and record shows – all with your voice. Ask your Assistant questions and get Google responses on the big screen. Dim the lights and control smart home devices.

Press the Assistant button on your remote to get started.




ANDROID TV™

Complete the installation:
Follow the on-screen instructions using the remote to navigate through the installation process.

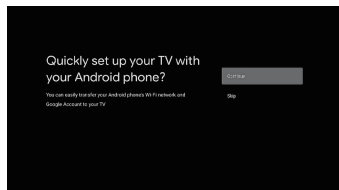

Smart Experience:

The Streaming Media Player powered by Android TV, brings a world of content to your biggest screen. With Google Assistant, you can quickly access entertainment, get answers on screen, and control smart home devices. Find the latest blockbuster, check the score of the big game, or dim the lights. Just press the Assistant button on your remote to get started.

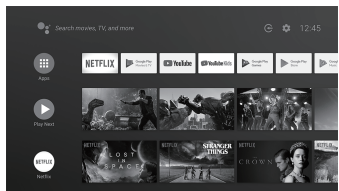

Specifications

Hardware	
Chipset	Amlogic S805X
RAM	1 Gb
Flash	eMMC 8 GB
Wi-Fi	802.11 b/g/n 2.4G 1T1R Wi-Fi
Bluetooth	4.2 LE – 2,4 GHz
Video	
Decoding Video	VP9 Profile-2 up to 1080p@60fps H.265 HEVC MP-10@L4.1 up to 1080p@60fps H.264 AVC HP@L4.2 up to 1080p@30fps H.264 MVC up to 1080P @60fps MPEG-4 ASP@L5 up to 1080P@60fps WMV/VC-1 SP/MP/AP up to 1080P@60fps AVS-P16(AVS+) / AVS-P2 JiZhun Profile up to 1080P@60fps RealVideo 8/9/10 up to 1080P@60fps WebM up to VGA
Video Output	HDMI 2.0A, HDCP2.2
Screen aspect ratio	Automatic / Full screen
Video resolution	1080P
Power	
DC Input	5V / 1,5A
Energy consumption	Maximum of 7.5W

Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.
The Google Assistant is not available in certain languages and countries.

WARRANTY AND TECHNICAL ASSISTANCE

SCOPE AND WARRANTY DEADLINE:

1. This product is guaranteed by Pontis Technologies for a period of one (1) year. The period of this warranty starts the date of purchase of the product, proven by the purchase invoice of the product.
2. For manufacturing defects within the warranty period, the consumer shall contact the seller. Analysis and repairs, within the warranty period, only may be carried out by Pontis Technologies or by authorized companies.

WARRANTY EXCLUSIONS:

- Defects or damages arising on non-compliance installation, as well as external agents like floods, lightning, outbreaks, and accidents like falls and crashes
- Damages caused by improper installation, connections to wrong voltage or with energy variation above that specified by the product.
- Damaged packaging and finish of the product.
- Tampered seal and/or serial number, violated or scraped.
- Missing sales invoice, modified invoices or with irregularities.
- Improper use of the device with non-original power supply.

WARNING:

Improper use as well as incorrect installation or operation may result in severe injuries to persons or damage to property.

