



MK II PEACEMAKER

OPERATING INSTRUCTIONS

About the Mk II Peacemaker

The Peacemaker targets the collector looking for timepieces that are not only versatile for everyday use, but would also help unravel the untold history of early dive watches. It exudes a strong retro vibe, its design heavily inspired by cushion-shaped dive watches worn by Italian frogmen from the '30s to '50s.

First introduced in 2017, the Peacemaker was in fact an early design conceived back in 2014 to replace the Genesis, our first line of watches, but wasn't put into production at the time because of unexpected events.

Case: Stainless steel/ aged finish, diameter 43mm, lug width 24mm

Crystal: Sapphire, box shaped, anti-reflective

Dial: Sandwich construction, with luminous hands and markers

Movement: ETA 6497-1 (PG-00) or ETA 2824-2 (other models)

Water resistance: 100m/ 330ft (PG-00) or 200m/ 660ft (other models)





Fastening & Unfastening Crown

PG-00: Crown is push-pull type, so fastening is not required.

Other models:

- To unfasten, turn crown anticlockwise until it pops out.
- To fasten, turn crown clockwise while pressing it against the case. Don't over-tighten; there's no need to.

Setting the Time

PG-00:

- Pull crown out to position B. (There is no position C.)
- Turn the crown to set the time, then push crown back to Position A.

Other models:

- Pull crown out to position C.
- Turn the crown to set the time, then push crown back to Position A.

Winding

PG-00:

- At position A, turn crown clockwise. Stop once you feel resistance.

Other models:

- Flick the timepiece sideways to swing the rotor. When the timepiece is on your wrist, your arm movements will automatically wind the movement. Audible spinning of the rotor is normal.
- Alternatively, unfasten crown to winding position (A) and give it a few turns clockwise until the timepiece starts running.

Changing Straps

- The strap is attached to the watch lugs using spring bars. To remove strap, use a pin tool to compress the spring bar through one of the lug holes to disengage it, then extract the strap gently.
- To attach strap, insert spring bar into strap, place one end of the spring bar into one of the lug holes, and use a spring bar tool to compress the other end of the spring bar to engage it.
- After attaching, always tug at both ends to be sure that the spring bars have been installed securely.



General Care

- Don't wear or store your timepiece with the crown unfastened, and don't operate the crown when your timepiece is wet. After swimming, rinse it in fresh water.
- Steam and vapour can penetrate the case and damage your timepiece. Don't expose it to temperature extremes or corrosive chemicals, or wear it in saunas.
- Don't place timepiece near loudspeakers or other equipment that generate strong magnetic fields that may affect its precision.

Aftersales Support

- This timepiece is warranted against manufacturing defects for 2 years. For assistance, contact us at info@gruppogammawatches.com.

