

50" FHD LED TV

ALED-50FHD



- RESOLUTION: 1920X1080
- HDMI INPUT: X 2
- USB INPUT: X 2
- VGA INPUT: X 1
- PC AUDIO INPUT: X 1
- AV INPUT: X 2
- EARPHONE OUT: X 1
- VIDEO OUT: X 1
- MAX AUDIO OUTPUT: 8W + 8W



PRECAUTION

1. Read all instructions for correct set up and use.
2. Retain this manual for future reference and use.
3. Take note and follow all instructions and warnings.
4. This device is a CLASS II construction.
5. Ventilation should not be impeded by covering the ventilation vents with items such as newspapers, tablecloths, curtains, etc.
6. Ensure there is no naked flame source such as lit candles placed on or near the device.
7. The device should not be exposed to any liquids.
8. Ensure the batteries in the remote are not exposed to excessive heat.
9. The plug is used to disconnect the device and should remain for the device to be operational.
10. Clean with a dry cloth only
11. Do not install the device in windtight places that could cause a block of any ventilation openings. 
12. Keep installation areas clear from heat sources including amplifiers.
13. Do not discontinue use of the polarized/ grounding plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a grounding prong. The wide blade or third prong are provided for your safety. If the plug does not fit into the outlet, consult an electrician for the replacement of the obsolete outlet.
14. Only use accessories specified by the manufacturer.
15. Use only with the cart, stand, tripod or bracket specified by the manufacturer. If the cart is used take caution when moving the cart and apparatus to avoid injury and the device tipping over.
16. Unplug the device during thunderstorms or when not being used for long periods of time.
17. Refer all servicing to a qualified service professional.
18. Each USB terminal should be loaded with the 0.5A under normal operation.
19. Ensure there is a minimum distance around the apparatus for sufficient ventilation.
20. Place the device in an environment with a moderate temperature.
21. When carrying the device ensure both hands are used.

Note: If the manual is inconsistent with the product, please refer to the actual product.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on a cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the Television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.



CAUTION

Danger of explosion the battery is incorrectly replaced.

Replace only with the same or equivalent type of battery.

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Used batteries should not be thrown into the garbage can, please leave them at an appropriate depot.



CAUTION

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



CAUTION

These servicing instructions are for use by qualified service personnel only.


To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Attention:



Motionless picture might cause permanent destruction to the display.

- Be sure not to display motionless picture on the LED TV for more than 2 hours, cause picture remnants to appear, which is called "screen burns". To avoid such picture remnants, please decrease the "contrast" and "brightness" of the display when displaying motionless picture.
- If watching TV in 4:3 size mode for long periods of time, there may be traces on the on the screen due to different transmission of light on the screen. Similarly playing DVD's or Gaming devices may cause the same issue.
Devices destroyed due to these reasons cannot be guaranteed for maintenance.


 
- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

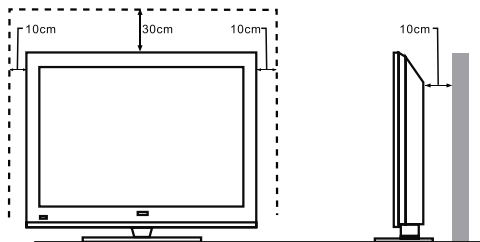

  - When turning the TV set, do not hold the top side of the TV set, only hold the bottom side.

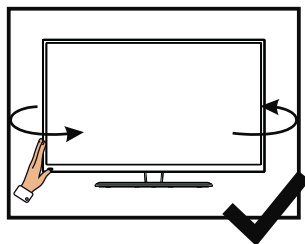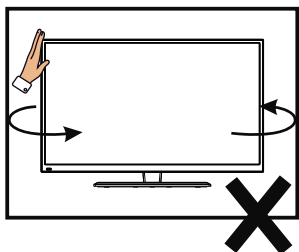

  - When lifting the TV set, do not use one hand to handle it.

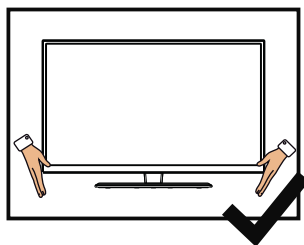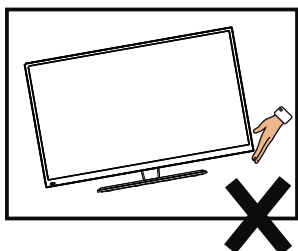

LED COLOR TV

CONTENTS

1. Connection and Preparation of TV.....	2
1.1 Accessories	2
1.2 Installation of Stand.....	2
1.3 Keys and Interfaces.....	3
1.4 Remote Control.....	4
1.5 Installation of Batteries.....	5
2. Basic Operation.....	5
2.1 Power ON/OFF (Optional).....	5
2.2 Setting of Standby Mode.....	5
2.3 Selection of Input Mode.....	5
2.4 Menu Option Adjustment.....	6
2.5 Menu Functions.....	7
2.5.1 CHANNEL Function.....	7
2.5.2 PICTURE Function.....	8
2.5.3 SOUND Function.....	9
2.5.4 TIME Function.....	10
2.5.5 OPTION Function.....	10
2.6 Screen Menu	11
2.7 Multimedia	11
2.7.1 MEDIA Function	11
2.7.2 USB Function.....	12
2.7.3 PHOTO.....	12
2.7.4 MUSIC.....	12
2.7.5 MOVIE.....	13
2.7.6 TEXT.....	14
3. Technical Specification.....	15
4. Supported Signal Modes.....	16
5. Simple Troubleshooting	17

LED COLOR TV

 
1.Connection and Preparation of TV

1.1 Accessories

- ★ User Manual
- ★ Remote Control
- ★ Battery(UM-4/R03P/AAA)
- ★ Wall Mount Kit (Pre-assembled)(Optional)

1.2 Installation of Stand




(For the physical structure, please refer to the real object)

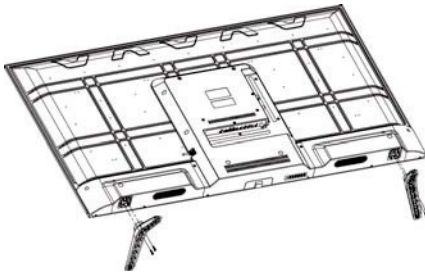

- ① Place the TV with the front panel facing downwards on a soft cloth or soft pad on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.


LED COLOR TV

   1.3 Keys and Interfaces

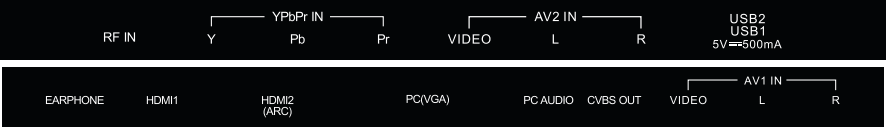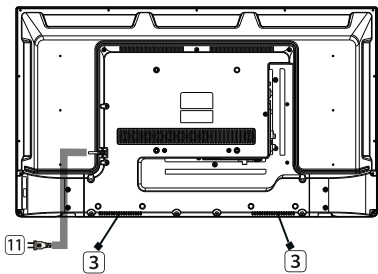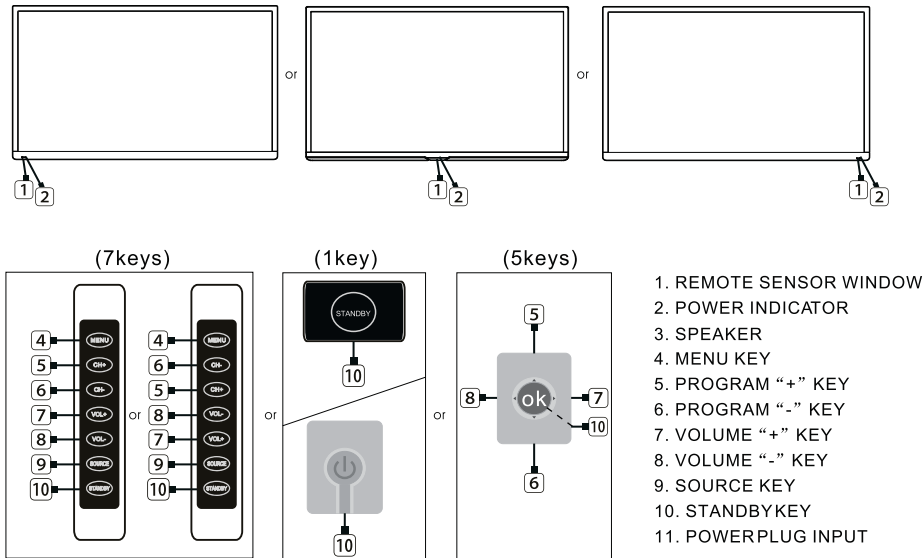

LED COLOR TV

 
1.4 Remote Control

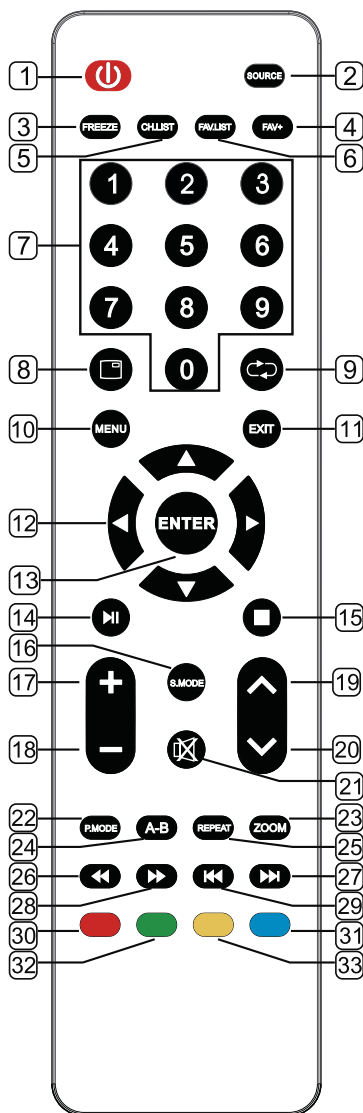

1. STANDBY() : Standby turn on and off.
2. SOURCE: Select the signal source.
3. FREEZE : Freeze the picture.
- 4.FAV+:Add favorite.
- 5.CH.LIST:Channel list.
- 6.FAV.LIST:Favorite channel list.
7. 0~9 : Continue to press the keys to select a channel.
8. DISPLAY : Display the information of Current video and audio.
9. RECALL: Return to previous channel.
10. MENU : Enter or exit menu.
11. EXIT : Exit menu or operation.
12. ▲,▼,◀,▶ key: The menu item selection.
13. ENTER: Confirm or enter.
14. MEDIA mode: || Press one time to pause, press again to playback.
- 15.MEDIA mode: ■ Stop the playback and return to file list.
- 16.S.MODE:Select the sound mode.
17. VOL+: Increase the volume.
18. VOL- : Decrease the volume.
19. CH ▲ : Select the channel forward.
20. CH ▼ : Select the channel backward.
21. MUTE: Mute sound.
22. P.MODE:Select the picture mode.
- 23.ZOOM:Zoom in or out the current.
- 24.A-B:Setup repeat play segment.
- 25.REPEAT:Allows you to repeat single random, shuffle and folder.
- 26.FB:Fast Backward
- 27.NEXT:Next
- 28.FF:Fast Forward.
- 29.PREV.:Previous
- 30.RED: Access the red item or page.
- 31.BLUE: Access the blue item or page.
- 32.GREEN: Access the green item or page.
- 33.YELLOW:Access the yellow item or page.

LED COLOR TV

 1.5 Installation of Batteries

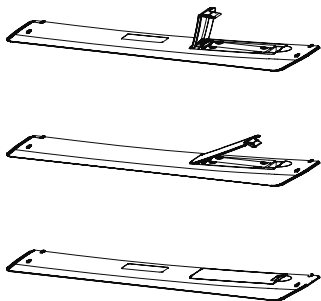

① Open the back lid of the remote control.

② Install two 7#(AAA)1.5V batteries.

③ Cover the back lid.

Please take out of the batteries from the remote control if not in use for long periods of time.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

2. Basic Operation

2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switching off the TV, don't immediately restart the power switch, as there should be a delay of one minute more before restarting.

2.2 Setting of Standby Mode

- Press () button to turn on the unit.
- Press () button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

 
2.3 Selection of Input Mode

This set has different signal source modes, continue to press the **Source** button to select a signal source.

LED COLOR TV

When selecting the signal source, the screen will display the information.

TV mode



When there is no signal from the selected source, the warning message will be displayed as per illustration. Either change the channel in TV mode or press the **Source** button to change **SOURCE**.

 


2.4 Menu Option Adjustment

After you have installed the batteries into the remote control, you will need to set preferences on the LED TV, using the menu system.

- The buttons for menu option adjustment include: **Menu**, **▲**, **▼**, **◀**, **▶** **Enter** buttons.

- Press the **Menu** button to open the OSD Menu, then press **◀**, **▶** button to select the pages. the pages are displayed in the following sequence (circular display):



Note: "CHANNEL" is only for TV .

- ① Press the **Menu** button to display the menu system.
- ② Press **◀**, **▶** button to select the menu pages.
- ③ Press **▲**, **▼** button to select an item.
- ④ Press **◀**, **▶** check size of font.
- ⑤ If you do not make a selection within 10 seconds, the menu will close automatically.
- ⑥ Press the **Menu** button to return or exit OSD menu.

LED COLOR TV

2.5 Menu Functions

2.5.1 CHANNEL Function

※ Adjustment of the CHANNEL

 
 
① Press the **Menu** button, and then press ◀ or ▶ button to the "**CHANNEL**" item.

② Press ▲ or ▼ button to highlight the "Auto Tuning", "ATV Manual Tuning", "Programme Edit", then press **ENTER** button to change the setting.

③ Press the **Menu** button to return or exit.

※ In the "CHANNEL" menu, select "Auto Tuning" and then press **ENTER** button to auto search and store the channels.

※ In the "CHANNEL" menu, select "ATV Manual Tuning" and then press **ENTER** Button to change the setting.

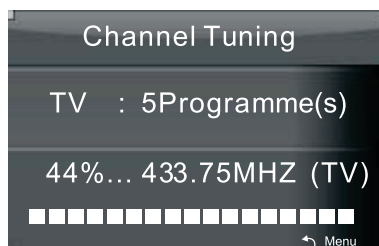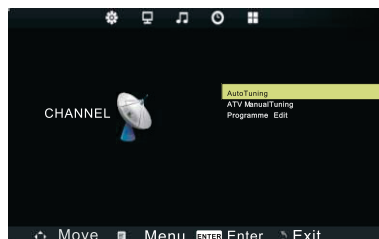

- **Current CH** Set the channel number
- **Color system** Select the colour system PAL/SECAM/NTSC
- **Sound System** Select the soundsystem (DK/BG/M/N/I)
- **Fine-Tune** Adjust the frequency of the channel.
- **AFC** Automatic Fine tuning.
- **Search** Press ◀ to search down from the current frequency, and press ▶ to search up.



LED COLOR TV

※ In the "CHANNEL" menu, select

"Program edit" and then press **ENTER**

button to change the setting.

- The four coloured key is the shortcut key for programming the channel.
- First press **▲/▼** to highlight the channel you want to delete or rename, move or skip, then:
- Press the **Red** button to delete the channel.
- Press the **Green** button to enter the rename state, then press **◀/▶** to select the word you want to change, and **▲/▼** to select word.
- Press the **Yellow** button to set the channel to moving state. Then press **▲/▼** to move it to the position you want to put.
- Press the **Blue** button to skip the selected channel.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)
- **Fav** Add or Delete the channel from your favourite list.



2.5.2 PICTURE Function

※ Adjustment of the PICTURE.

 
 
① Press the **Menu** button, and then press **◀** or **▶** button to the "PICTURE" item.

② Press **▲** or **▼** button to highlight the "Picture Mode", "Color Temperature", "Noise Reduction" item and then press **ENTER** button to enter Sub-menu.

③ In Sub-menu Press **◀** or **▶** button to adjust different setting.

④ Press the **Menu** button to return or exit.


※ In the "PICTURE" menu, select "Picture Mode" and then press **ENTER** Button to change the setting.

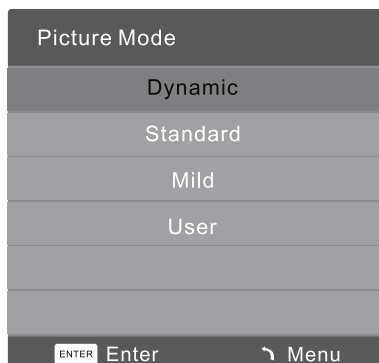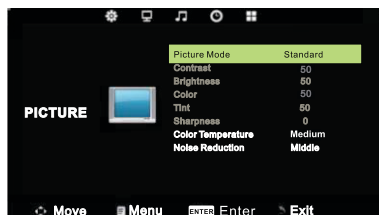

LED COLOR TV


Color Temperature

 In the "PICTURE " menu,select " Color Temperature" and then press **ENTER** button to change the setting: "Cool","Medium","Warm".

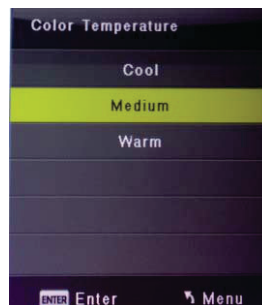

Noise Reduction

 
In the "PICTURE " menu,select "Noise Reduction" and then press **ENTER** button to change the setting: "Off","Low","Middle","High".

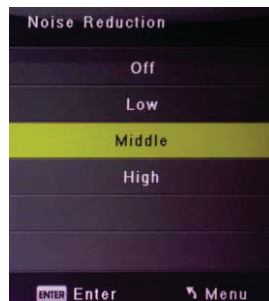

2.5.3 SOUND Function


※ Adjustment of the SOUND

 - ① Press the **Menu** button, and then press ◀ or ▶ button to the "**SOUND**" item.
- ② Press ▲ or ▼ button to highlight the "Sound Mode", "Balance" , "Auto Volume" , "Surround Sound" then press **ENTER** button to enter Sub-menu.
- ③ In Sub-menu Press ◀ or ▶ button to adjust different setting.
- ④ Press the **Menu** button to return or exit.

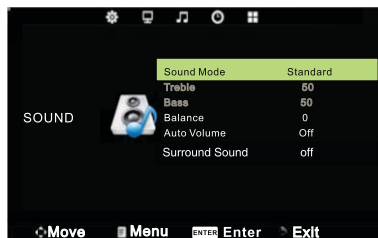

Sound Mode

 In the "SOUND " menu,select " Sound Mode" and then press ▲ or ▼ button to change the setting: "Standard","Music", "Movie","Sports","User"

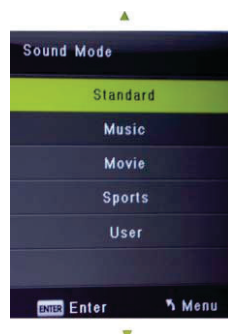


LED COLOR TV

2.5.4 TIME Function

※ Adjustment of the TIME

 
- ① Press the Menu button, and then press ◀ or ▶ button to the "TIME" item.
- ② Press ▲ or ▼ button to highlight the "Sleep Timer", "Auto Sleep" or "OSD Timer" item and then press **ENTER** button to enter sub-menu.
- ③ In Sub-menu Press ▲ or ▼ button to adjust different setting.
- ④ Press the Menu button to return or exit.

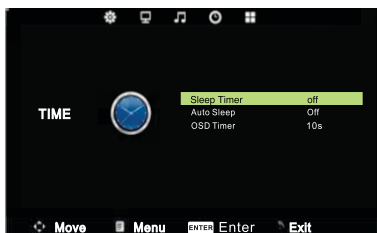

2.5.5 OPTION Function

※ Adjustment of the OPTION

 - ① Press the **Menu** button, and then press ◀ or ▶ button to the "OPTION" item.
- ② Press ▲ or ▼ button to highlight the "OSD Language", "Aspect Ratio", "Blue Screen", "Key Lock", "Reset" or "Software Update(USB)", item and then press **ENTER** button to enter Sub-menu.
- ③ In Sub-menu Press ◀ or ▶ button to Adjust different setting.
- ④ Press the **Menu** button to return or exit.

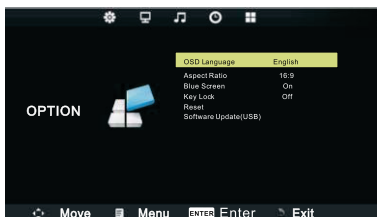


OSD Language

In the "OPTION" menu, select "OSD Language" and then press **ENTER** button to change the setting.

Aspect Ratio

 In the "OPTION" menu, select "Aspect Ratio" and then press **ENTER** button to change the setting.

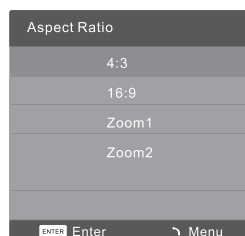

LED COLOR TV

2.6 SCREEN MENU

Note:the Screen Menu is available in PC mode.Those items are set to adjust the pc screen.

Press ▲/▼ to highlight one of the following options,then press ENTER or ► to select it

 
Auto Adjust Automatically adjust Clock,Phase, H-Position, and V-Position settings.

Horizontal Pos. Shift the screen up or down.

Vertical Pos. Shift the screen left or right.

Clock Adjust the internal sampling clock rate.

Phase Adjust the internal signal phase.

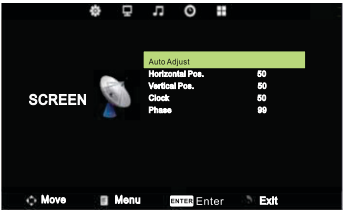

2.7 Multimedia

2.7.1 MEDIA Function

A. Support multimedia file:

Multimedia data	Format
Image	JPEG; BMP; PNG
Music	MP3
Video	MPEG-1(.DAT/.MPG) MPEG-2(.MPG/.VOB) MPEG-4(.AVI/.MP4) Digital movies
TXT	.txt

B. USB does not connect PC.

C. Compatible USB devices: The format is FAT or FAT32.

D. We cannot guarantee compatibility (operation and/or bus power) with all USB mass storage devices and take no responsibility for any loss of data that may occur when connected to this unit.

 
Please update formats for all file types (audio, photo, video)

LED COLOR TV

2.7.2 USB Function


✕ Adjustment of the USB

- ① Press the SOURCE button, and then press ▲ or ▼ button to highlight the “MEDIA” item and then press ENTER button.
- ② Press ◀ or ▶ button to highlight the “PHOTO”, “MUSIC”, “MOVIE”, “TEXT” item and then press ENTER button.
- ③ Press the SOURCE button to return or exit.

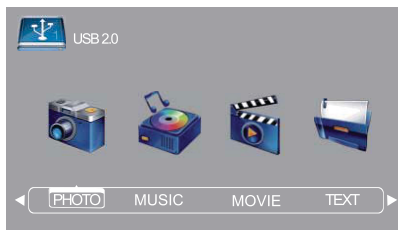


2.7.3 PHOTO

 - A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **PHOTO** that you want, press **ENTER** button to select playlist than press ▶ button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button.



 Play/pause Previous, Next, Stop, Repeat ALL, Music Off, Playlist, Info. .



Rotate, Rotate, Zoom In, Zoom Out, Move View.

2.7.4 MUSIC

- A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous file folder.
- B. Press ◀ or ▶ to select the **MUSIC** that you want, press **ENTER** button to select playlist than press ▶ button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button

LED COLOR TV



 
Play/pause Fast Backward, Fast Forward, Previous, Next, Stop, Repeat ALL, MUTE.




Playlist, Info. , Goto Time.

2.7.5 MOVIE


- A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder , press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **MOVIE** that you want, press **ENTER** button to select playlist than press ▶ button to play.
- C. Press Display button to the media item.
- D. Press ◀ or ▶ button to highlight the media and than press **ENTER** button

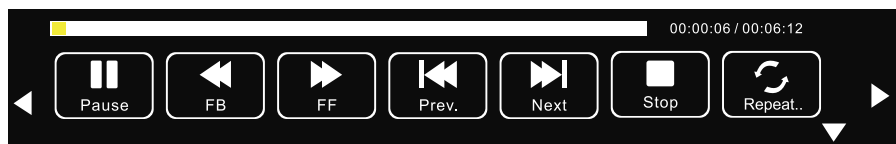

 Play/pause, Fast Backward, Fast Forward, Previous, Next, Stop, Repeat ALL, Set A/B

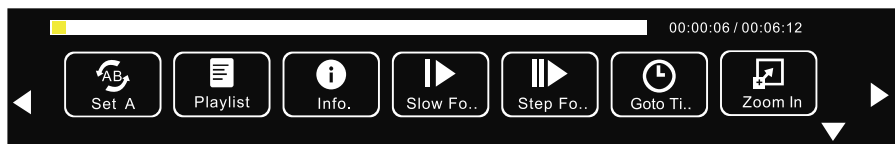

 Playlist, Info. , Slow Fw, Step Fw, Goto Time, Zoom In, Zoom Out, Aspect Ratio

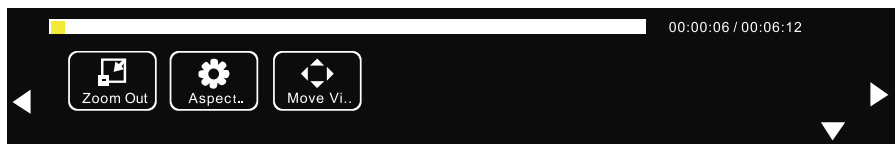

Move View.

LED COLOR TV

2.7.6 TEXT

- A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous file folder.
- B. Press ◀ or ▶ to select the **TEXT** that you want, press **ENTER** button to select playlist than press ▶| button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button



Prev Page, Next Page, Previous, Next, Stop, Music Off, Playlist, Info. .



LED COLOR TV

3. Technical Specification

Product Model	ALED-50FHD	
Screen Size	50" diagonal	
Aspect Ratio	16:9	
Power Supply	AC 100-240V~,50/60Hz	
Power Consumption	120W	
TV System	PAL B/G D/K I, SECAM B/G D/K	
Audio Output Power (Internal)	8Wx2	
Input Terminal	Antenna Input	x 1
	USB Input	x 2
	HDMI Input	x 2
	VGA Input	x 1
	PC AUDIO Input	x 1
	Audio Input (L/R)	x 2
	Video Input	x 2
	YPbPr Input	x 1
	RJ45 Input	NO
	CI card In	NO
	SCART In/Output	NO
	DC In (12V)	NO
Output Terminal	Earphone	x 1
	Audio Line Out(L/R)	NO
	Video Output	x 1
	Optical	NO
	Coaxial out	x 1
Working Temperature	0°C~40°C	
Working Humidity	20% ~ 80% Non-condensing	

Note: the specification shown above may change without notice for quality improvement.

LED COLOR TV

4. Supported Signal Modes

A.VGA Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)	Memo
640 x 480	31.50	60.00	
800 x 600	35.16	56.25	
	37.90	60.00	
1024 x 768	48.40	60.00	
1366x 768	47.85	60.00	
1920x 1080	67.50	60.00	Full HD panel only

Note: Please use the VGA connecting cord of more than 5 meters to ensure the highest picture quality.

B.YPbPr Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480i	15.734	59.94
480p(720x480)	31.468	59.94
576i	15.625	50.00
576p(720x576)	31.25	50.00
720p(1280x720)	37.50	50.00
	45.00	60.00
1080i	28.13	50.00
	33.75	60.00
1080P(1920x1080)	67.50	60.00
	56.25	50.00

C.HDMI Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720P	45.00	60.00
1080i	33.75	60.00
1080P(1920x1080)	67.50	60.00

-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.

-You can confirm the input signal format on the screen.

LED COLOR TV

5. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the all sides to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal.

3 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product ('the consumer') that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 3 year from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- Remote Controls do not fall under warranty.
- Insect infestation of the electrical or motor makes the claim invalid.
- Broken Glass or Customer abuse do not fall under the warranty.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs and/or spares will be payable by the Consumer upon collection of the repaired product. The Consumer should **call the Pick n Pay CUSTOMER CARE** number on 0860 30 30 30 (only in South Africa). Customers residing outside South Africa can return the product back to a Pick n Pay store. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).



If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.



REPAIRS PROCEDURE

Should you experience any faults on your Aim product, please adhere to the following procedure to have the fault rectified speedily and professionally.

You can return the product to the store.

Call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa) to report the fault and make arrangements for the next steps.

Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to “warranties” section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer’s expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer’s expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

We are confident about the quality of our products. If you are not 100% satisfied with our product we will gladly exchange or give you your money back.

Raymond Ackerman
Founder of Pick n Pay

Specially packed for
Pick n Pay Retailers (Pty) Ltd.
Pick n Pay Office Park
2 Allum Road, Kensington, 2094
www.picknpay.co.za

CUSTOMER CARE
Sharecall: 0860 30 30 30
ONLY IN SOUTH AFRICA
customercare@pnp.co.za
Product of China

ALED-50FHD

AIM