

INTERACTIVE USER MANUAL

BLUEBOT XTREME

Find all the information you need to get your Bluebot up and running.



Please make sure you have Adobe Acrobat Reader installed to display this PDF correctly

Use the menu below to navigate to the desired topic and use the  symbols on pages to get more information.





Robot, sensors & structure



Parts & accessories



Top view Robot



Bottom view Robot



Dustbin

Maintenance (dustbin and filter screen)

- + Press the button and pull the dustbin out backwards.



- 2. Open and clean the dustbin.

 


! Clean it regularly


Maintenance (Filter screen)

- + After it's been used for a long time, remove the filter gauze, sponge, and HEPA.
- 4. Clean the removed filter gauze, sponge, and HEPA under water.
- 5. Shake off the water drops and dry the pieces naturally, only use them after they have completely dried.
- 6. After the pieces are dry, install them in the following sequence: filter gauze - sponge - HEPA.


Filter gauze

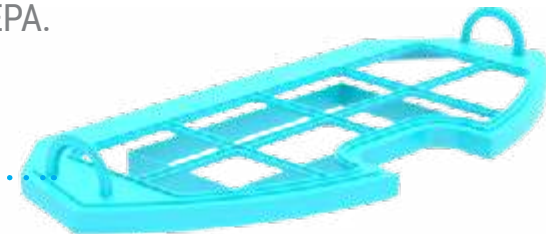


Button

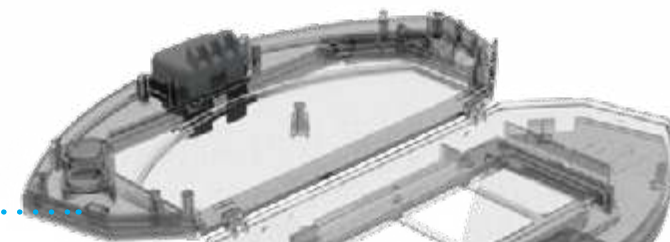 


Filter cover

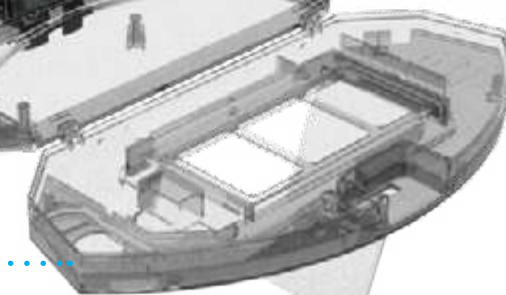 

Sponge

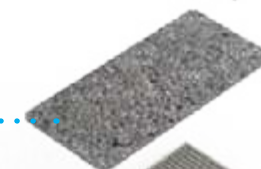 

HEPA

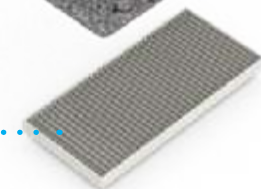 




Side brush



Installation

 
Make the left side-brush (L) and the right-side brush (R) correspond to L and R on the bottom casing, keep pressing L and R and the side brushes. They are installed when you hear a “cracking” sound.

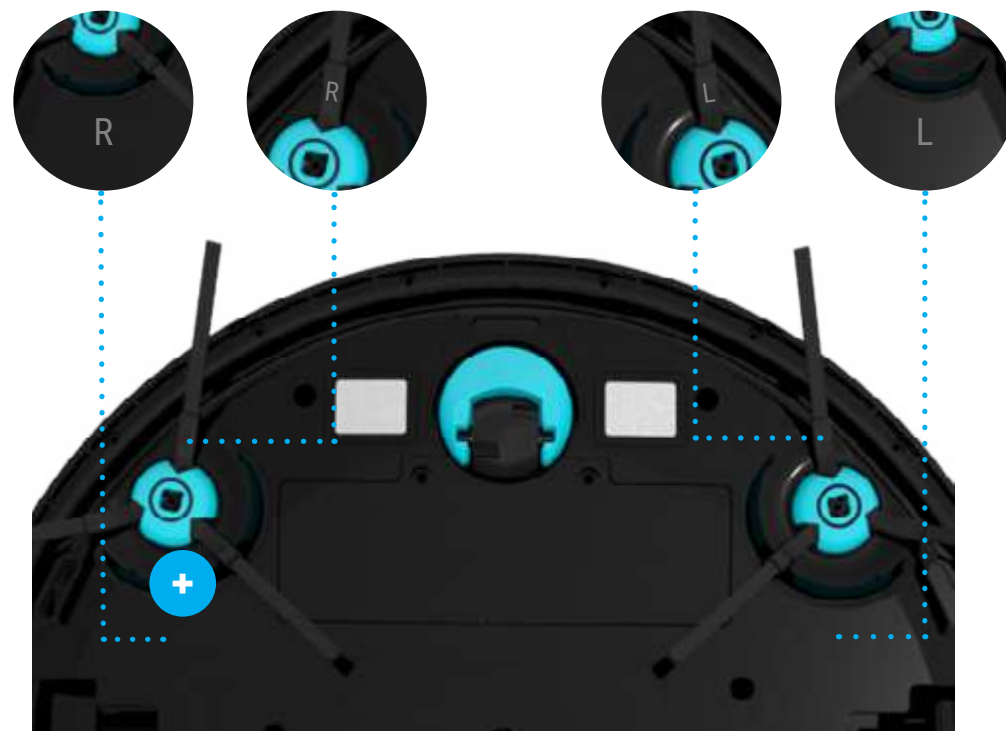

- Clean it regularly
- Replace the side brush every 3-6 months to ensure the best cleaning effect

Maintenance

 1. Turn the machine over and pull the side brush out and upwards.
2. Remove hair and dirt and reassemble the side brush.
3. Make the left-side brush (L) and the right-side brush (R) correspond to L and R on the bottom casing, press L and R.

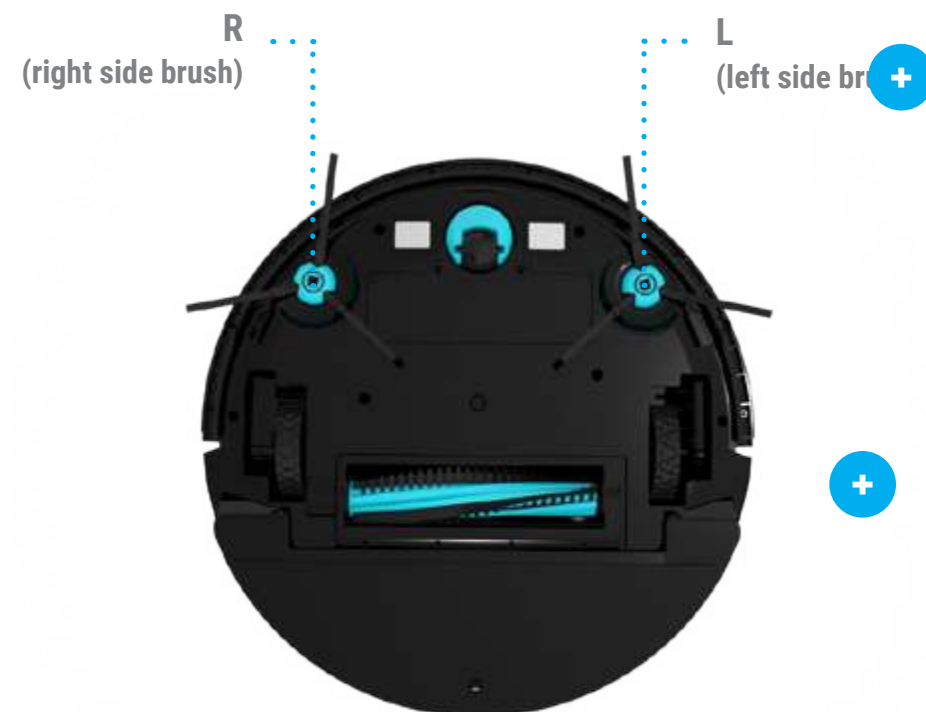

2 in 1 electrically-controlled water tank x1

1. Remove the mop, pour the water out of the water tank.



2. Clean the mop, dry the water tank and mop.



Robot installation

Robot installation

Starting up and charging

Long press to switch on the robot. Charge the robot on the charging base when the power indicator light is normally on.



- ⚠ • If the machine cannot be started due to a low battery charge, please charge the host on the charging base and the machine will start automatically. The machine can only work normally when the battery level is $\geq 20\%$.

Start cleaning

After the robot is powered on, short press key on the robot or use the mobile APP to start cleaning (press any button to pause during use).

- ⚠ • The sweeping robot cannot be used to remove liquids.
- If the battery level is less than 20%, the machine will not work. Please charge it.
- The machine will return to the charging base automatically if the battery level is less than 20% when in use and will be powered off and then start cleaning automatically after the battery level reaches 80%.
- Please clear various wires (including the power line of the charging base) from the ground before use to avoid outage and damage of objects or wires when wires are dragged by the host.



Start



App installation



Create an account



Connect your Bluebot



App connection | Connect your Bluebot

Step 9

Your are now connected with the App.
For more info about the app, choose
“App instructions” from the main menu below.

Previous Step



Cleaning start/pause

Use this function for the first time using the Robot. The Robot will scan the room it is in and create a map. This map can then be used in the future. It will speed up the Robots process as it knows exactly where it is.

Get cleaning start/stop



Adjustment of suction power



You can adjust the suction power to silent level, standard level, and high level.



This can also be done with the App.



Section 10: Daily cleaning

Resetting the robot

System reset

- Take the dust bin down and press '**Reset key**'. Make sure that you place the robot back on its docking station.
- The current map and timing will be lost, WIFI and personalised settings will be reserved after reset.

 Community

 FAQ

 Product information

 Support

Product information

Installation

App installation

App instructions

Instructions

Daily maintenance

Others



Safety Information | Usage Limitations

Safety Information | Battery and Charging

Warranty Policy | Period

- Please contact the Customer Service team for warranty cases.

• Please do not use the mopping function for carpets and furniture tops.

• Please be sure to remove the water tank when the machine is being charged.

