

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

WAX HEATER

OPERATION INSTRUCTIONS



Note: When using any electrical appliance, especially when children are present, basic safety precautions should always be followed.

READ ALL OFF THE INSTRUCTIONS BEFORE USING YOUR WAX HEATER.

- 1.DO NOT place or store the device where it can fall or be pulled in to a tub or sink.
- 2.DO NOT place the wax heater into water or any liquid. Keep surrounding area dry.
- 3.If the wax heater falls into water, unplug it immediately. DO NOT reach into the water.

(AS with all electrical devices, electrical parts are electrically live even when the switch is off, always use caution.)

WARNING: To reduce risk of burns, electrocution, fire or injury.

- 1.Never operate device if:
 - a.)It has a damaged cord or plug.
 - b.)If it is not working properly.
 - c.)If it has been dropped or damaged in any manner.
 - d.)Dropped into water.
- 2.Close supervision is important when the WAX HEATER is used by, on or near children.
- 3.Keep the cord away from heated surfaces.
- 4.DO NOT immerse the WAX HEATER into water or other liquids.
- 5.Avoid hanging the cord over a counter or table where it can be pulled on, by children or tripped over unintentionally.
- 6.Always use the WAX HEATER on a level surface.
- 7.Unplug the device when not in use. Allow to cool before handling, cleaning, or storing the warmer.
- 8.Do not wrap the cord around the WAX HEATER when in use.
- 9.Attachments not recommended by the manufacturer ma cause hazards.
- 10.Test temperature of the water before putting hand into the device.
- 11.Use this WAX HEATER only for its intended use as described in the instruction booklet.

SAVE THESE INSTRUCTIONS!!!

- 1. Power: 100W
- 2. Shell materials: ABS
- 3. Lid materials: PE
- 4. Heating temperature : 50℃~130℃
- 5. LED display: LED display show the real-time temperature of waxing pot.
- 6. Indicator: The wax warmer start heating while the colorful light flashing, when the temperature reached the settet temperature, the colorful light stop flashing and light off.
- 7. Knob button: Turn the knob to the right to turn on the wax warmer, continue to rotate to the right to adjust the temperature of the wax warmer.
- 8. Wax warmer liner: Put the wax into the hand-held liner, use the wax after take out the hand-held liner, to avoid stained wax machine, be caution that don't put the water in wax machine.
- 9. To clean the warmer, use wax clean with the machine off and while the warmer is still slightly warm.

CAUTION-EXTREMELY HOT WATER MAY CAUSE BURNS.

For professional use only.

For best results, be sure to read all instructions thoroughly before using the WAX HEATER.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

