

USER MANUAL



1 Main parameters

Item No.: E355-003

Material: plastic and electronic components


Batteries: Car battery: 1 pc of 3.7V rechargeable battery.

Remote controller battery: two pcs of 1,5V AA batteries.



2 Battery Installation

1. Open the cover of battery case locates in the back of controller, inserts two pcs of 1.5V AA batteries into the battery case, and then screw the cover (Fig 2A).
2. Please screw out the cover at the back of car by screwdriver, open the cover as the arrow showed, insert 1 pc of 3.7V rechargeable battery, then screw the cover (Fig2B).

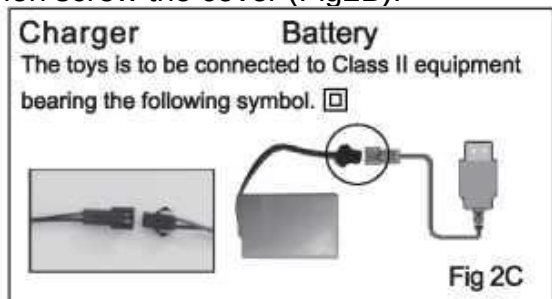

Notice: This product shall be charged for two to three hours. The supporting USB charger shall not be used for other devices other than this product.

3 2.4GHz Auto-matching

1. After installing the batteries of tractor and remote controller, turn on the switch of both. The indicator of remote controller and the front lights of tractor would be flashing slowly, and then at a state of auto-matching. When the tractor with a sound of DI-DI, it means the auto-matching is successful.
2. One remote controller can only match with one tractor. After the success of matching, there is non-interference of each tractor.
3. If the remote controller could not find out the 2.4G signal of the tractor in 1 minute, it would turn in a sleeping state (light off of the indicator). To press any key to activate.
4. To remake a pair with other tractor or remote controllers, please turn off the power of both.


4 Basic operation and functions

Installation Diagram



Basic operation and functions

After pairing, switch on the truck by pressing the "On/Off" button.

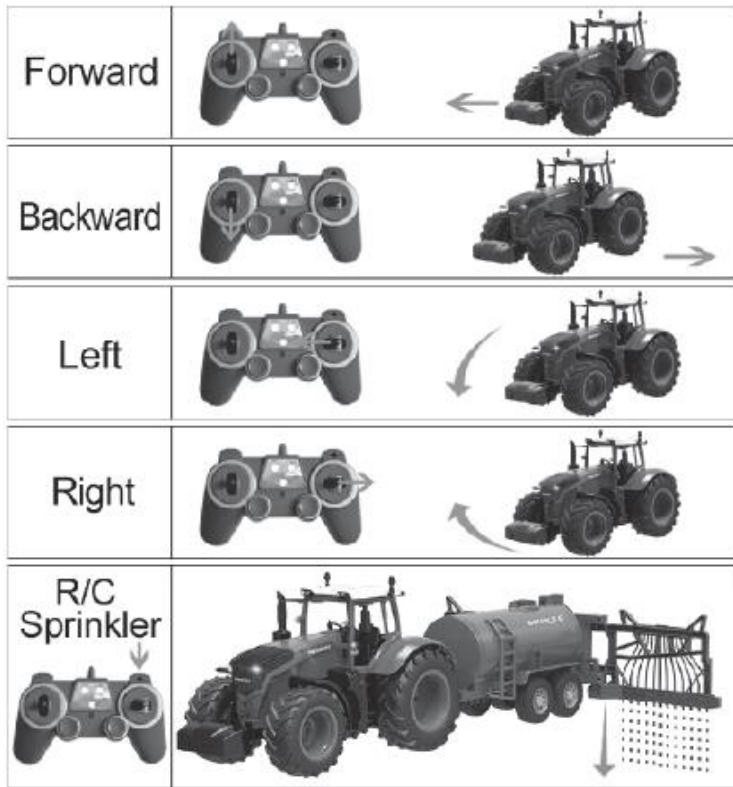

5 Advanced features

1. Auto-OFF:

- After starting, the truck would automatically shut down without receiving any signal in 60 seconds. To reactivate by pressing any keys.

2. Multi-playing Function

- Products could be played together at the same time since they are remote controlled by 2.4G Hz frequency.

6 Recharging

Notice: Please turn the power switch to "OFF" position if the product will not be used for a long time. Take the batteries out of the remote controller and the truck if they will be stored for a long time.

7 Notice

1. Don't play the toy on the road, select a safe place for operating to avoid dangerous.
2. Playing the toy in water may cause short-circuit damage. Please use the dry cloth to clean the car.
3. If abnormal speed or reaction, it may be because of insufficient battery power, please replace new batteries.
4. Please install the battery in a correct polarity.
5. Do not mix new and old batteries together, short-circuited.
6. Don't break the remote-control antenna to prevent injury.

CHOKING HAZARD - small parts. Not suitable for children under 3 years.

Specifications, colors and contents may vary from illustration.