


SHARPER IMAGE®

POTTED PLANT MOVER

Item No. 206993

User Guide

Thank you for purchasing the Sharper Image Potted Plant Mover. This device will allow you to move heavy pots and planters with ease. Please take a moment to read this User's Guide and store it for future reference.

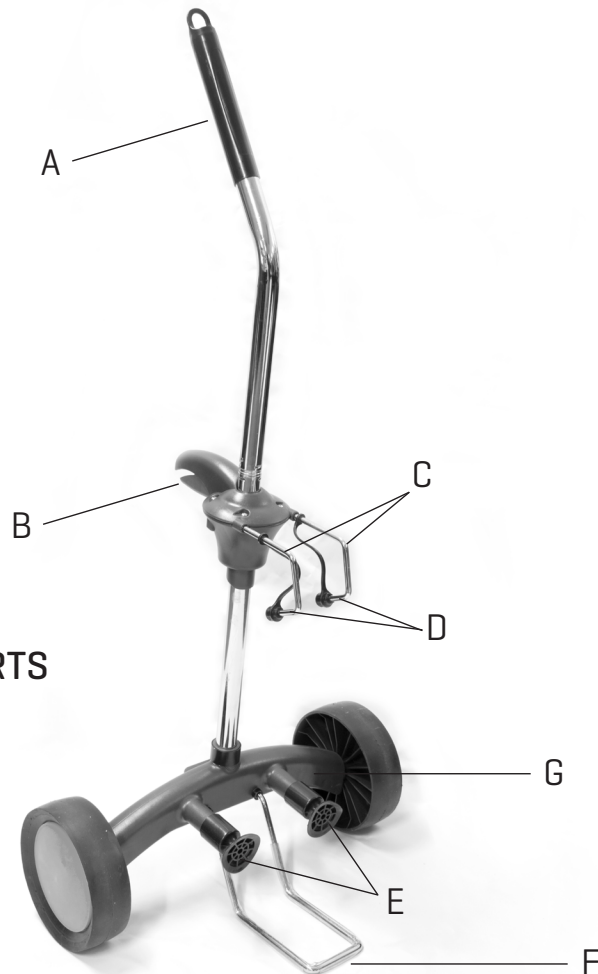







IDENTIFICATION OF PARTS

- A. Handle pole
- B. Movable trigger handle
- C. Trigger handle forks
- D. Protective caps
- E. Suction cups
- F. Pot support fork
- G. Wheeled base



ASSEMBLING THE POTTED PLANT MOVER





1. Twist the top of the handle pole onto the bottom of the handle pole. Secure the assembled handle pole with the 2 included small screws. Tighten the screws with the included Allen wrench [FIG. 1].
2. Squeeze the trigger on the movable trigger handle and slide it onto the assembled handle pole. **PLEASE NOTE:** The trigger handle forks should be pointing downward [FIG. 2].
3. Take the assembled handle and insert it into the wheeled base. **PLEASE NOTE:** The trigger handle forks should be facing the same direction as the suction cups on the wheeled base. Secure the handle pole to the wheeled base with the included Phillips head screw [FIG. 3].
4. Insert the pot support fork into the wheeled base [FIG. 4].

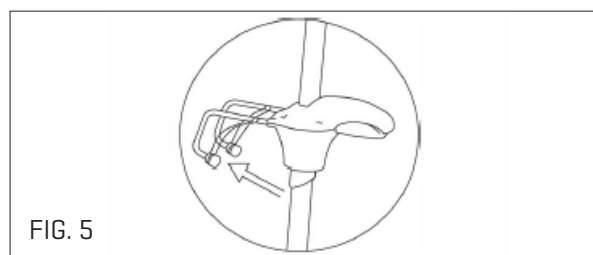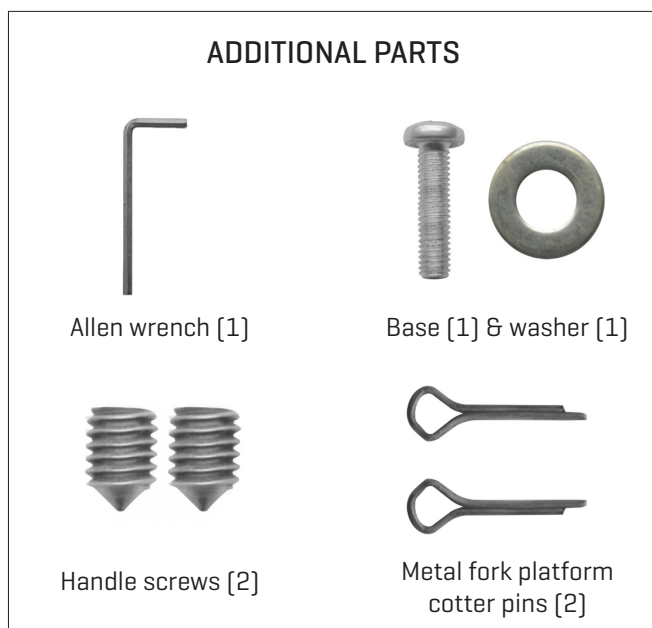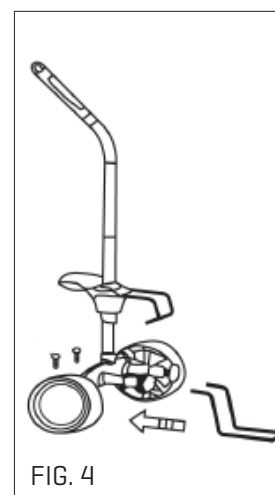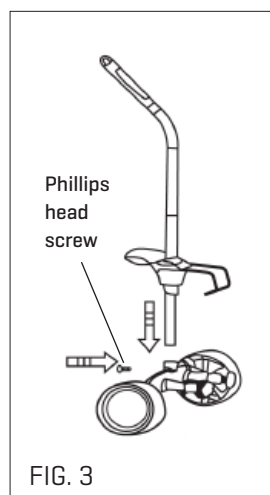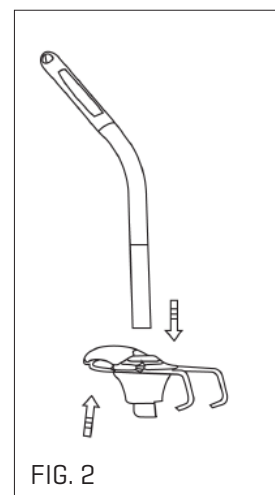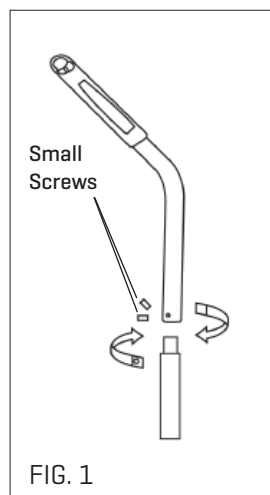

MOVING HEAVY POTS

NOTE: Before moving any pots, please make sure the plastic protective caps are covering the metal ends of the trigger handle forks. This will prevent scratches and damage to your pots [FIG. 5].

1. Position the assembled Potted Plant Mover so that the suction cups come into contact with the base of the pot you wish to move [FIG. 6].
2. Squeeze the trigger and slide the movable trigger handle downward so that the trigger handle forks are able to grab the edge of the pot [FIG. 7].
3. Using your foot, gently push forward on the bottom of the Potted Plant Mover, while at the same time pulling back on the handle pole [FIG. 8].
4. When you reach your destination, gently lower the pot down to the ground [FIG. 9].

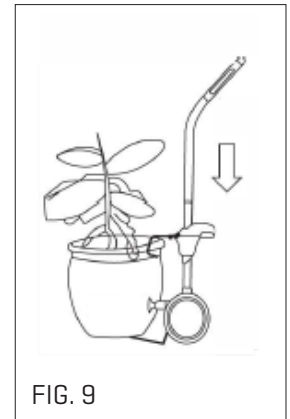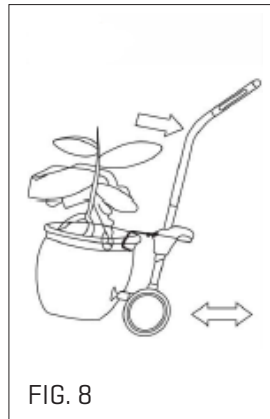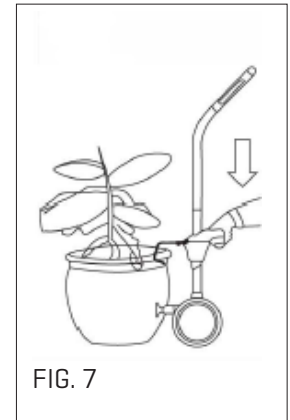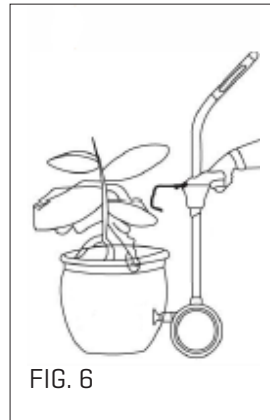

WARNING

- Always use caution when lifting heavy objects and using the Potted Plant Mover.
- Avoid sloped surfaces while using the Potted Plant Mover.
- Do not allow children to use or play with the Potted Plant Mover. It is not a toy.
- Do not use the Potted Plant Mover to transport people or animals.
- This device is designed for pots 7.9" to 29.5" tall.
- The maximum weight capacity is 165 lbs. Do not overload this device.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

