



ALTISET II is a trademark of LB Altimeters, Denmark

LB Altimeters operates a policy of continuous development
Therefore, we reserve the right to make changes and improvements to any of the
products described in this guide without prior notice



WARNING

The **ALTISET II**, and all compatible units, are intended to be a backup device and must not be relied upon as your primary means of maintaining altitude awareness.
Use the **ALTISET II**, and all compatible units, at your own risk

Altimeters may give erroneous readings if you are tumbling or the altimeter is in a burble (wake). Chest mount altimeters are more vulnerable to this problem compared to hand/wrist mounted altimeters. If you are in doubt about how this limitation affects your skydiving, consult a licensed instructor

DO NOT use this equipment unless you are currently participating in, or have successfully passed, an approved skydiving course

Please read ALL instructions carefully prior to use

Any **ALTISET II** compatible unit must be switched **ON** prior to entering the airplane



CONTENTS

CONTENTS 2

INTRODUCTION..... 3

 Features..... 3

 Functions 3

DESCRIPTION 3

TURN UNIT ON / OFF 3

 Turn unit ON..... 3

 Turn unit OFF..... 3

DISPLAY 4

 Startup 4

 Main window..... 4

 Value window 4

 Battery Indicator 4

MENU OVERVIEW..... 5

 ALL SETTINGS 5

 ALFA SETTINGS 5

 ECHO SETTINGS..... 5

NAVIGATING MENUS / INPUT VALUES 5

ALL SETTINGS..... 6

 Basic Settings 6

ALFA SETTINGS..... 7

 Date / Time..... 7

 ALFA Setup 7

 Turn OFF ALFA 8

 Return ALFA to Factory Default settings 8

 Reset ALFA..... 8

ECHO SETTINGS 9

 Memory Bank Selection 9

 Warning Altitude Selection 9

 ECHO Setup..... 10

 Test ECHO 10

 Turn OFF ECHO 10

 Return ECHO to Factory Default settings..... 10

 Reset ECHO 11

FUNCTIONALITY 12

 IR Mode Activation – ALFA and ECHO 12

 IR Mode Activation – MIL AltiTrack..... 12

MAINTENANCE..... 13

 Reset ALTISET II..... 13

 Battery Change..... 13

 Trouble Shooting 13

SPECIFICATIONS 14

WARRANTY 15

WAIVER OF LIABILITY..... 15

QUICK START & ROAD MAP 16



INTRODUCTION

The **ALTISET II** remote control is an optional accessory developed by LB Altimeters, compatible with Military AltiTrack, ALFA and ECHO altimeters. It can be used to change settings on a single or multiple compatible units, accurately and efficiently by a single operator.

The **ALTISET II** remote control must be in line of sight within 30 cm/10 inch of the IrDA transceiver.

Features

- IrDA communication
- OLED menu screen
- Water proof and shock resistant aluminum casing with reinforced glass
- Intuitive menu system for ease of use

Functions

- User selection of Basic Settings for all compatible units:
 - o mBar Offset
 - o Backlight Settings
- User selection of Settings for ALFA:
 - o Feet / meter and mph / kmh
 - o Date / Time
 - o Jump Counter
 - o RESET / Turn OFF
- User selection of Settings for ECHO:
 - o Feet / meter
 - o Pre-set Modes:
 - Tandem
 - Student
 - Expert
 - o Warnings
 - o RESET / Turn OFF

DESCRIPTION

- 1 Back / Value Down
- 2 Scroll Menu / Confirm Value
- 3 Forward / Value Up
- 4 OLED Display
- 5 IrDA port
- 6 IR indicator - LINKED
- 7 Battery indicator - BATT
- 8 Battery compartment
- 9 Reset button

TURN UNIT ON / OFF

Turn unit ON

With the unit OFF, press any button to turn unit ON and enter main window

Turn unit OFF

The **ALTISET II** automatically returns to the main window if no button has been pressed within 1 minute, and IR transmit is not active

The **ALTISET II** automatically switches OFF if no button has been pressed within 2 minutes, and IR transmit is not active



DISPLAY

Startup

When turning ON **ALTISET II**, the unit will display the main window

Main window

The main window is the default window after the unit is turned ON, and starting point for any actions

- 1


Headline / Current Window
- 2

Menu Item 1
- 3

Menu Item 2
- 4

Menu Item 2
- 5

Menu Forward / Value

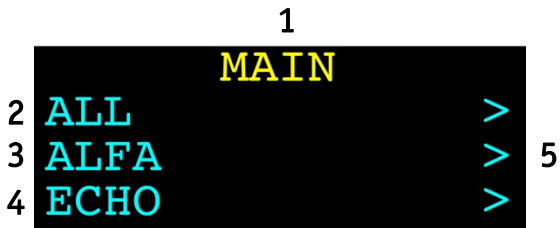


Value window

The value window appears when selecting a numeric value for any Settings

- 1

Headline / Current Setting
- 2

Value of Setting

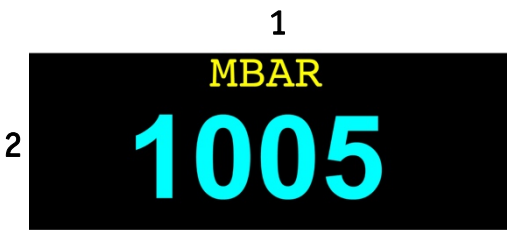

Battery Indicator

The battery indicator BATT will flash when the battery level is low.

The batteries must be replaced as soon as possible



ALL SETTINGS

ALL Settings are used to setup the basic Settings for all compatible LB altimeters

Turn on **ALTISET II** or use  to return to main window
Press  to scroll to select ALL
Press  to move forward to ALL Settings




Basic Settings

The following values can be changed:

- MBAR:** OFFSET mBar value
- BACKLIGHT:** Backlight ON / OFF
- INTENSITY:** Backlight intensity level (1-10)

Press  to scroll to each individual value
Press  to select and enter value

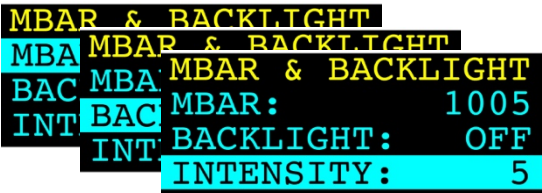

Press  or  to change the value
Press  to confirm



Once all values have been entered, press  to scroll to select TRANSMIT
Press  to start IrDA transmission, and point towards LB altimeter set in IrDA transceiver mode



ALFA SETTINGS

ALFA Settings are used to setup the ALFA digital Altimeter

Turn on **ALTISET II** or use  to return to main window
Press  to scroll to select ALFA
Press  to move forward to ALFA Settings



Date / Time

Press  to scroll to select DATE / TIME
Press  to move forward to Date / Time Settings



The following values can be changed:

YEAR:	The current year	HOUR:	The current hour
MONTH:	The current month	MINUTE:	The current minute
DAY:	The current day		

Press  to scroll to each individual value
Press  to select and enter value




Press  or  to change the value

Press  to confirm



Once all values have been entered, press  to scroll to select TRANSMIT
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode

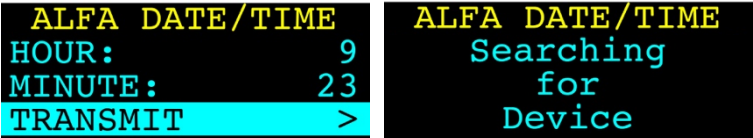

ALFA Setup

Press  to scroll to select SETUP
Press  to move forward to ALFA Setup



The following values can be changed:

COUNTER:	Daily Counter	DIVE TYPE:	Dive Type
ALT.UNIT:	Feet / meter		
SPEED:	Mph / Kmh		

Press  to scroll to each individual value
Press  to select and enter value




Press  or  to change the value

Press  to confirm



Once all values have been entered, press  to scroll to select TRANSMIT
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode

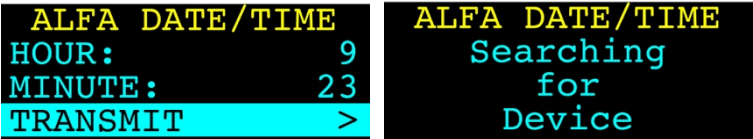

Turn OFF ALFA

Selecting this option will turn **ALFA** OFF

Press  to scroll to select OFF
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode



Return ALFA to Factory Default settings

Selecting this option will return **ALFA** to Factory Default settings

Press  to scroll to select FACTORY D.
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode



Reset ALFA

Selecting this option will reset **ALFA**, with IrDA active

Press  to scroll to select RESET WITH IR
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode



ECHO SETTINGS

ECHO Settings are used to setup the ECHO digital Altimeter

Turn on **ALTISET II** or use to return to main window
Press to scroll to select ALFA
Press to move forward to ALFA Settings



Memory Bank Selection

Press to scroll to select WARNINGS
Press to move forward to WARNINGS



The following menus can be selected:


- STUDENT: Enter Warning altitudes for Student Memory Bank
- TANDEM: Enter Warning altitudes for Tandem Memory Bank
- EXPERT : Enter Warning altitudes for Expert Memory Bank

After making changes, Memory Banks can be transmitted individually from inside their respective menu, or all at once by moving back to the Memory Bank Selection


Press to scroll to each individual Memory Bank
Press to select the individual Memory Bank



Press or to move back or forward between Memory Banks

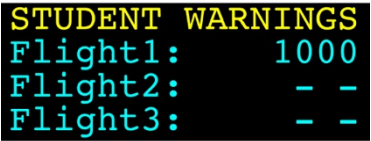


To transmit all Memory Banks, press to scroll to select TRANSMIT ALL
Press to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode

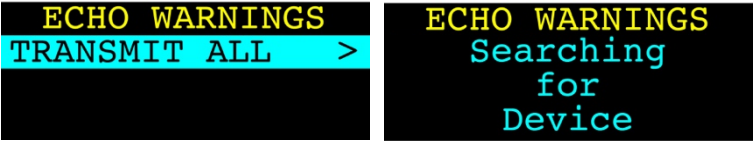

Warning Altitude Selection

Press to scroll to select one of the 12 Warning altitudes for the selected Memory Bank
Press to move forward and input value for the selected Warning altitude


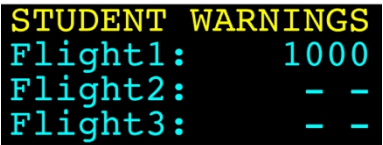


The following Warnings can be selected in each Memory Bank:


- Flight1 – Flight4: Enter Warning altitudes for Aircraft Alarms
- H-speed1 – H-speed4: Enter Warning altitudes for Freefall Alarms
- Canopy1– Canopy4 Enter Warning altitudes for Canopy Alarms

If no value is added, the Warning will disabled.

Press to scroll to each individual Warning
Press to select and enter the individual altitude

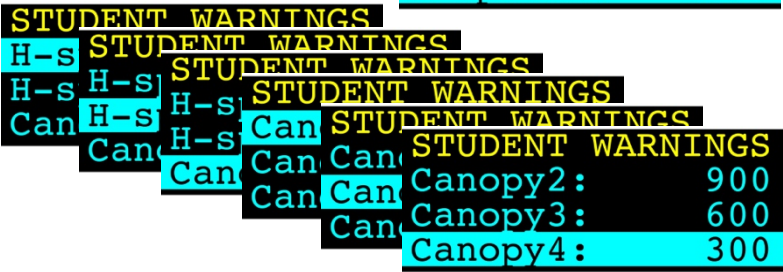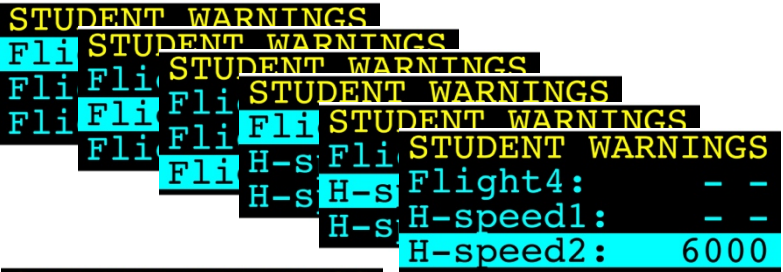

Press or to change the altitude

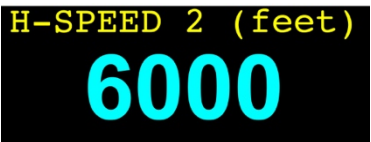

Press to confirm

Once all values have been entered, press to scroll to select TRANSMIT for current Memory Bank
Press to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode



ECHO Setup


Press  to scroll to select SETUP
Press  to move forward to ALFA Setup



The following values can be changed:

Mode:	Current Mode/Memory Bank	ALT. UNIT:	Feet / Meter
LED FLASH:	Turn LED ON/OFF	PITCH:	Dive Type
SCROLL:	Turn Altitude Scroll ON/OFF	GUIDE:	Canopy Guide ON/OFF

Press  to scroll to each individual value
Press  to switch value, or select and enter value

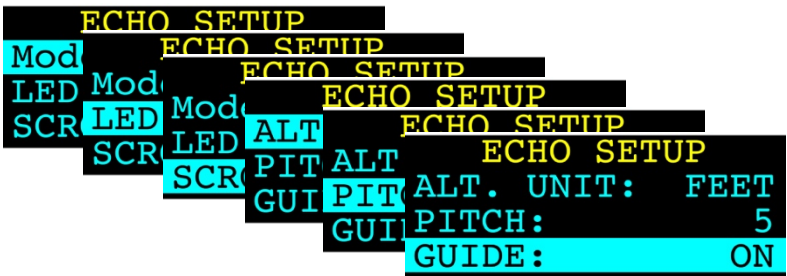

Press  or  to change the value

Press  to confirm (if applicable)




Once all values have been entered, press  to scroll to select TRANSMIT
Press  to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode



Test ECHO

Selecting this option will test the **ECHO Warnings**


Press  to scroll to select TEST
Press  to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode

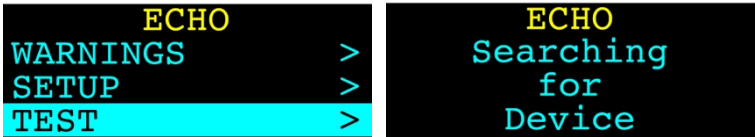

Turn OFF ECHO

Selecting this option will turn **ECHO** OFF


Press  to scroll to select OFF
Press  to start IrDA transmission, and point towards any **ALFA** set in IrDA transceiver mode

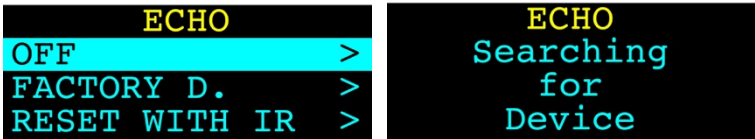

Return ECHO to Factory Default settings

Selecting this option will return **ECHO** to Factory Default settings

Press  to scroll to select FACTORY D.
Press  to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode

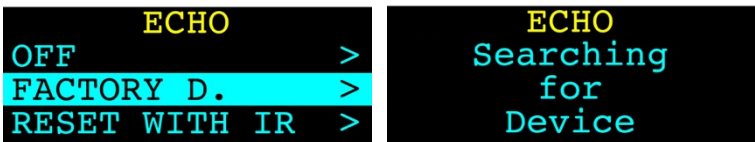

Reset ECHO

Selecting this option will reset **ECHO**, with IrDA active

Press  to scroll to select RESET WITH IR
Press  to start IrDA transmission, and point towards any **ECHO** set in IrDA transceiver mode

ECHO
OFF >
FACTORY D. >
RESET WITH IR >

ECHO
Searching
for
Device



FUNCTIONALITY

IR Mode Activation – ALFA and ECHO

Activate/Deactivate IR Mode on ALFA and ECHO digital altimeters, for communication with **ALTISET II** remote control



Press and hold  for 5 seconds

IR will flash on LCD, and IR mode is active for 2 minutes

Activate IR Mode on **ALFA / ECHO**
Activate IR Mode on **ALTISET II**

Point the **ALTISET II** at the IR port on **ALFA / ECHO**
ALFA / ECHO adjusts to the **ALTISET II** preset parameters

Press  to exit IR mode

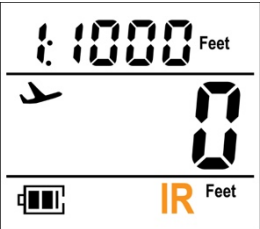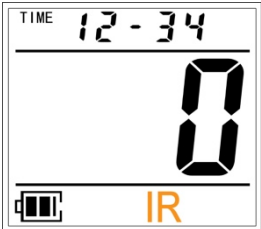

IR Mode Activation – MIL AltiTrack

Activate/Deactivate IR Mode on MIL AltiTrack digital altimeter, for communication with **ALTISET II** remote control

Press and hold left front button for 5 seconds

OLED displays ‘IR ACTIVE’ and IR mode is active for 2 minutes

Activate IR Mode on **MIL AltiTrack**
Activate IR Mode on **ALTISET II**

Point the **ALTISET II** at the IR port on the **MIL AltiTrack**
MIL AltiTrack adjusts to the **ALTISET II** preset altitude and/or backlight

Press  to exit IR mode



ALTISET II - Rev. 1.01

Page 12 of 16

MAINTENANCE

Reset ALTISET II

A reset may be necessary for troubleshooting and firmware verification

*Locate the button on the backside of the battery compartment
Use a paper clip or similar to press and release button
Battery system calibrates*

The firmware version and battery voltage will be displayed after reset




Battery Change

Only use SANYO 2CR-1/3N batteries, or equivalent (2 ea.)

Battery cover screw specs: M3/T6 head (4.5mm length)

*Remove the 6 screws and back cover
Remove both batteries by pushing down the battery holder to release
Install 2 new batteries into battery holders
Place battery holders into print from the front, with attention to polarity
Install back cover, and ensure rubber seal is in correct placement
Place and tighten 6 screws, using a torque screwdriver set **0.4 Nm***

*Reset **ALTISET II** after battery replacement*

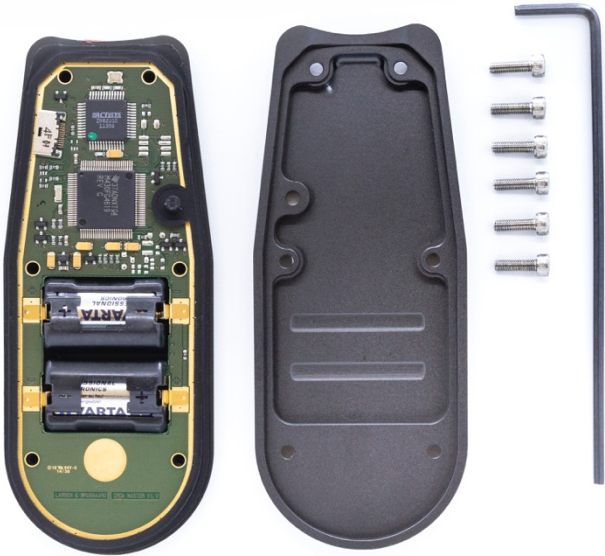

WARNING: The battery cover and seal must be installed correctly, using correct screws and torque

Trouble Shooting

If the **ALTISET II** detects an issue, an error symbol is shown (ERR) with a number on the OLED screen

*Always restart **ALTISET II** to attempt to remedy a single ERR code*

If the ERR code persists, then also perform battery change

If the **ALTISET II** is still faulty after reset and battery change , it must be serviced by an LB Altimeters Service Center



SPECIFICATIONS

Mechanical:	
Casing:	Rugged, precision machined aircraft aluminum
Screen glass:	Scratch proof lens made of high impact etched glass
Dimensions:	120mm x 50mm x 18mm
Weight:	136g
OLED viewing area:	4.2 cm ²
MIL AltiTrack IrDa compatible:	Yes
ALFA IrDa compatible:	Yes
ECHO IrDa compatible:	Yes
Other:	
IrDa transmission range:	Maximum 30 cm/ 10 inches
Operating altitude:	0 to 40,000 ft. (0 to 12,200 m)
Storing Temperature:	-20C to +70C
Operating Temperature Range:	-35C to +80C continuous operation
Storing Pressure:	200 to 1075 mbar
Maximum allowable humidity:	Up to 99,9% relative humidity
Waterproof:	No
Water resistant:	Yes
Battery type:	2 x SANYO 2CR-1/3N batteries, or equivalent
L&B part no.:	801000
NATO Stock no.	5820-22-616-5040



WARRANTY

The following conditions apply to the **ALTISET II** warranty:

If within 12 months of the purchase of **ALTISET II** a defect or damage is identified by faulty manufacture, LB ALTIMETERS will repair the unit at no cost to the end user


To make a claim under this warranty, send the unit to an authorized dealer or directly to LB ALTIMETERS together with the dated purchase invoice or receipt. The warranty becomes void if damage is caused by external circumstances or if the unit has been serviced or repaired by third parties unauthorized by our national agents or LB ALTIMETERS. All further claims, especially for defects after skydiving accidents, are excluded. LB ALTIMETERS has no obligation to honor any extension of warranty granted by any national agent

WAIVER OF LIABILITY


The buyer and user of the **ALTISET II** indemnify the manufacturer and vendor from any liability for damage incurred before, during and after skydiving with the instrument



Navigating Menus

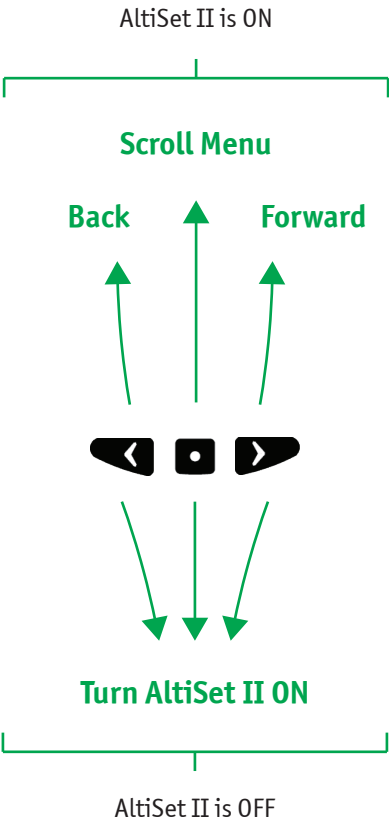

Input Values

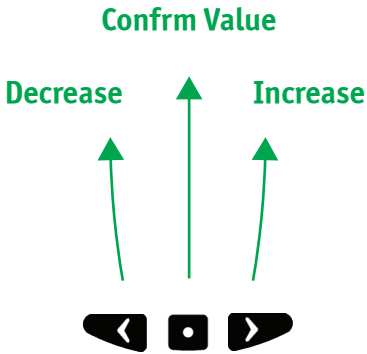

SETTINGS menu for ALL units

MAIN

ALL >

ALFA >

ECHO >

Scroll to ALL using



MAIN

ALL >

ALFA >

ECHO >

Press to step forward into ALL menu



MBAR & BACKLIGHT

MBAR: 1005

BACKLIGHT: OFF

INTENSITY: 5

TRANSMIT >

Scroll to menu items using

SETTINGS menu for ALFA units

MAIN

ALL >

ALFA >

ECHO >

Scroll to ALFA using



MAIN

ALL >

ALFA >

ECHO >

Press to step forward into ALFA menu



ALFA

DATE / TIME >

SETUP >

OFF >

ALFA

FACTORY D. >

RESET WITH IR >

Scroll to menu items using

SETTINGS menu for ECHO units

MAIN

ALL >

ALFA >

ECHO >

Scroll to ECHO using



MAIN

ALL >

ALFA >

ECHO >

Press to step forward into ECHO menu



ECHO

WARNINGS >

SETUP >

TEST >

ECHO

OFF >

FACTORY D. >

RESET WITH IR >

Scroll to menu items using

