


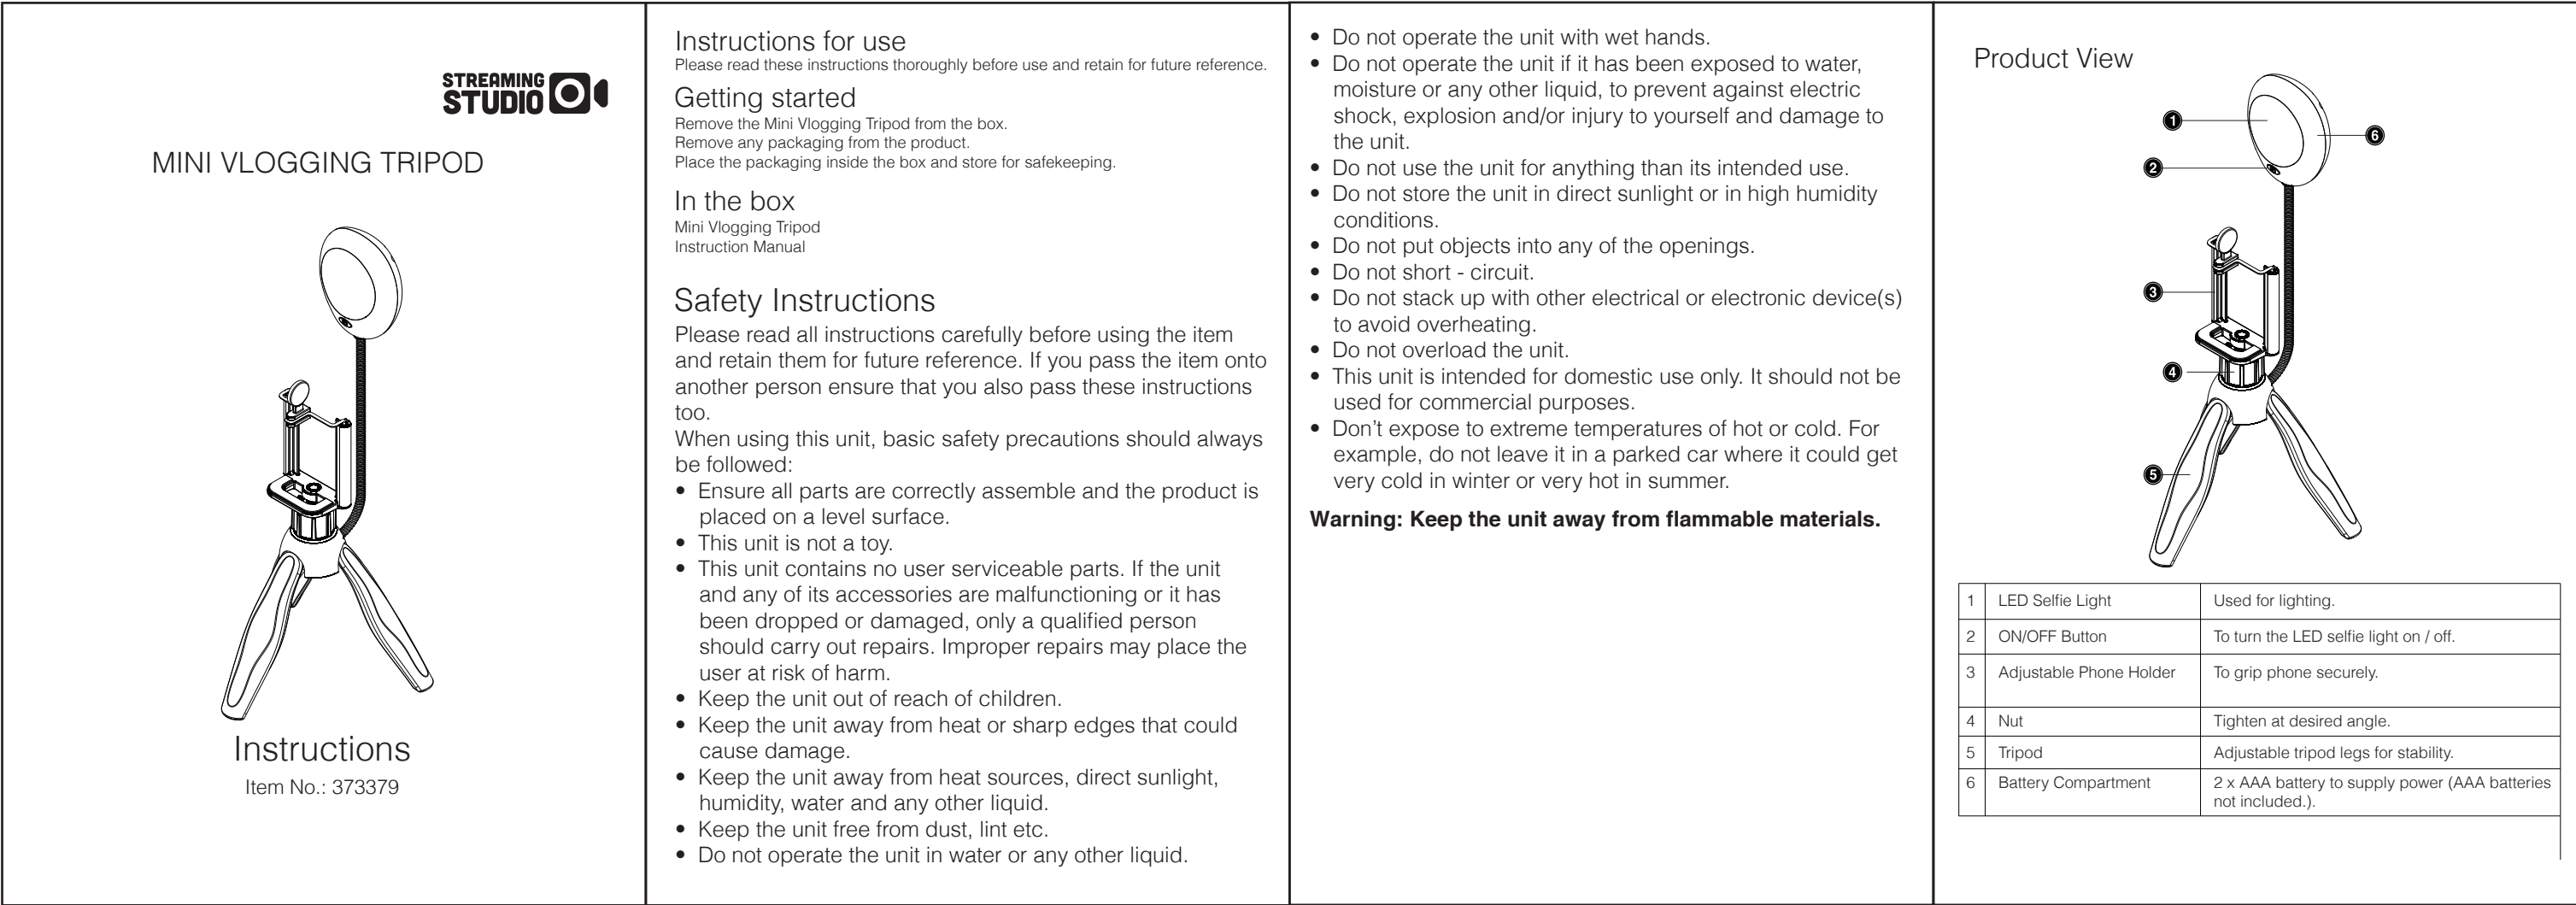

INSTRUCTIONS FOR USE Install the Phone Clips 1. Open the package and take out the main body and phone clips. 2. Unscrew the nut and fit the phone clips in, tighten the nut clockwise. Selfie Light 1. Place 2 X AAA batteries(not included) into rear compartment of the item. Extend all 3 legs to stand the tripod up. 2. Place your device in the cradle in the horizontal position. 3. Adjust the tripod legs as desired. 4. Press the power button 3 times to adjust brightness and 4 times to turn the light completely off. Cleaning and Maintenance If necessary, please use a soft cloth to clean the item. • Do not expose the item to liquid, moisture or humidity. • Do not use any abrasive cleaning solvents to clean the item, as this can cause damage. • Do not expose the item to sharp objects, which may cause damage. • Do not expose the item to extremely high or low temperatures. • Do not drop the item. • Do not attempt to dissemble the item, as this may cause damage to the unit. • Do not dispose of the item in the fire.	Storage Before storing the item, ensure that it is clean and dry. Store in a cool and dry place. Please remove the batteries when then item is not in use. Do's and Don'ts Read the following recommendations before using the item. Following these you will be able to enjoy the product for many years. • Avoid direct spray of liquids. Do not immerse in any liquids. • Don't use abrasive cleaning solvents to clean the item. • Do not expose the item to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts. • Don't dispose of the item in a fire as it will result in an explosion. • Don't expose the item to contact with sharp objects as this will cause scratches and damage. • Don't let the item drop on to the floor. The internal circuitry might get damaged. • Don't attempt to disassemble the item as it may get damaged if you are not professional. • Do not expose the item to heat or fire. Avoid storage in direct sunlight. • Do not subject the item to mechanical shock. • Do not add any fluids or solids to your item. • Do not use the product if it has been damaged in any way.	Specifications <table><tr><td>Model Number</td><td>373379</td></tr><tr><td>Battery Type</td><td>2xAAA Batteries (not included)</td></tr><tr><td>Input</td><td>3.0V</td></tr><tr><td>LED Light Power</td><td>2.4W</td></tr><tr><td>Lumens</td><td>25lumens</td></tr><tr><td>Color Temperature</td><td>6500-7000K</td></tr><tr><td>Phone Tongs Dimension</td><td>52mm-83mm</td></tr><tr><td>Weight</td><td>99g</td></tr></table> EC Declaration This product is intended for use within UK This product complies with the below listed EU Directives 2014/30/EU Electromagnetic Compatibility Directive 2011/65/EU Restriction of Hazardous Substances 2001/95/EC General Product Safety Directive The complete declaration of conformity is available upon request for relevant enquiries.	Model Number	373379	Battery Type	2xAAA Batteries (not included)	Input	3.0V	LED Light Power	2.4W	Lumens	25lumens	Color Temperature	6500-7000K	Phone Tongs Dimension	52mm-83mm	Weight	99g	Information on Waste Disposal for Consumers of Electrical & Electronic Equipment  This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).  Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.  Made in China B&M Retail Limited, Dakota Drive, Speke, Liverpool, L24 8RJ, UK Centz Stores 7 Limited, 5 Old Dublin Road, Dublin, A94 K1H5, Ireland
Model Number	373379																		
Battery Type	2xAAA Batteries (not included)																		
Input	3.0V																		
LED Light Power	2.4W																		
Lumens	25lumens																		
Color Temperature	6500-7000K																		
Phone Tongs Dimension	52mm-83mm																		
Weight	99g																		

1. Open the package and take out the main body and phone clips.
2. Unscrew the nut and fit the phone clips in, tighten the nut clockwise.

1. Place 2 X AAA batteries(not included) into rear compartment of the item. Extend all 3 legs to stand the tripod up.
2. Place your device in the cradle in the horizontal position.
3. Adjust the tripod legs as desired.
4. Press the power button 3 times to adjust brightness and 4 times to turn the light completely off.

- If necessary, please use a soft cloth to clean the item.
- Do not expose the item to liquid, moisture or humidity.
- Do not use any abrasive cleaning solvents to clean the item, as this can cause damage.
- Do not expose the item to sharp objects, which may cause damage.
- Do not expose the item to extremely high or low temperatures.
- Do not drop the item.
- Do not attempt to disassemble the item, as this may cause damage to the unit.
- Do not dispose of the item in the fire.

Before storing the item, ensure that it is clean and dry.
Store in a cool and dry place.
Please remove the batteries when the item is not in use.

Read the following recommendations before using the item.

Following these you will be able to enjoy the product for many years.

- Avoid direct spray of liquids. Do not immerse in any liquids.
- Don't use abrasive cleaning solvents to clean the item.
- Do not expose the item to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts.
- Don't dispose of the item in a fire as it will result in an explosion.
- Don't expose the item to contact with sharp objects as this will cause scratches and damage.
- Don't let the item drop on to the floor. The internal circuitry might get damaged.
- Don't attempt to disassemble the item as it may get damaged if you are not professional.
- Do not expose the item to heat or fire. Avoid storage in direct sunlight.
- Do not subject the item to mechanical shock.
- Do not add any fluids or solids to your item.
- Do not use the product if it has been damaged in any way.

Model Number	373379
Battery Type	2xAAA Batteries (not included)
Input	3.0V
LED Light Power	2.4W
Lumens	25lumens
Color Temperature	6500-7000K
Phone Tongs Dimension	52mm-83mm
Weight	99g

This product is intended for use within UK
This product complies with the below listed EU Directives

 
2014/30/EU Electromagnetic Compatibility Directive
2011/65/EU Restriction of Hazardous Substances
2001/95/EC General Product Safety Directive

The complete declaration of conformity is available upon request for relevant enquiries.

 This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



B&M Retail Limited, Dakota Drive, Speke, Liverpool, L24 8RJ, UK
Centz Stores 7 Limited, 5 Old Dublin Road, Dublin, A94 K1H5, Ireland