 


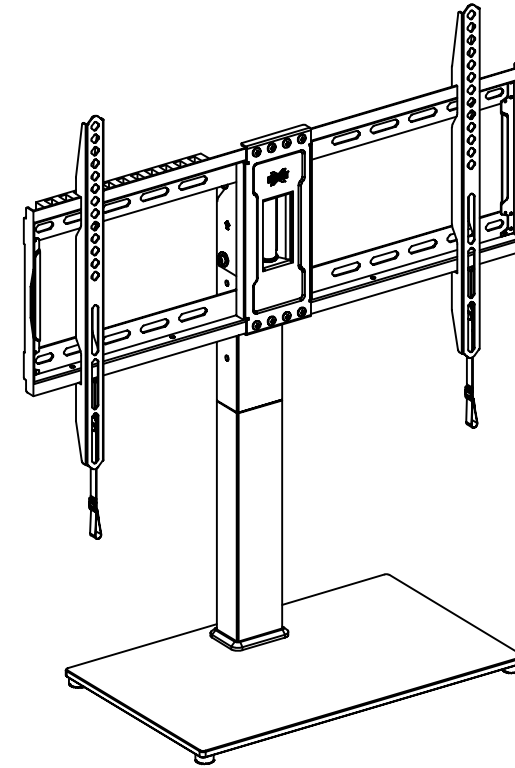

XAS309-1 INSTRUCTION MANUAL

For 37-70" TV

If you have any questions along the way, just give us a call
1-800-460-0956 or mail to customerservice@x-mount.com.

We're ready to help!





 
CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS.

Before getting started, let's check below lists to make sure it is just right for you!

Check your TV
VESA is within
Min and Max size

1

MAX:600mm/23.62"
(MIN:150mm/5.91")

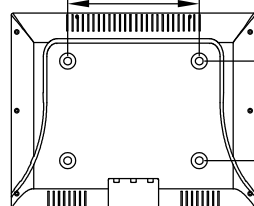

MAX:400mm/15.75"
(MIN:100mm/3.94")

No? This mount is NOT compatible.

Yes? Perfect !

Does your TV
(including accessories)
weigh MORE than
99 lbs. (45 kg)?

2



No? Perfect – you may continue.

 
Yes? This mount is NOT compatible.




CAUTION: DO NOT exceed the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories, causing possible injury.

Do you have
all the tools
needed?
(NOT INCLUDE)

3



Tape
Measure

 

Screw
driver

Please read this instruction carefully before installation.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please feel free to contact Customer Service:

E-mail: customerservice@x-mount.com

Phone call: 1-800-460-0956

 
CAUTION

4


- Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use

Dimensions


TV INTERFACE

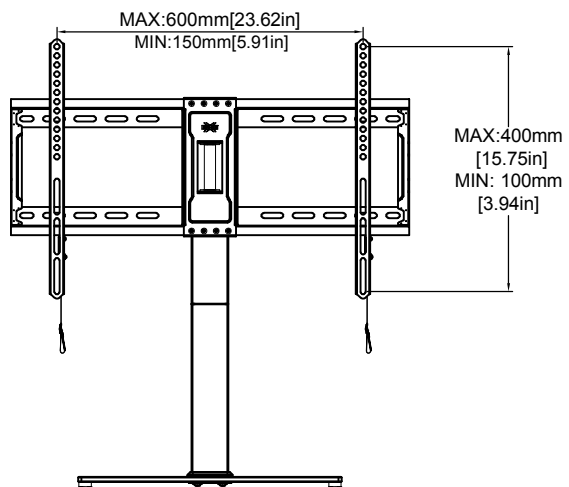



3D

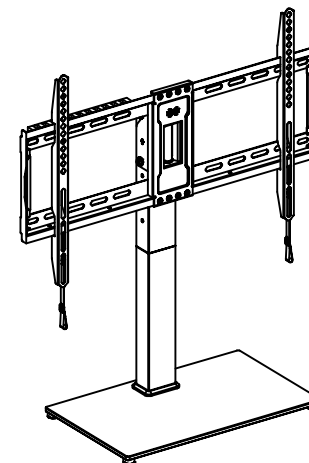 

TOP VIEW-RETRACTED

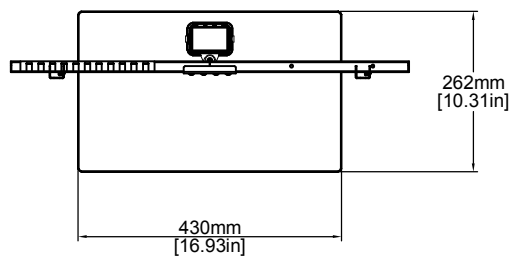 

SIDE VIEW

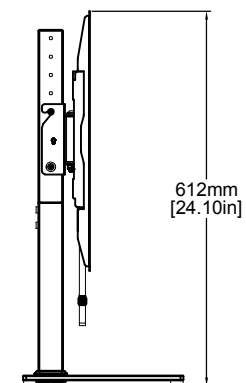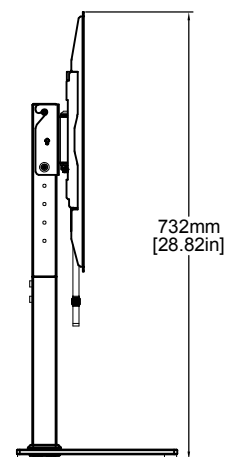  


Parts and Hardware

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service.
Never use damaged parts!


📋 NOTE: Not all hardware included will be used.

 Brackets



01 x2

 
Allen Key



02 x1


TV Screws

 M4x12mm




a x4

 M4x30mm



d x4

 M6x12mm




b x4

M6x35mm




e x4

 M8x25mm



c x4

 
M8x45mm



f x4


Spacers

 M8x22mm

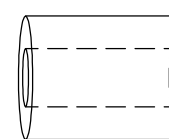

g x4

 10mm




h x4

2.5mm



i x8

 M6x17mm



j x4

Washers

M4



k x4

 
M6



l x4




Hardware for Products Assembly

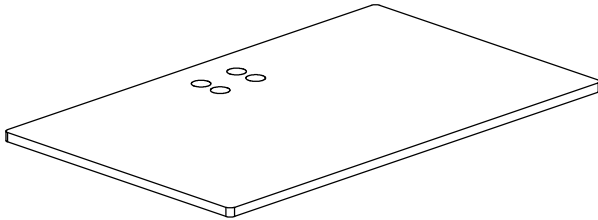


Glass Base

 03 x1




Plastic Sleeve

 04 x1




Iron Sheet

 05 x1

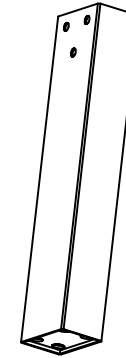


Lower Column

 06 x1

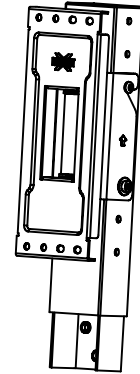


Upper Column

 07 x1

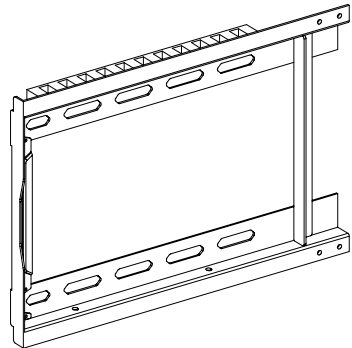

Left Wall Plate

 08 x1

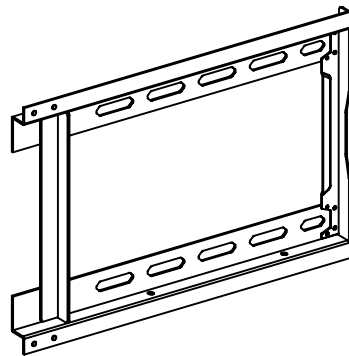

Right Wall Plate

09 x1



 
M5x8mm
Bolt

10 x8




M6x10mm
Bolt

11 x3



M8x30mm
Bolt

 12 x4

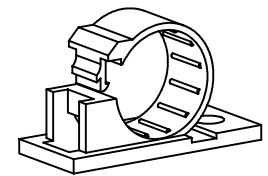







Cable Clips

13 x3

STEP 1 Attach Brackets to TV


1-1 Select TV Screws

      M4 M6 M8

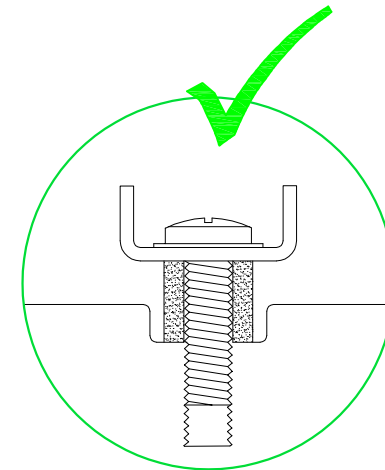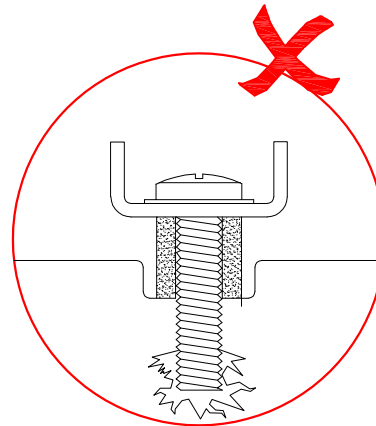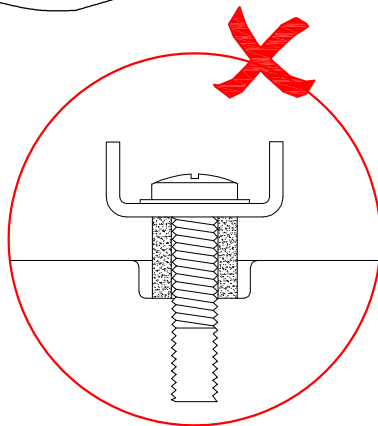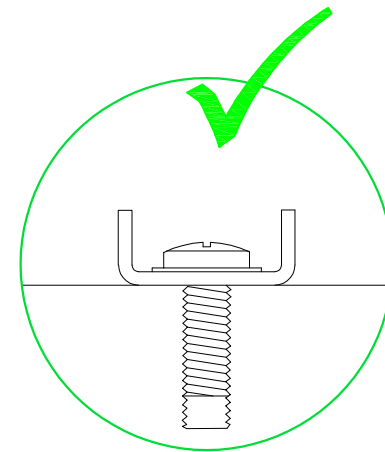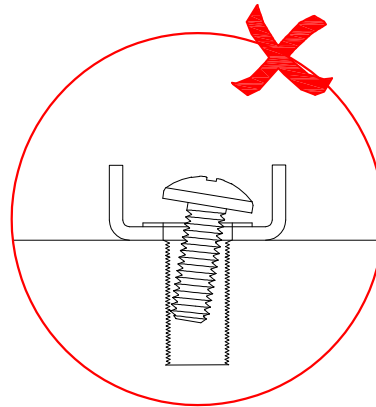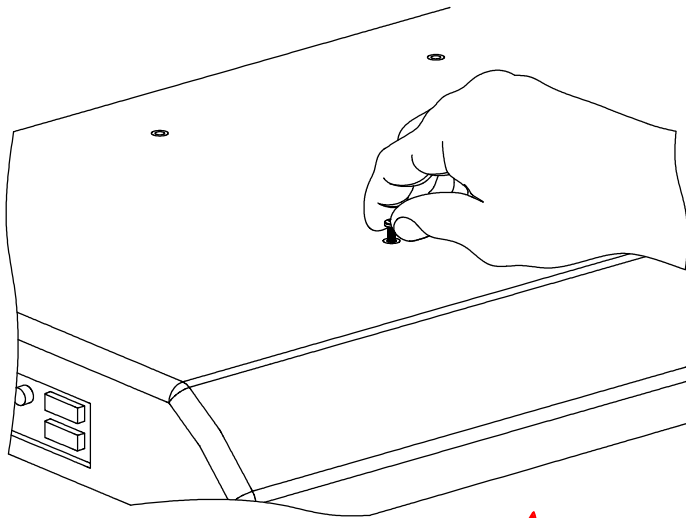


1-2 Figure out the suitable position of brackets

 LOW MOUNTING HOLES

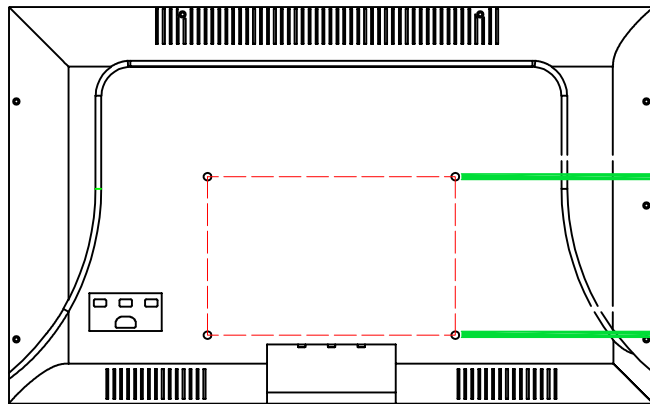


HIGH MOUNTING HOLES

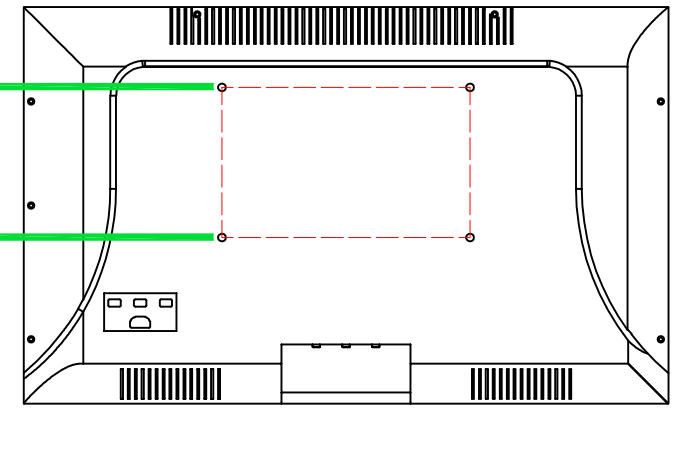 


01

  INSTALL UP/DOWN IF NEEDED

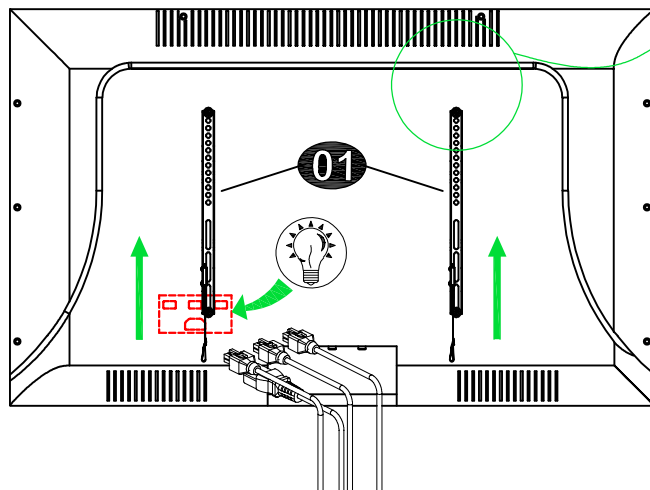


 TV BRACKETS MUST BE LEVEL

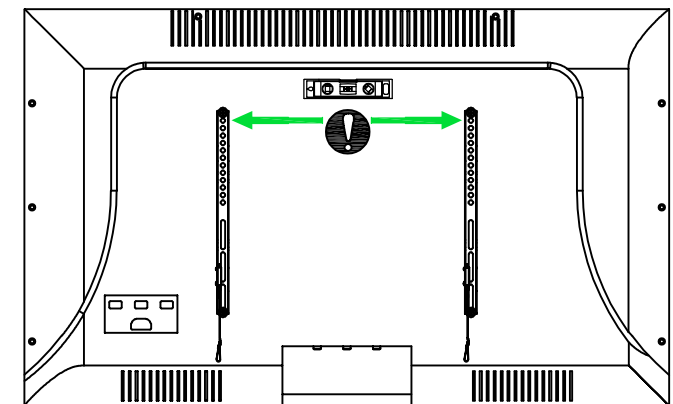 


1-3 Need Spacer?

 I No, choose suitable screws and washers.


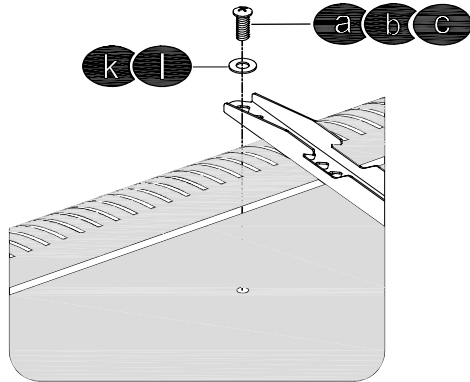


 II Yes, choose suitable screws, washers and spacers.

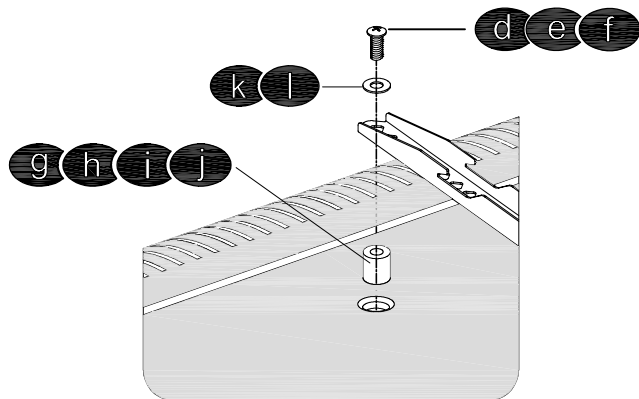

Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers(i), you have to remove the inner circle.

 
 
1-4 Attach the TV Plate

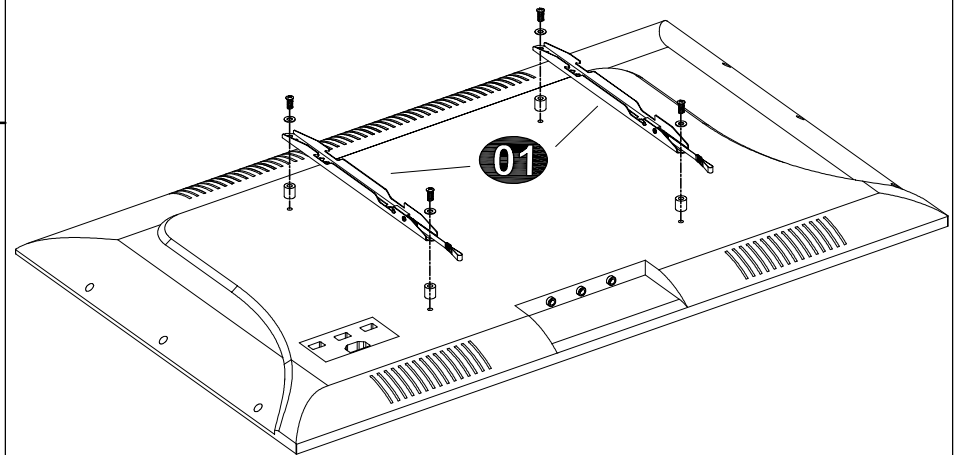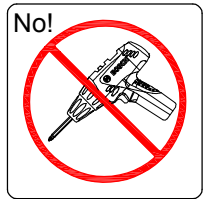

STEP 2 Column Installation



2-1 Assemble the column 06 on the glass base 03 through iron sheet 05 and plastic sleeve 04 with screws 12 and allen key 02.

  2-2 Assemble upper column 07 into column 06 using bolts 11.

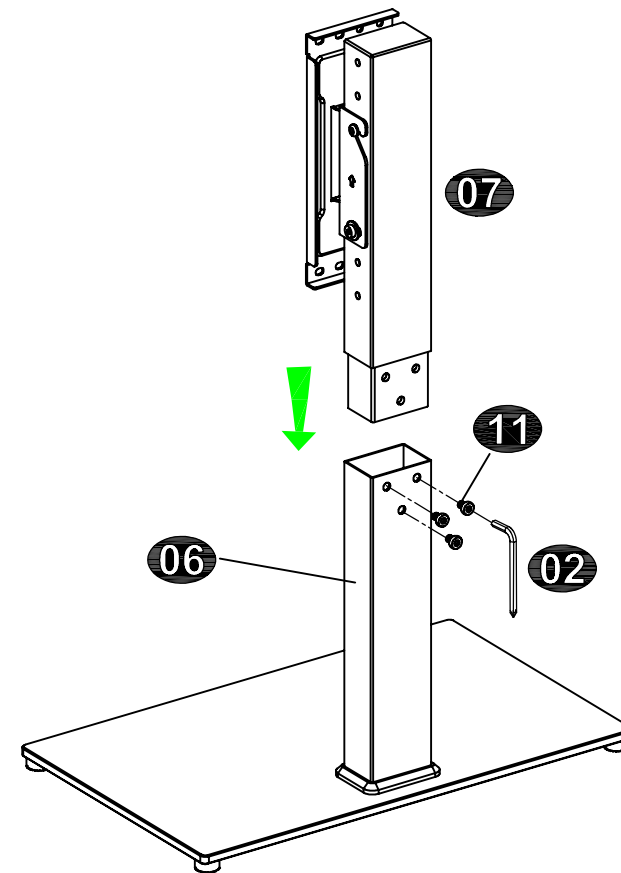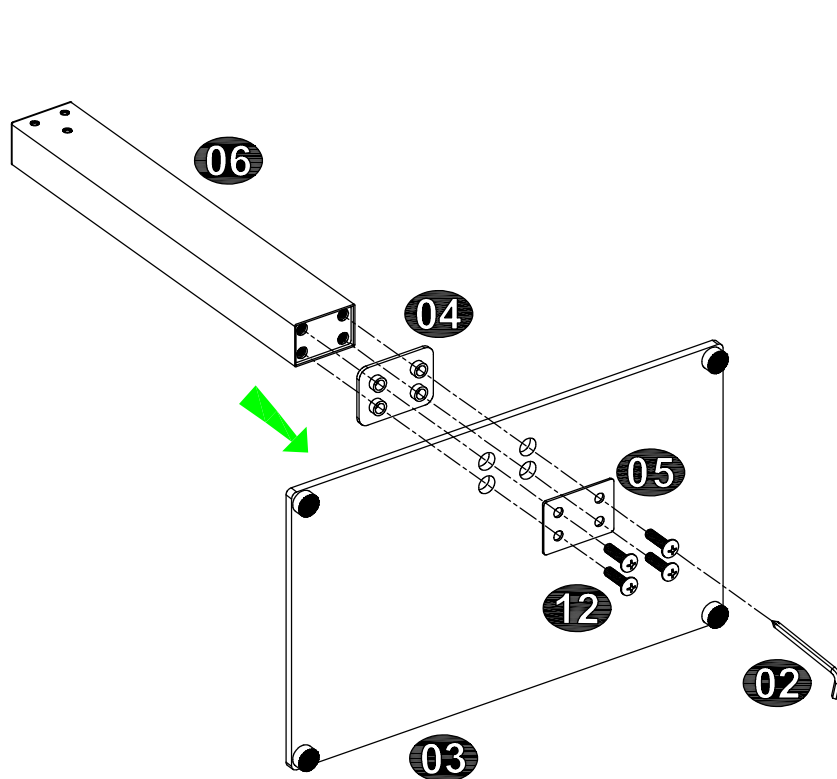


STEP 3 Hang and Secure Wall plates onto Pre-assembled Column Unit

  Using bolts **10** to connect left wall plate **08** and right wall plate **09** with pre-assembled column unit.

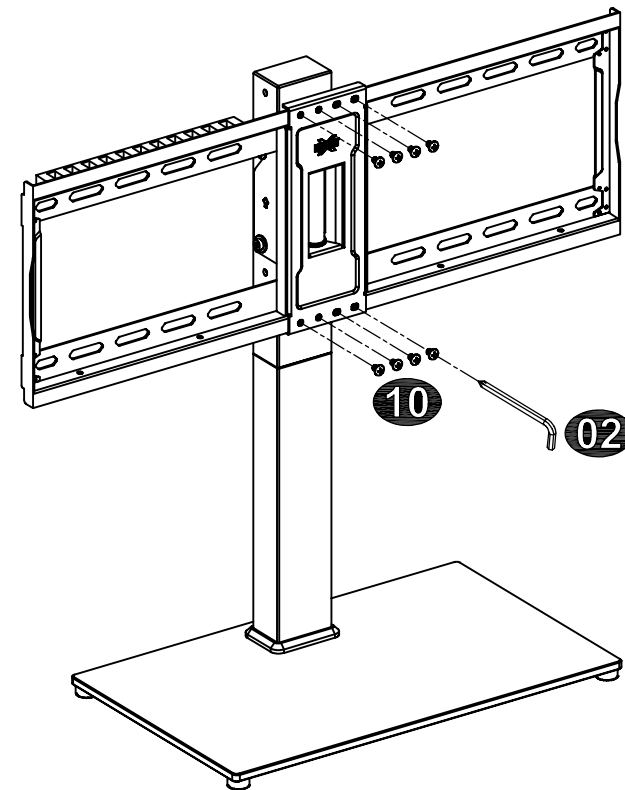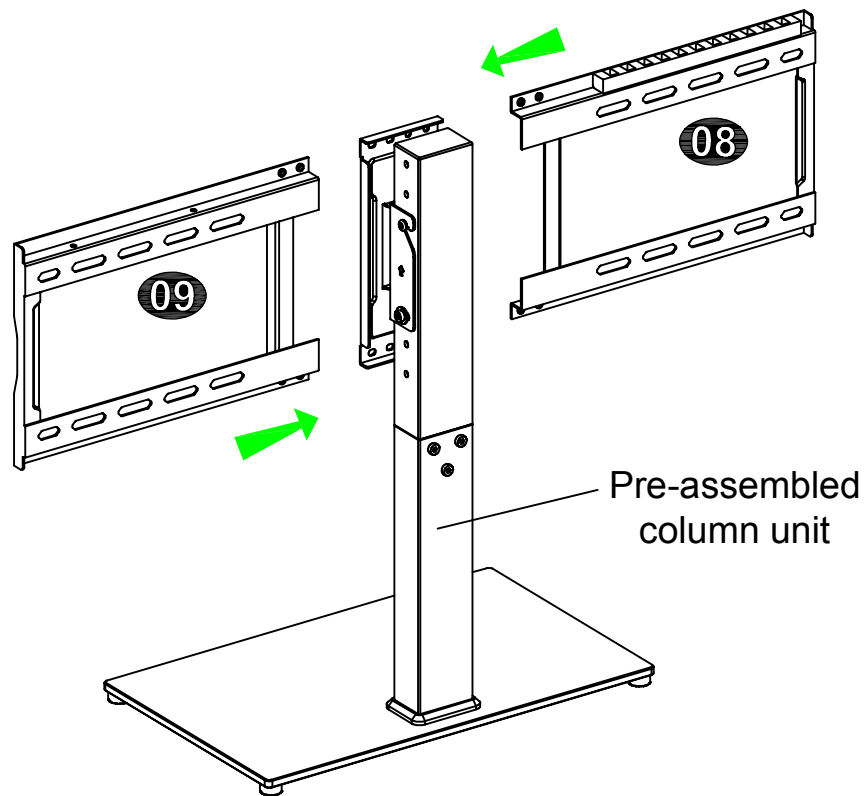

STEP 4 Hang and Secure TV Unit onto the Column

 
CAUTION: BRACKETS MUST BE PUT INTO LEFT WALL PLATE 08 FULLY!

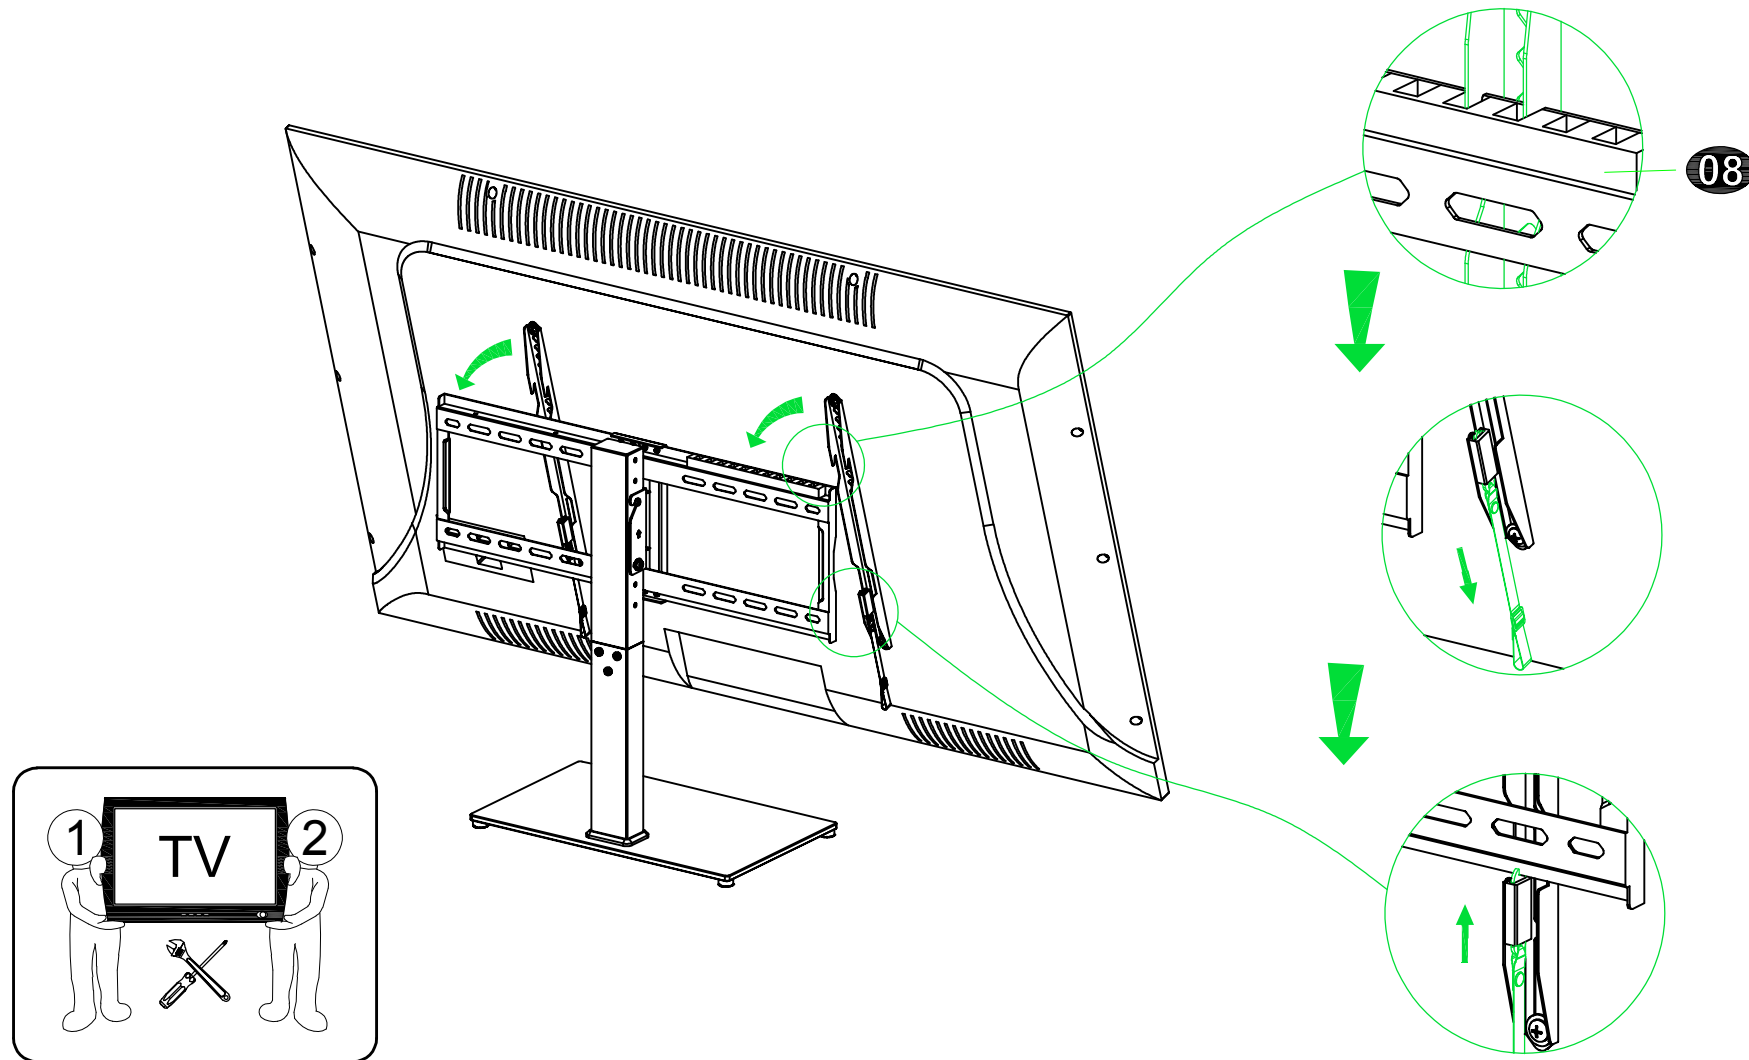

STEP5 Adjustments










5-1 TV Tilting up adjustment (+3°):

 If you need to tilt TV, you can loosen the bolts below and tilt up +3°. Then tighten the bolts.

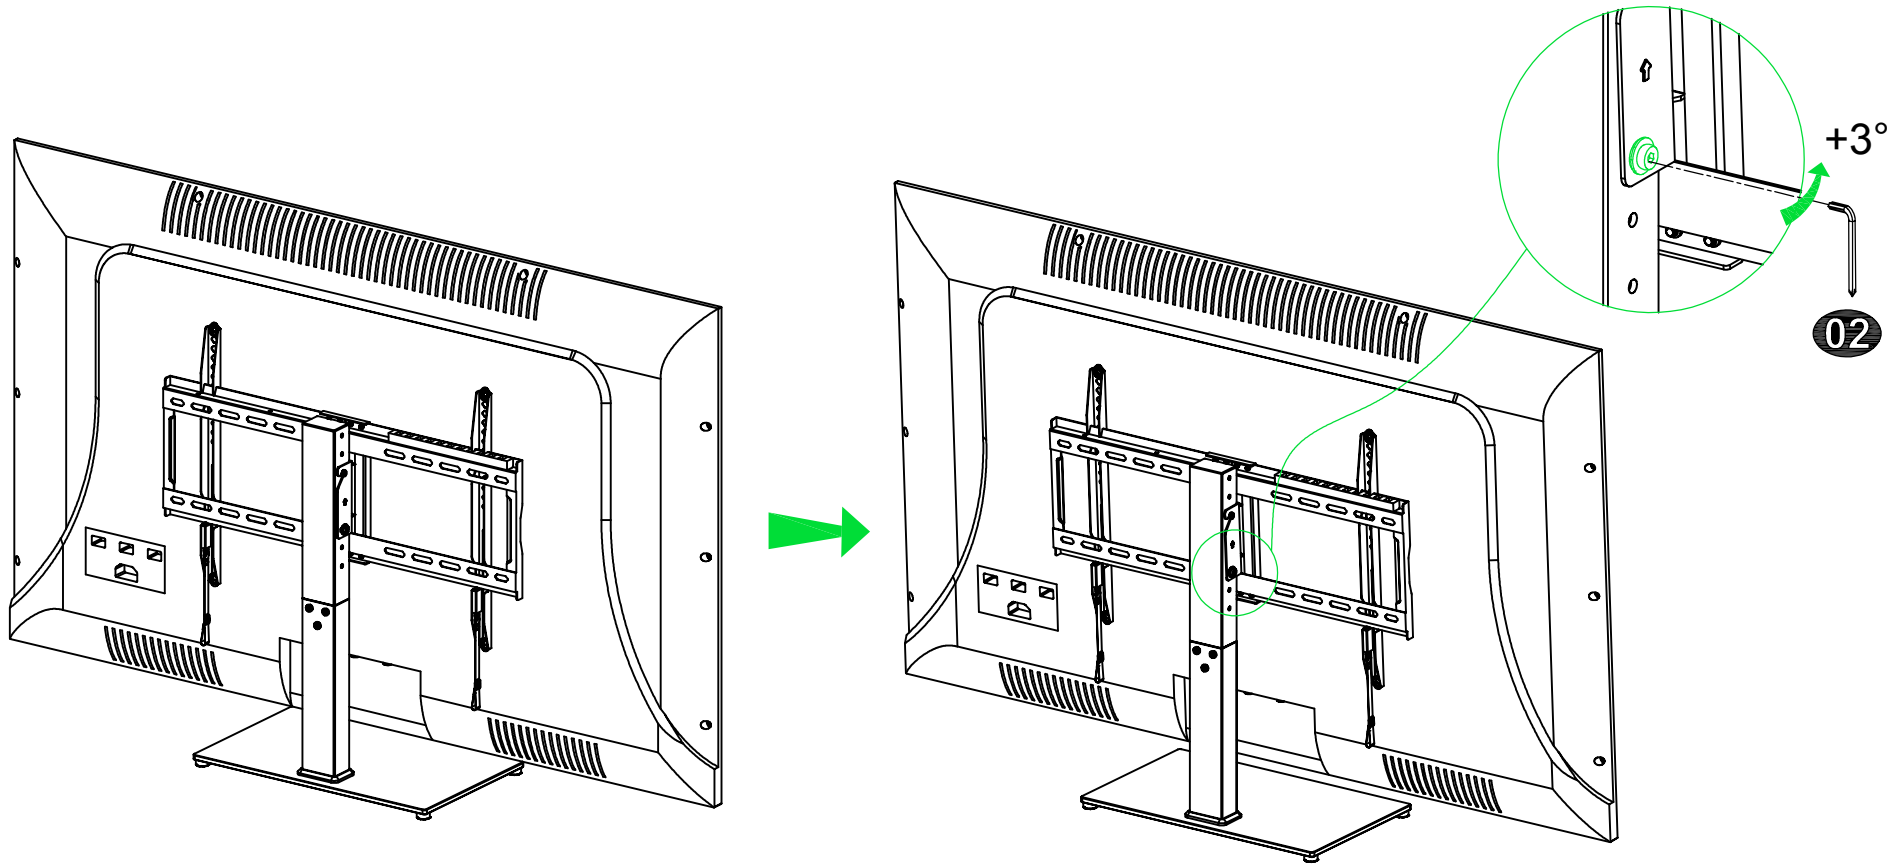


5-2 Height Adjustment

         
If the TV height is still not suitable, you can adjust the height by following the steps below.

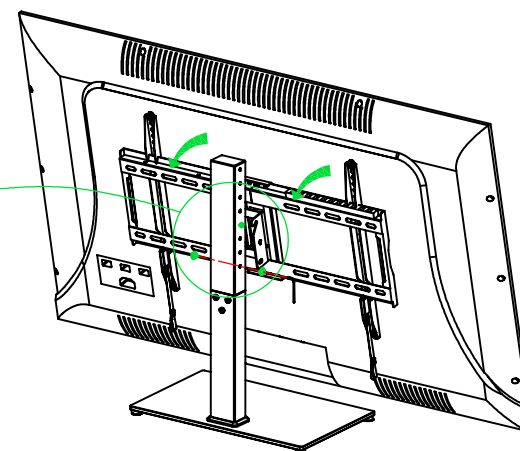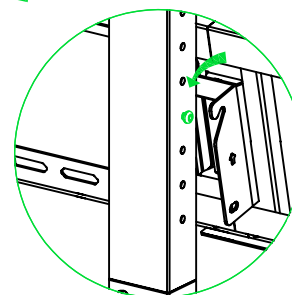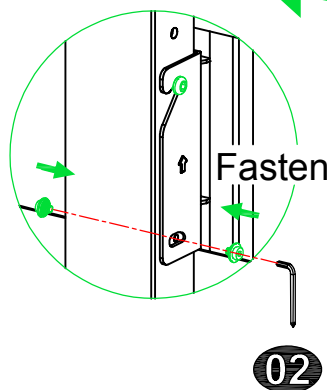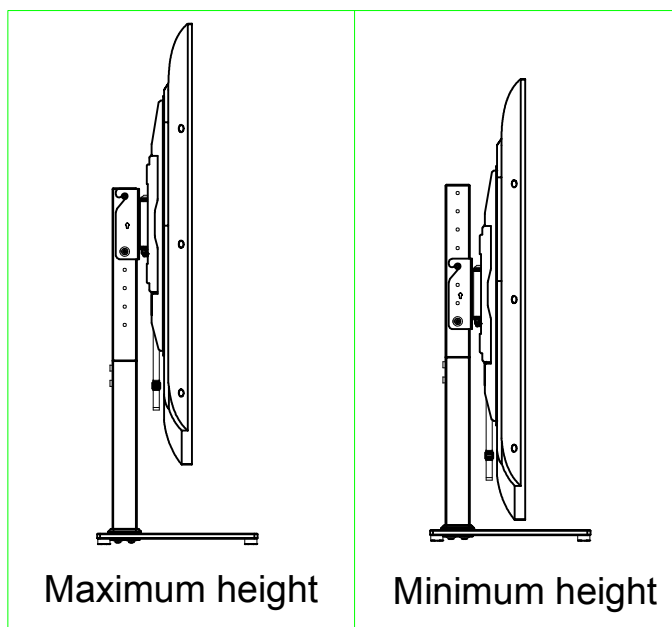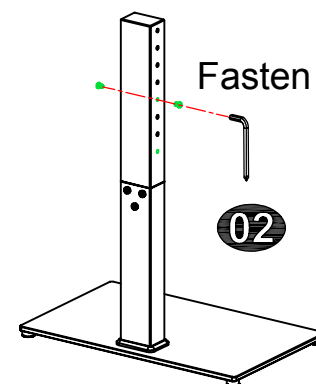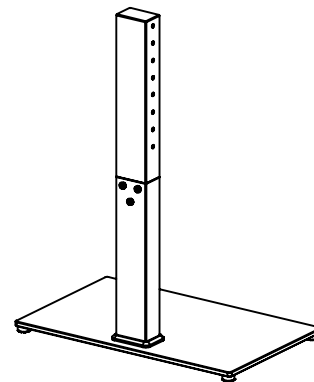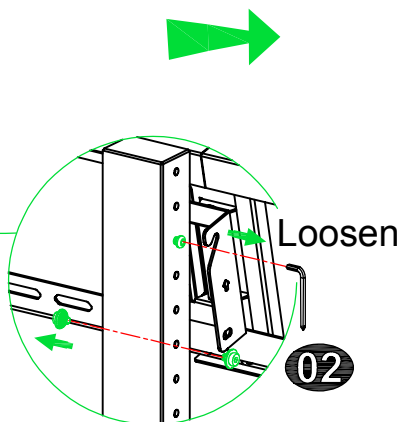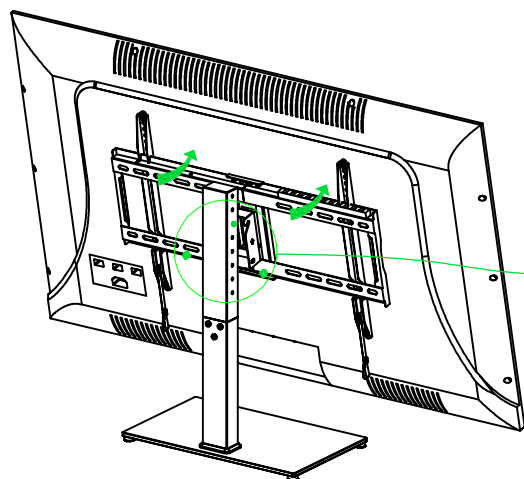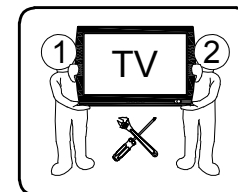

5-3 Swivel Adjustment

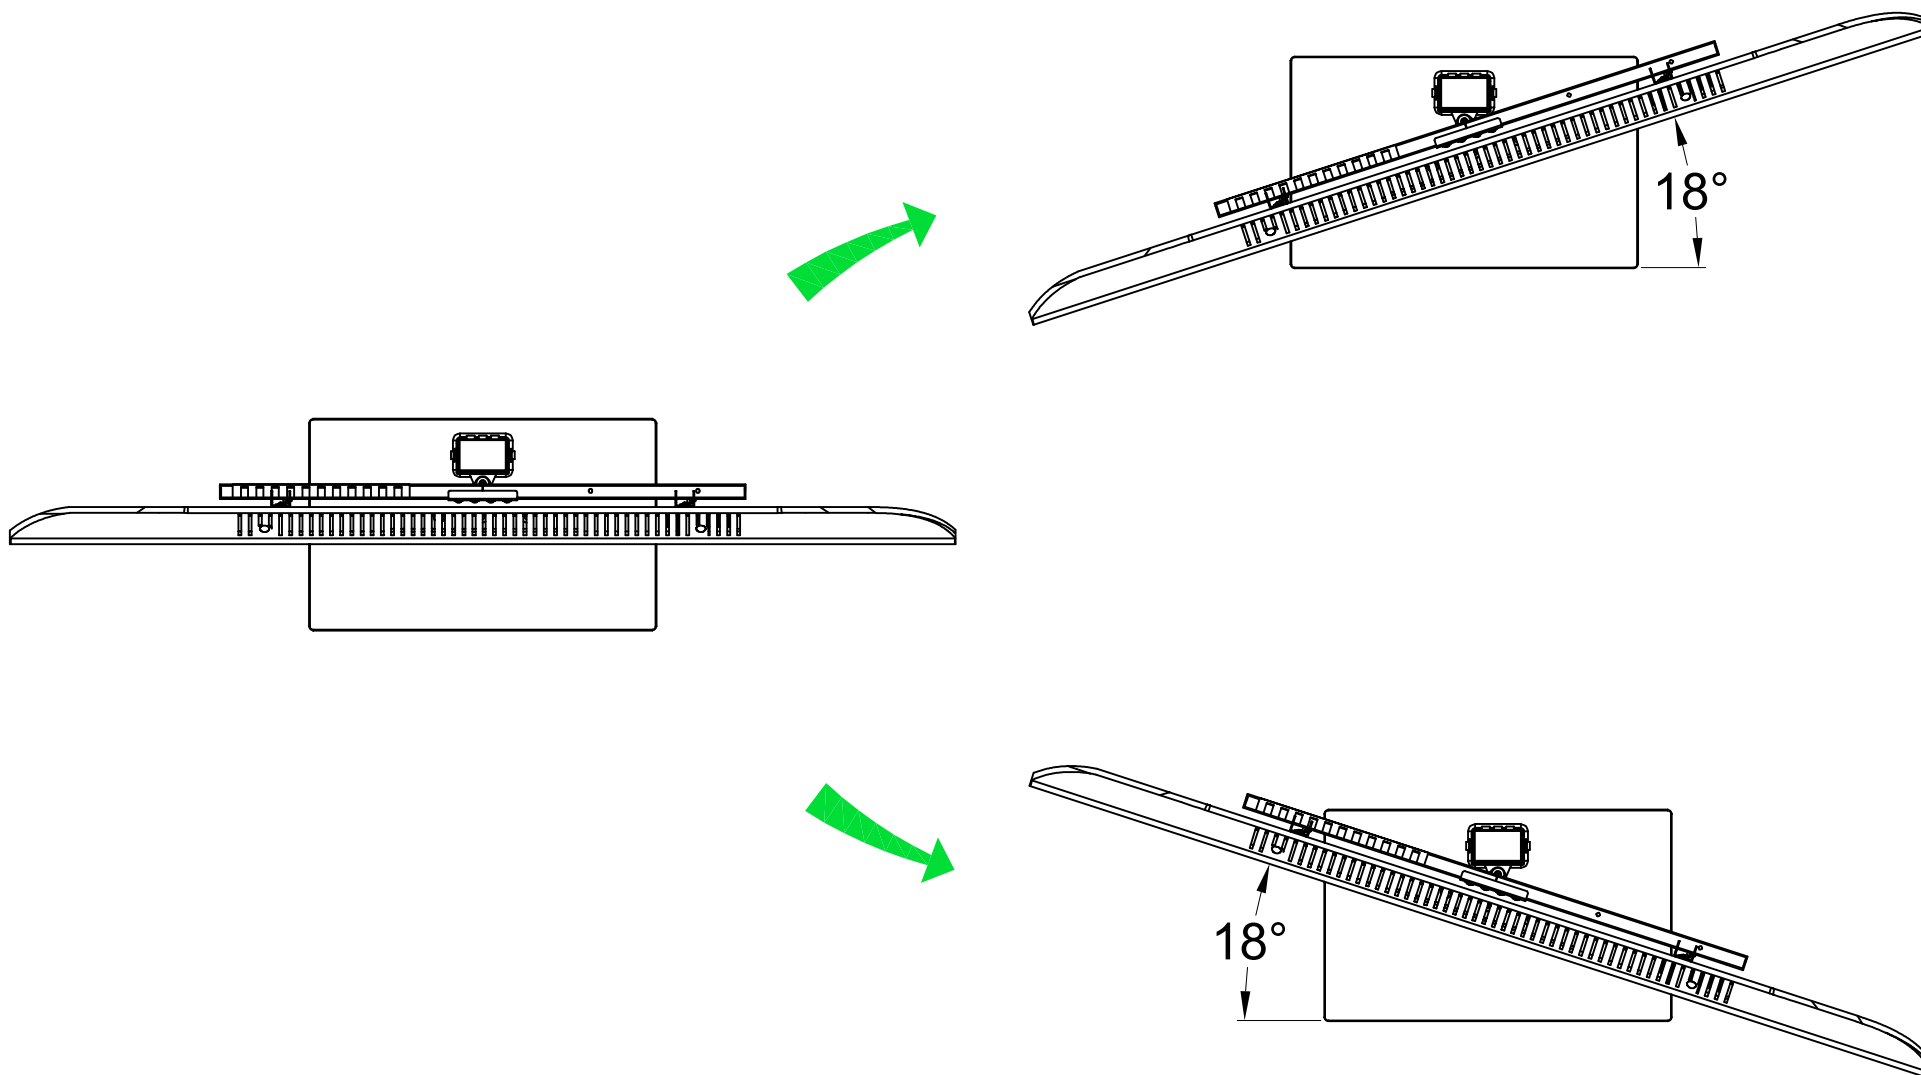 

5-4 Tidy your Cables

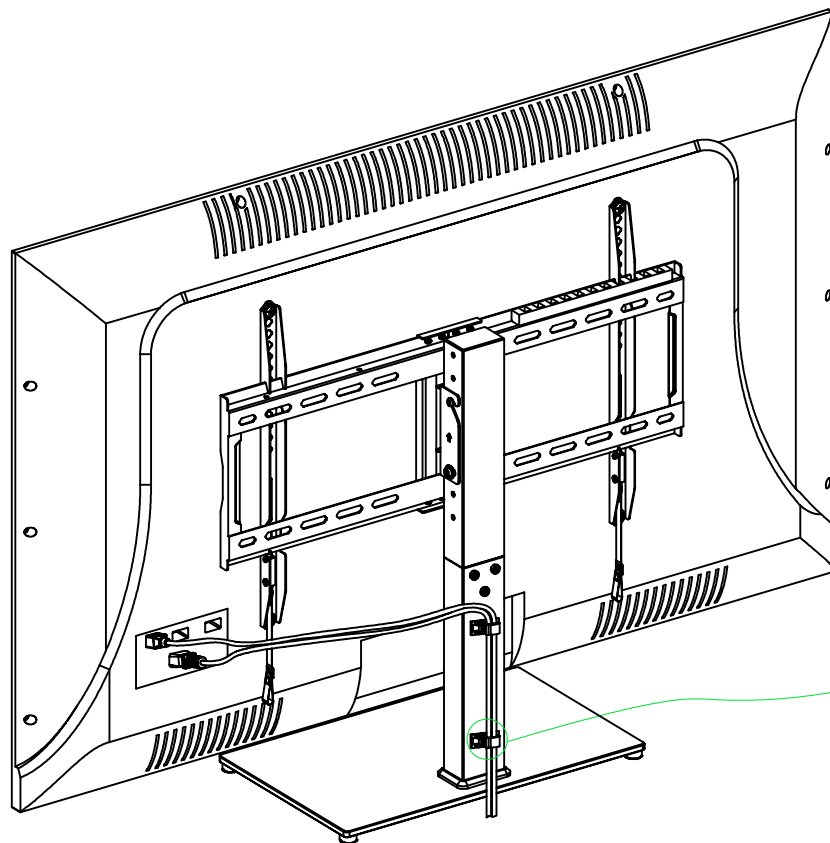 

Press to Lock

