



HOT AIR HAIR DRYER AND VOLUMIZER BRUSH

ESHRDHYBRS

SAFETY & WARNINGS

When using electrical appliance, basic safety precautions should always be followed, including the following:

- Never wrap the power cord around the appliance. Any pulling, twisting, folding, or bending can damage the cord, especially at the point of entry into the appliance, which may rupture the cord and can cause an electrical short or other failure.
- Regularly inspect the cord, do not use the appliance with a twisted, bent or otherwise damaged cord or if the appliance receive power irregularly. If cord is damaged, cease use immediately and contact Kogan.com
- Appliance should be disconnected and allowed to cool before storage. Do not apply stress or tension to the cord's point of entry into the appliance. During storage, cord should remain loose with no tight bends or folds and appliance should be placed in a secure, dry location out of reach of children.
- Read all of the following instructions before use. Keep this user guide for future reference.
- Keep the appliance away from the water source.
- To reduce the risk of death by electric shock:
 - Always unplug the appliance immediately after using.
 - Do not use while bathing.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not use near or drop into water or other liquid.
 - If this appliance falls into water, unplug it immediately. Do not attempt to take the appliance out from the water before disconnecting the power supply. Electrical parts are electrically live for some time even when the switch is off. Use caution while handling the appliance.
 - Do not use the appliance with a twisted, bent or otherwise damaged cord.

- To reduce the risk of burns, fire, electrocution, or injury to a person:
 - This appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
 - This appliance can be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, under the supervision or instruction concerning use of the appliance in a safe way by the person responsible for their safety, and understand the hazards involved.
 - Use this appliance only for its intended use. Use the attachments recommended by Kogan.com
 - Keep the cord and appliance away from hot surfaces. Do not pull, twist or wrap the cord around the appliance.
 - Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint or hair.
 - Never use while lying down.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Do not use an extension cord with this appliance.
 - Do not direct hot air toward eyes or other heat-sensitive areas.
 - Attachments (when furnished) may be hot during use, allow them to cool before handling them.
 - Do not place appliance on any surface while it is operating.
 - While using the appliance, keep your hair away from the air inlets.
 - Do not operate this appliance with a voltage converter.

OPERATION

1. Dry your hair using towel to remove excess water.
2. Connect the appliance to a power supply.
3. Select a setting as per your requirement:
4. Use the LOW setting on fine and thin hair.
5. Use the HIGH setting on thick and coarse hair.
6. Use the COOL setting to lock the style.
7. Rotate the dial counter-clockwise to select the desired setting.



8. For the best results, separate hair into manageable sections and dry individually.
9. Place the hair dryer close to the root and glide down towards the ends. The soft-cushioned bristles will help to detangle and smooth even the areas on the back of the head which is hard to reach.
10. Repeat this on the remaining sections of the hair until hair has been dried.
11. Turn the appliance off after drying and styling is complete. Allow the appliance to cool completely before storing.

Note: This appliance uses a concentrated steam of hot air to dry your hair. Though it uses lower wattage, you may notice that the enclosure around the head of the brush may become very hot to the touch. This is consistent with the normal operation of the appliance. Use caution when handling the appliance near the

CLEANING & CARE

This appliance is equipped with a thermostat which will turn off the appliance if the temperature exceeds comfort level due to the partially blocked air inlet or air outlet openings. If the appliance slows down during use, turn off the appliance and allow the appliance to cool down, after this the thermostat will automatically reset.

Maintenance

- No lubrication is needed.
- Keep all vents and openings clean and free of dust, dirt and hair spray.
- If the cord becomes twisted, untwist it prior to use.

Cleaning

- If cleaning becomes necessary, unplug the appliance from the power supply and wipe the exterior with a damp cloth.
- Remove the dust and lint from air intake openings with a small brush.

WARNING: If any malfunction occurs, do not attempt to repair it. This appliance has no user-serviceable parts.

Storage

- Unplug appliance when not in use.
- Allow the appliance to cool. Store the appliance out of reach of children in a safe, dry location.
- Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, twisting, or straining, especially at plug connections.

SPECIFICATIONS

Power Input	AC220-240V, 50/60HZ
Power Consumption	1000-1200W



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com