 




Operation instruction of
sonic electric toothbrush

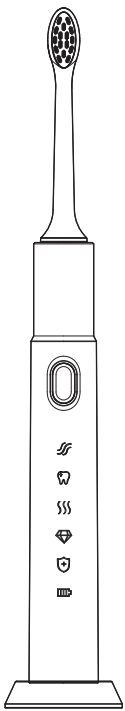

Safety precautions

In order to reduce the risk of failure, electric shock, injury, disaster, death and loss of equipment or property, the following safety precautions must be observed.

	Danger Potential risk of severe injury or death.		This marking is used to remind the user of the forbidden operation steps.
	Warning Potential risk of severe injury or death.		This marking is used to remind the user of the operation steps that must be observed in order to operate the product safely.
	Notes Potential risk of minor injury.		

⊘ This product contains a built-in battery

Do not put it into the fire for heating or charging at high temperature, or it will cause overheating, fire or explosion

Warning

In case of any abnormality or malfunction, please stop using immediately and unplug the power plug

Otherwise, electric shock or injury may be caused

❗ < Abnormal failure condition >

- Deformation or abnormal heating of the machine or charger
- The machine or charger emits a burning smell
- The machine or charger makes abnormal sound during use or charging

❗ Please make sure that the working voltage of the charger is in accordance with its rated voltage, and the power plug should be inserted tightly to the root

Otherwise, fire or electric shock may be caused

❗ Clean the power plug regularly to prevent dust accumulation

Otherwise, insulation failure may be caused by moisture, thus resulting in fire
Please pull off the power plug and wipe it with dry cloth

❗ This product is not suitable for use by people with physical, sensory or mental disabilities or lack of experience and knowledge (including children). Guardians must supervise and guide the use of this product, and be responsible for the safety of users.
Please prevent children from treating this product as a toy

Otherwise, accident or injury may be caused

❗ If the power cord of the charger is damaged, the whole charger shall be regarded as scrapped and the charger shall be replaced

Otherwise, accident or injury may be caused

Warning

⊘ Do not disassemble the product except when it is discarded
Otherwise, it may cause fire, electric shock or injury

⊘ Do not store within the reach of children and infants
Do not let children and infants use it
Otherwise, accidents or injuries may occur due to careless inhalation of moving parts.

⊘ Do not use chargers other than those provided
Do not use the attached charger to charge other products
Otherwise, it may cause burns or fire due to short circuit

Notes

❗ If you do not use this product for a long time, please remove the power plug from the domestic power socket

Otherwise, it may lead to electric leakage due to the decline of insulation performance, which may cause electric shock or fire

❗ People with severe periodontal disease, dental history, or suspected oral disease should consult a doctor before use

Otherwise, the teeth or gums may be damaged

Notes

⊘ Do not use this toothbrush with teeth containing a lot of friction agents, such as toothpaste for removing tobacco stains or whitening toothpaste. People with low oral sensitivity should not use this toothbrush. Do not press the brush head against the teeth or gums, or brush a part for a long time. Do not make the machine or the plastic parts of the brush head contact the teeth

 
Otherwise, it may cause tooth or gum damage

⊘ Do not share the brush head with family members or others, as it may cause infection or inflammation

⊘ Do not place gold objects such as coins or paper clips on the charger

Otherwise, scald can be caused due to overheating of these chemicals
Before discarding the electric toothbrush, the battery must be removed from the toothbrush; when removing the battery, make sure it is in the power-off state; the battery should be disposed of safely.

Name of each department

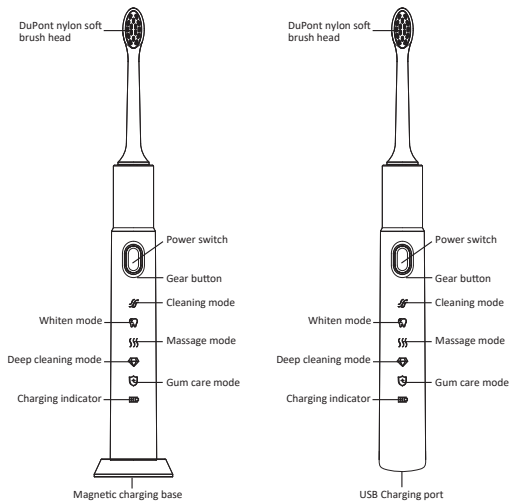

Charging of toothbrush

- If the toothbrush stops running during the initial use (just purchased or not used for 3 months or more), or if the red light of the charging indicator light flashes when using, please charge the machine.
- The suitable ambient temperature for charging is 5 to 35 °C. When the temperature is too high or too low, the battery can not be charged normally or can not be charged at all.
- During use and charging, the product may become hot, but this is normal.

 
Charging instructions

1. Magnetic charging: the magnetic charging base is connected with the toothbrush, and USB head is connected with 5V power supply (such as power bank, USB socket of computer, etc.)
USB charging: the DC head of the charging cable is connected to the toothbrush, and the USB end is connected to a 5V power supply (such as a power bank computer USB jack, etc.)

2. Charging time: 4-6 hours
3. Charging state: the red light of charging indicator is flashing
4. Charging completed: the charging indicator light will be constant on
5. Low voltage reminder: the light of charging indicator light flashes

Instructions

1. Please insert the brush head firmly into the brush head shaft
• Installing or removing the brush head in an inclined or twisted way may cause damage to the brush head or the machine
• Under the action of external force, the brush head shaft will move, which is normal during operation
• There is a small gap between the toothbrush head and the machine, which is normal
2. Put the toothbrush in your mouth
• Before opening, if necessary, only apply toothpaste on the brush head to prevent toothpaste splashing
3. Press the gear button to select the mode
• Each time the gear button is pressed, the mode is switched once
• When the brush head is pressed too hard on the teeth, the sound may increase, but this is not a fault. Please put the brush head gently against the teeth
4. Please turn off the power supply and brush gently
• When removing the brush head from the mouth, please do it under the condition of closed power supply, so as not to splash toothpaste foam.



Brushing pattern

 
1. Cleaning mode: standard mode for daily
2. Whitening mode: bright white
3. Massage mode: 2-min massage and cleaning
4. Deep cleaning mode: deep cleaning and brightening
5. Gum care mode: sensitive teeth and gums

Function description


- Operation mode
Sonic vibration: vibration frequency is 25000 to 33000HZ per minute.
- Timing function
In 4 areas of the mouth, pause for 30 seconds each time and pause for 0.5 seconds in the middle..
- Automatic shutdown function
After working for 2 minutes each time, it will shut down automatically.

Clean the machine and brush head

- Cleaning and maintenance must not be carried out by children
- Please turn off the power supply and remove the brush head before washing with water

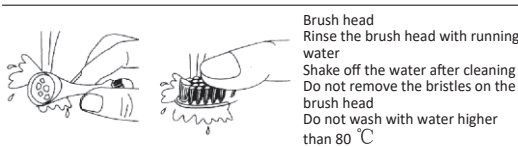

 The machine
Rinse the machine with running water
Do not rub or damage the waterproof silica gel
Do not immerse the machine in water
Do not wash with water higher than 40 degrees

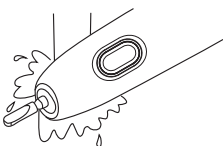

Waterproof function

This machine has waterproof function and can not conduct electricity. It can be used safely in the bathroom

Discarding of products

The power of the product comes from recyclable lithium batteries. Please send it to the local legal recycling or disposal site or dispose according to the local environmental protection regulations

Product parameters

Product	Sonic electric toothbrush	power source	USB DC 5V
Power consumption	2.5W	battery	lithiumion 600 mA
Waterproof grade	IPX7		