


RM 442

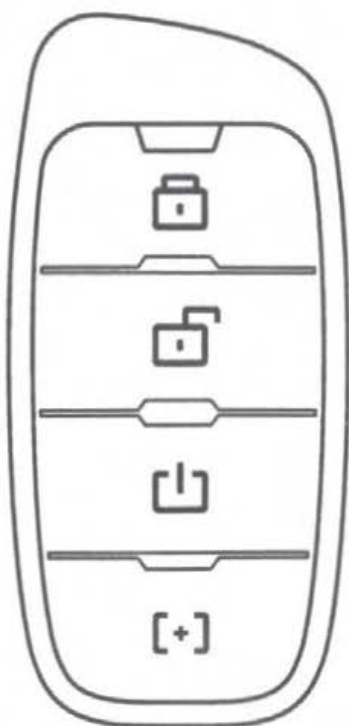

  LOCK

  PANIC

  UNLOCK

  START

  TRUNK

[+] →   STOP



QUICK
PRESS
1 SEC.



LONG
PRESS
3 SEC.

QUICK USER GUIDE

RM442-2W: 2-WAYS REMOTE: FCCID: 2ACKU-RM442 / IC: 12084A-RM442
ANT-FMH-2W: ANTENNA: FCC ID: 2ACKU-A2W01FM / IC: 12084A-A2W01FM
MADE IN CANADA / DOC.# 74151 / REV: A20201209 / © 2019 ALL RIGHTS RESERVED



BUTTON	COMMAND	TIME PRESSED SECOND	CONFIRMA- TION	DESCRIPTION
 PRESS	LOCK	1 SEC.	1 beep 1 Green flash	Locks all doors, arms the anti-theft system and activates the Alarm (if available).
 PRESS	PANIC	3 SEC.	1 beep 1 Green flash	Press LOCK for 3 seconds to activate the Panic.
 PRESS	UNLOCK	1 SEC.	2 beep 2 Green flash	Unlocks all doors, disarms the anti-theft system and deactivates the Alarm (if available).
 PRESS	START	3 SEC.	ASCENDING SOUND 2 Green flash	Remote start the vehicle. Press START again to reset the runtime.
 PRESS	TRUNK	3 SEC.	1 beep 1 Green flash	Opens the trunk, and deactivates the Alarm (if available). The Alarm ignores the trunk zone until it is closed.
 PRESS RELEASE PRESS	STOP	1 SEC.	DESCENDING SOUND 2 Red flash	Cancel the remote start sequence.
 PRESS RELEASE PRESS	AUXILIARY1	1 SEC.	1 beep 1 Green flash	Activates the auxiliary1 (if available).
 PRESS RELEASE PRESS	AUXILIARY2	1 SEC.	1 beep 1 Green flash	Activates the auxiliary2 (if available).
 PRESS RELEASE SIMULTANEOUSLY PRESS DISABLE THE REMOTE BUTTONS		3 SEC.	UNTIL THE RED LED TURN ON  The RED LED will come on whenever a button is pressed when the remote is DISABLED.	Disable all the remote's buttons for safety.
 PRESS RELEASE SIMULTANEOUSLY PRESS ENABLE THE REMOTE BUTTONS		3 SEC.	UNTIL THE GREEN LED TURN ON	Enables the buttons on the remote.
WHEN THE REMOTE EMITS A LONG BEEP AND THE RED LED IS ON:			the command has failed or the vehicle is out of range.	

REMOTE STARTING

When leaving the vehicle it is recommended that the driver pre-set the climate controls in preparation for a later remote start. To remote start the vehicle :

STEP 1



To remote-start the vehicle press the START button for approximately 3 second The remote Green Led flash and a ascending melodie will sound to confirm.

STEP 2



Approximately 5 seconds later the engine will crank and run for the selected runtime (15 minutes by default).

If the vehicle fails to start on the first attempt, the Remote-Starter will wait 3 seconds before it will attempt to start the vehicle again. The Remote-Starter will attempt to start the vehicle 2 times (default) before giving up. (See Failed Remote Start, on the complete user guide). **RUNTIME** : On gas engines the Remote-Starter can run the vehicle for either 15 (default), 3 or 7 minutes. On diesel engines either 30 (default), 6, or 15 minutes.

REMOTE STARTING FROM FACTORY KEY FOB

IF OPTION AVAILABLE. To remote start the vehicle with the factory key fob :



PRESS LOCK 3 TIMES (By default)
or **PRESS LOCK UNLOCK LOCK.**

Remote-start the vehicle.

WHEN SERVICING THE VEHICLE

Valet Mode disables the remote starter and alarm. Whenever the vehicle is being serviced, repaired or the vehicle is parked indoors; it is mandatory that Valet Mode be enabled to prevent an accidental remote start.

FROM THE ANTENNA

STEP 1



Turn the vehicle ignition to (ON/RUN) position. The vehicle does not need to be started.

STEP 2



Within 10 seconds press and release the button on the antenna 3 times.

FROM THE REMOTE



Press and release the **FUNCTION** button, and then press simultaneously the **LOCK** and **UNLOCK**.



VALET MODE ENABLED:
The LED is ON
VALET MODE DISABLED:
The LED is OFF

KEY TAKEOVER AFTER REMOTE STARTING*


KEY TAKEOVER FOR STANDARD KEY VEHICLE*

STEP 1		Do not press the foot brake (the engine will shut down).
STEP 2		Insert the key into the ignition and turn to ON position.
STEP 3		Press the foot brake.

KEY TAKEOVER FOR PUSH-TO-START VEHICLE*

STEP 1		UNLOCK the doors with either the OEM remote, the remote-starter remote or the proximity remote*.	
FORD / HYUNDAI / INFINITI / KIA / MAZDA / NISSAN / SUBARU*		ACURA / HONDA / LEXUS / SCION TOYOTA *	AUDI / BMW / CHRYSLER / GMC*
STEP 2	 Enter the vehicle with the SMART-KEY.	STEP 2 The module will shut down the vehicle as soon as the drivers door is opened. OFF 	
STEP 3	 Do not press the foot brake.		
STEP 4	 Press and release the Push-to-Start button once.	STEP 3 The vehicle can now be put in to gear and driven. 	
STEP 5	 Press the foot brake.		
STEP 6	 The vehicle can now be put in to gear and driven. If the Smart-Key is not detected the vehicle will shut down.	*The remote starter key takeover may vary by vehicle, ask your adviser or technician for details.	

 REMOTE START DIAGNOSTICS*




**Parking Light flashes
(before starting):**

3x Ready mode disabled

4x Valet mode activated
(The LED is on)

 5x Hood open



**Parking Light flashes
(after Shutdown):**

1x Normal stop (Brake, Park Brake)

3x Runtime expired or shut down
by transmitter

4x No tachometer signal

5x Hood open

6x Fail to start

ALARM DIAGNOSTICS*



**Parking Light flashes
(after disarm):**

3x Door open – zone 3

4x Shock sensor – zone 4

5x Hood open – zone 5

6x Trunk open – zone 6

*The parking light diagnostics can not be used on some vehicles equipped with automatic lights.

RANGE

Up to 900m/3000ft

BATTERY

BATTERY REQUIRED: 2x CR2016

AVERAGE BATTERY LIFE: 24 months



THANK YOU FOR PURCHASING THIS REMOTE-STARTER/ALARM SYSTEM. WE RECOMMEND THAT YOU DOWNLOAD AND THOROUGHLY REVIEW THE COMPLETE USER MANUAL FOR MORE INFORMATION ABOUT THE REMOTE STARTER / ALARM SYSTEM AT:
evoremotestart.com/RM442

CAUTION WARNING

IT IS THE RESPONSIBILITY OF THE REMOTE CAR STARTER OPERATOR TO:

- ensure that the vehicle is parked in a safe and responsible manner.
- ensure that the vehicle is not remotely started indoors (garage, underground parking).
- ensure that the vehicle is not remotely started with a passenger inside.
- ensure that the vehicle is not remotely started with a window or the roof open.
- ensure that the gearshift lever is in the NEUTRAL position and the parking brake is engaged on manual transmission in order to avoid accidents upon remote starting.
- when leaving the vehicle, ensure that the gearshift lever is in the "PARK" position for an automatic transmission in order to avoid accidents upon remote starting. Make sure that the vehicle cannot start in "Drive" position.
- ensure that the remote starter is disabled or put into valet mode before servicing. When servicing the vehicle, download the complete user guide for more information.

