




Creating innovative solutions for ambient comfort

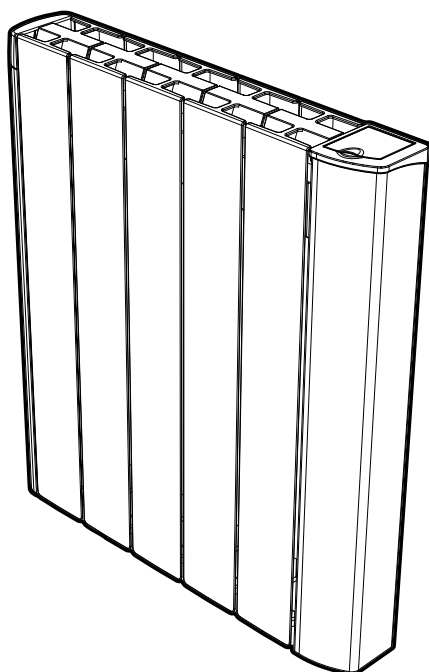

INSTALLATION AND OPERATING

INSTRUCTIONS

ELECTRIC RADIATOR WITH MINERAL OIL

GAUGE AND ENERGY CONSUMPTION INDICATION - OPEN WINDOW DETECTION - 7 DAY AND DAILY PROGRAMME
LIMIT OF THE TEMPERATURE CONTROL SLOT - PIN CODE LOCK

Digital **Aloe**

*Performance and energy savings thanks to smart features of the Pack+,
compact and thin for optimised space*



TABLE OF CONTENTS



See our interactive guide by scanning the QR code with your smartphone

Installing the heating device	3
Warnings and precautions	3
Connecting, wall-mounting procedure.....	5
Overview.....	7
Benefits	7
Operating	8
Overview	8
Power on/Standby mode.....	8
Selection of an operating mode	8
Pack +: Gauge consumption, energy savings	9
Setting the Comfort mode temperature.....	9
Pack +: Consumption indication accumulated in kWh, energy savings.....	9
Child anti-tamper, keypad lock/unlock.....	10
Pack +: 7 day and daily programme integrated, energy savings	10
Pack +: Open window detection, energy savings	12
Information about remote control by pilot wire (if connected).....	13
Information about priorities between the different modes	13
Advanced settings	14
Pack +: Modifications, restrictions of the temperature settings, energy savings.....	14
Open window detection settings.....	15
Pack +: PIN code lock	15
Backlight setting	17
Restoring factory settings	17
Experts settings (reserved to the installer).....	17
Ambient temperature sensor adjustment.....	17
Power cut.....	18
Remotely management by power shutdown	18
In case of power cut, backup.....	18
Troubleshooting	19
Diagnosis support	19
Technical information	20
Maintenance.....	20
Product label.....	20
Dimensionnal specifications.....	20
Technical specifications.....	20
Information requirements for electric local space heaters	21
Legal guarantee (Extract of terms and conditions).....	22



INSTALLING THE HEATING DEVICE

WARNINGS AND PRECAUTIONS

• Warnings

All damage resulting from non-compliance with this advice gives rise to non-application of the terms of the manufacturer's warranty.

- Do not use the appliance outdoors.
- Your appliance is intended for domestic usage and must not be used for other purposes.
- If the appliance has fallen on the ground, has been damaged or does not work properly, do not switch it on and ensure that the power supply to it has been cut off (by means of a fuse or a circuit breaker).
- Never disassemble the appliance. A badly-repaired appliance may present risks for the user.
- Please consult your local point of sales regarding any problems.
- If the power supply cable is damaged, it must be replaced by the manufacturer, its after-sales service department or another electrical professional in order to avoid any dangers arising.
- This heating device has been filled with a precise quantity of special oil, (a product safety data sheet is available upon request).
Should a leak occur, switch off the appliance, put it somewhere out of the way so that the fluid spill does not spread and so that the thermal fluid is not accidentally swallowed by a child, and then immediately contact the company that sold you the appliance or a representative of the manufacturer. Any operation requiring the opening of one of the plugs of the oil tank should be carried out by the authorized representative of the manufacturer.
- When the heating appliance is scrapped, comply with legislation and regulations regarding disposal of the thermal fluid.



-WARNING: in order to avoid overheating, don't cover the device. If the device is covered, the rise in temperature will trigger the internal circuit breaker. Any damage caused by this will invalidate the warranty.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

When the appliance is in heating, make sure they don't lean on it and don't play nearby. Vulnerable and young children should not be left in the vicinity of the heater unless a suitable guard is fitted.

The normal cleaning is the responsibility of an adult who has read the instructions and understood the operation of the appliance.

Any other operation or technical intervention must be performed by a qualified professional installer.


- Do not insert objects or paper in the appliance.
- If the removal of the appliance is necessary, do not remove or refit the appliance onto the wall-mounting brackets without making sure it is cold and the main electrical supply and main board to the system are off.

• Suggestion, positioning, location

Before connecting up the radiator to the mains power supply, switch off mains power at the main circuit breaker.

This electric radiator is a class II double insulated IP24 device, therefore it can be installed in all the rooms of a house including in safety zones 2 and Out of zone in bathrooms, but sheltered from water splashes.

The heating device must be installed in such a way that on-off switches and other control devices cannot be touched by a person located **in a bathtub or**

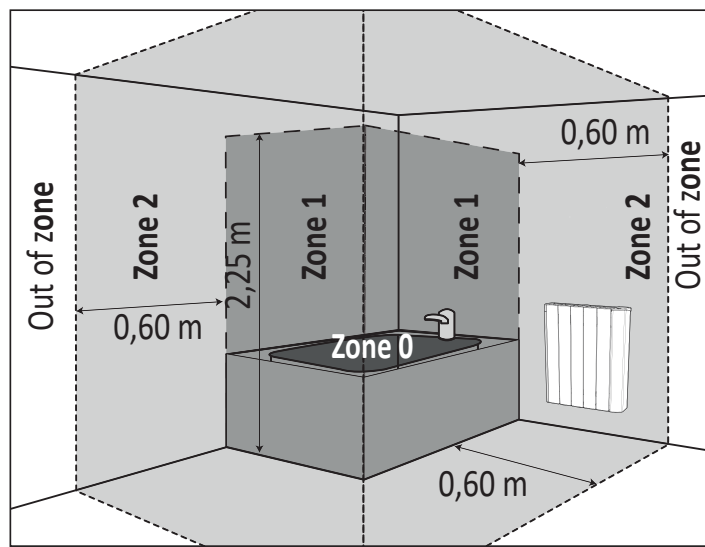

in a shower cabinet (in accordance with I.E.E. Wiring Regulations (BS 7671:2008).

The radiator must not be located immediately below a socket-outlet.

The radiator must be installed at least 15cm from any obstacle (ie shelving, curtains, items of furniture, etc.).

A mean of disconnection mains supply capable of disconnecting all poles, having a contact separation of at least 3mm in accordance with local regulations and installation rules.

Zone 0

No electric heating device

Zone 1

Zone 2


Electric heating device of class II and IPX4 protected by a differential circuit breaker 30mA.

Out of zone


Electric heating device of class I or II protected by a differential circuit breaker 30mA.

⚠ This picture is only for your reference. In any case, the product must be installed by a qualified professional installer, according to applicable standards and directives of the country in which it is installed.

Locate the heater within minimum distances from obstacles.

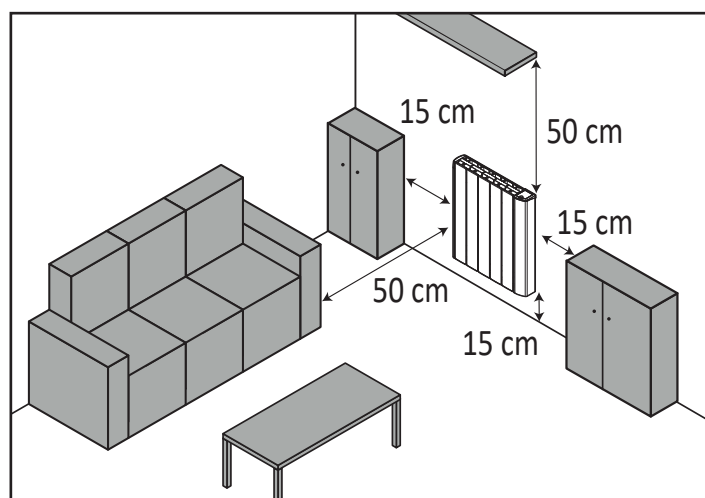

Installation recommended in the context of using automatic open window detection.

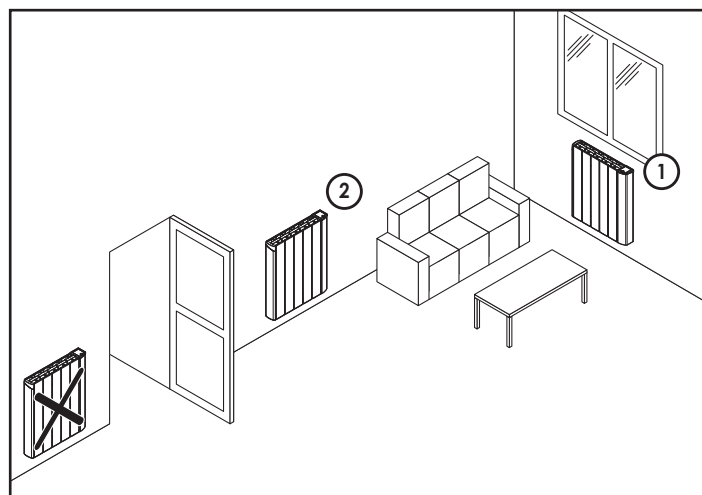

Legend

① = The ideal recommended location

② = Alternative location

CONNECTING, WALL-MOUNTING PROCEDURE

• Connecting the device

All electrical installation work should be carried out by a suitably qualified Electrician or other competent person.

- The power supply of the device must have a means of disconnection main supply capable of disconnecting all poles, having a contact separation of at least 3mm in accordance with local regulations and installation rules, a protection by a 30mA differential switch and a protection device against overloads adapted to the characteristics of the connecting line.
- Before you first use the equipment, check that the voltage used does indeed match that listed on the device.
- This radiator is a class II device (meaning that it has double electrical insulation). Connection to earth is prohibited.
- **The three wires** must be connected in an electrical connection fuse spur box which complies with applicable standards.

ELECTRICAL CONNECTIONS

Monophase power supply 230V +/-10% 50Hz


 **You must keep the pilot wire insulated if it is not used. Do not connect the pilot wire (black wire) to the earth.**

- Blue-grey wire: Neutral
- Brown wire: Phase
- Black wire: Pilot wire (DO NOT CONNECT) ONLY TO BE USED WITH AN EXTERNAL CONTROLLER.

• The positioning of the wall mounting bracket and tracing


Fix the bracket according to the dimensions specified in the enclosed table template, use the drilling template supplied to install and fix your radiator onto the wall.

References	Power outputs (W)	X = Width fixing holes in (mm)
PS050S1A	500	137
PS075S1A	750	218
PS100S1A	1000	299
PS125S1A	1250	461
PS150S1A	1500	541
PS200S1A	2000	784

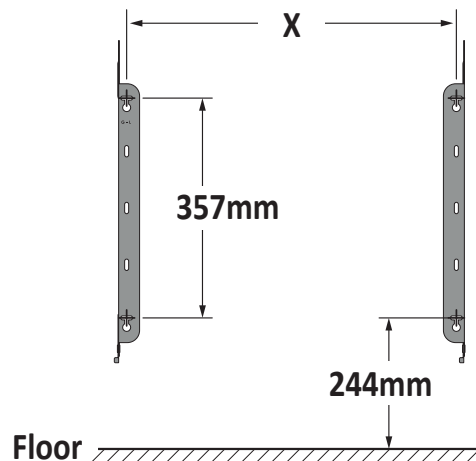

Stage 1


Open the template and position it against the wall, at the desired location. Ensure that the bottom of the template touches the floor or the top of the skirting board, in order that the fitting height can be adjusted.

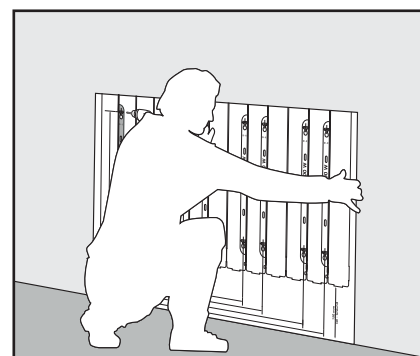

• Installation of the wall-mounting brackets


Stage 2

Find the power of your radiator and drill the corresponding holes into the wall.

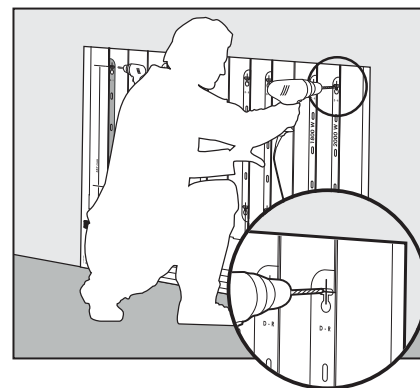


Stage 3

Remove the template then screw the wall-mounting brackets of the electric radiator into the wall. **IMPORTANT: use a screw anchor which is suitable in relation to the wall type (screws and screw anchors not supplied: screw Ø 6mm max).**

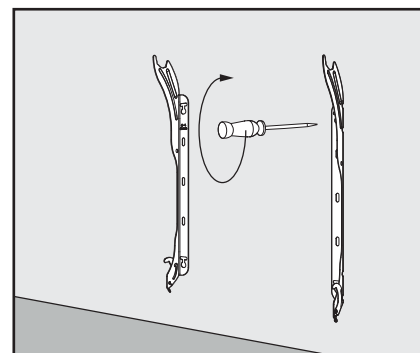


• Setting up of the radiator on the wall-mounting brackets


- 1-Take the radiator by the sides and lift it slightly by presenting it parallel to the wall.

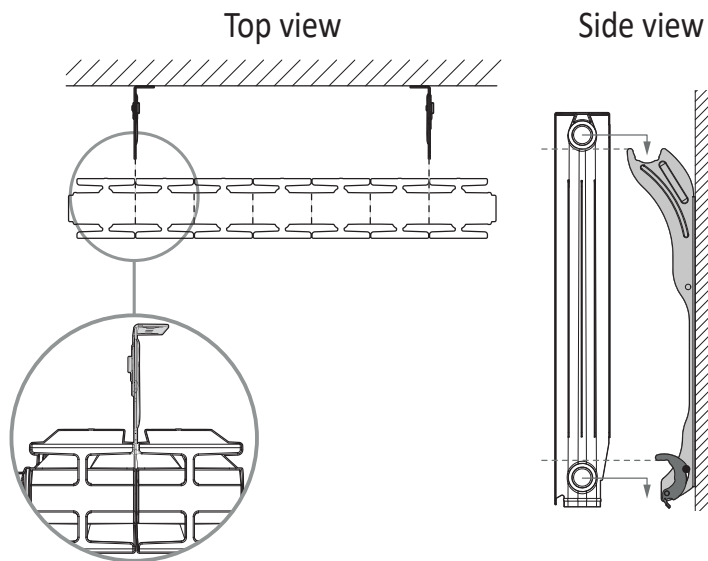

- 2-Place the radiator on the wall-mounting brackets.

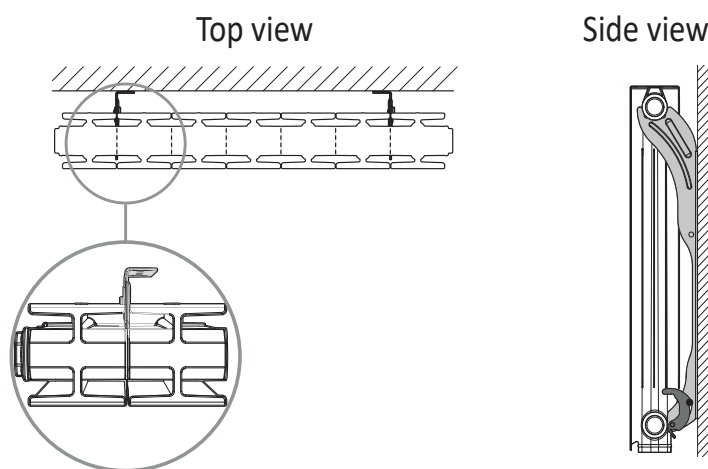

At the back of the product, make sure that each wall-mounting brackets are inserted between the intermediate fins without altering them.

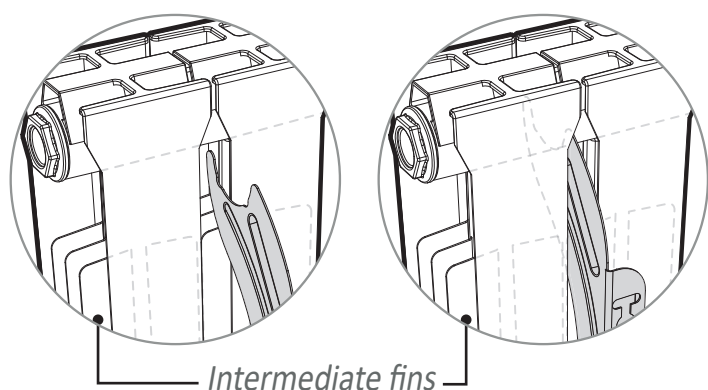


The wall mounting brackets are designed to secure the installation and to limit the translational movements of the device in case of impact.

• Automatic lock of wall-mounting brackets

After the establishment of the radiator on the wall-mounting brackets, proceed to the installation locking in the following order:

- 1- Fold down the hooks.
- 2- The rivet goes down into the notch and automatically locks the wall-mounting bracket. Make sure that the rivet is well down at the end of the notch.

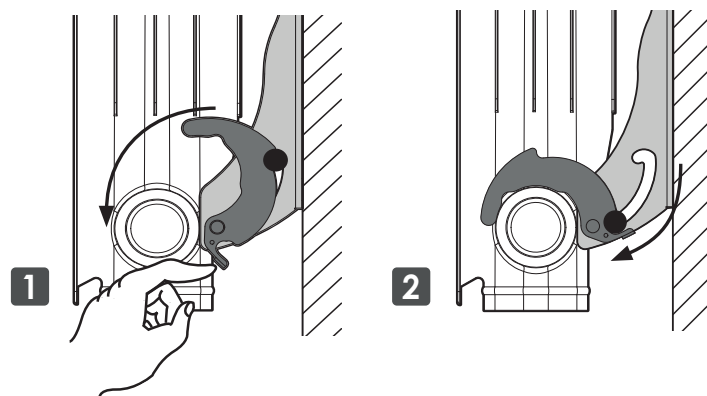

The anti-tilt safety is in place, the radiator can not be unhooked from the wall without unlocking.




OVERVIEW

Thank you for choosing one of our products we are confident that you will get many years of service.

Our range of electric radiators with thermal fluid with innovative style was designed and developed to bring you the comfort of heating without maintenance and significant energy savings thanks to the Pack+: your NEOMITIS radiator incorporates innovative technologies designed for your comfort and to increase your energy saving, control performance PID (stability), open window detection, 7 day and daily programme.

In new build or renovation applications, our radiators will provide you with comfort and satisfaction!

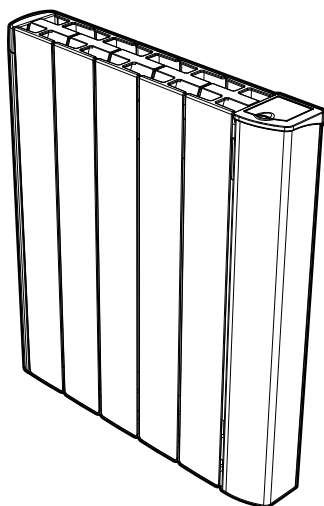

- **7 day programme:** you have the option, for each day of the week, of assigning four different program profiles: P1, P2, P3 Comfort mode, Eco mode.

- **Special safety for social or private rental housing:**

- Limits of the adjustment range of the Comfort setting temperature.
- Administrator/installer PIN code.

- **«Smart» electronic controller:** This means stable and accurate temperatures in your home all year round.

- **Setting temperature can be viewed in all operating modes.**

- **Active memory:** Permanent backup of all settings and programming, backup date and time of 16hrs typical.

- **Overheating protection:** The radiators are equipped with a system protecting the device against any overheating.

- **No risk of the radiator falling off the wall:** Secure patented wall brackets fixing system.

- **Child anti-tamper:** Keypad lock, making changes impossible.

BENEFITS

- **A range of powers adapted to the dimension of your housing:**

From 500W to 2000W, thus enabling you to optimize your electricity bills in line with your actual needs.

- **The comfort of central heating:** This concept with mineral oil circulation ensures a gentle heat and a stable temperature. The aluminum alloy heating body optimizes the heat diffusion.

- **Great attention paid to design:** the perfect finish of the radiator, covered with epoxy paint makes the product simple and exclusive. It will adapt to all home decoration styles.

- **Help for the visually impaired:** the button  power on/Standby mode is in relief to be easily identifiable to the touch. The device has audible beeps indicating the change from the Standby mode to active mode.

- **Easy to set:** The display has a white backlight to make settings easier to access and view, controls are positioned on the upper part of the radiator, on a keypad protected by a translucent lid. Setting the radiator is simple, straightforward and intuitive.

- **The Pack + features, assist in Energy Savings!**

- **Gauge consumption:** An automatic indication of the level of energy consumption according to the setting temperature.


- **Energy consumption indication:** posting of the estimated amount of energy consumed in kWh since the last reset to 0 of the energy meter.

- **Open window detection:** Automatic switching to frost protection mode when radiators detect a significant drop in temperature.



OPERATING

OVERVIEW

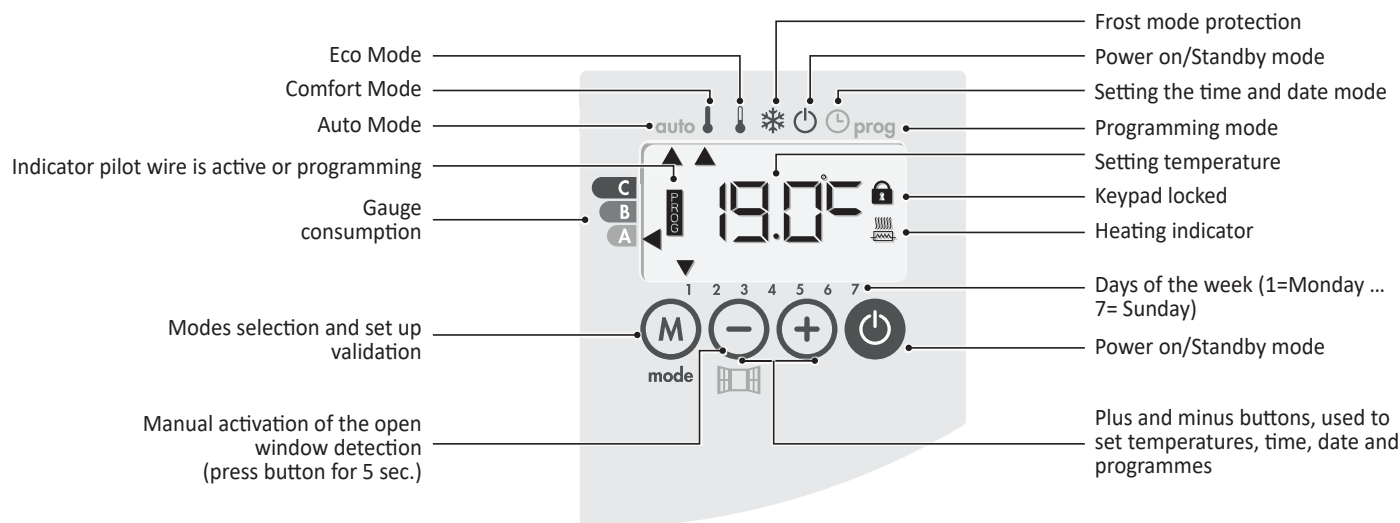

Important: In Auto, Comfort, Eco and Standby modes, after 20 seconds timeout, the backlight switches off automatically. It will be necessary to reactivate it by pressing one button of the control panel before setting.



Note

Before carrying out any setting procedures, ensure that the keypad is indeed unlocked (see page 10).




POWER ON/STANDBY MODE



Power on feature

Press the button to put the device in operation in Auto mode.

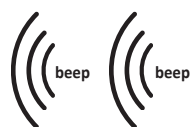


Help for the visually impaired: sound signals

The device makes two short beeps to notify that it is in operation, in Auto mode.



Standby mode

This function allows you to stop the heating in summer, for example. Press the button to put the device in Standby mode.

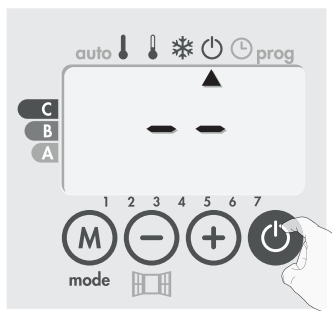


Help for the visually impaired: sound signals


The device makes one short beep to notify that it is in Standby mode.

SELECTION OF AN OPERATING MODE

The button allows you to adapt the operating schedule of your radiator to your needs, depending on the season, whether your home is occupied or not. By pressing the button once or several times, select the required mode.

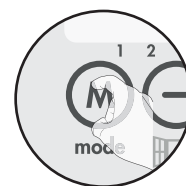

Mode sequence:

 

Mode overview


Display

• auto Auto mode

In Automatic Mode, the device will automatically change from Comfort mode to Eco mode according to the established programme.

Help for the visually impaired: sounds signals

When the Auto mode is selected using the button, the device makes 2 successive short beeps to notify that Auto mode is enabled.

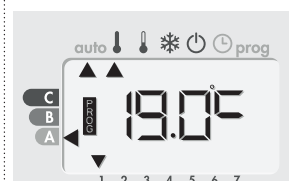

3 different cases depending on your set-up:

1 7 day and daily programme

Your radiator has been programmed and is executing Comfort and Eco mode orders in line with the settings and time periods you have selected (see «Programming» chapter page 10).

2 Programming by pilot wire

If you do not want to use the programming feature, your device's default setting is non-stop Comfort for 7 days a week, meaning you do not have to change any settings. Orders sent by the pilot wire will only be applied in Auto mode, thus your device will automatically receive and apply the programmed orders sent by your power manager or your time switches (see «Information about remote control by pilot wire» chapter page 13).

3 Without programme

If the 7 day and daily programme is not enabled or no orders are being sent by pilot wire, then your device's factory settings mean that it will operate in non-stop Comfort mode, 7 days of the week.

Mode overview

Display

• Comfort mode

Non-stop Comfort mode. The radiator will operate 24 hours a day to achieve the temperature which has been set (e.g. 19°C). The Comfort mode temperature level can be set by the user (see below).



• Eco mode

Eco, which means the Comfort Mode temperature minus 3.5°C. This enables you to lower the temperature without having to reset the Comfort Mode temperature. Select this mode for short-term absences (between 2 and 24h) and during the night.



• Frost protection mode

This mode enables you to protect your home against the effects of cold weather (frozen pipes, etc.), by maintaining a minimum temperature of 7°C in it at all times. Select this mode when you will be away from your home for a long time (more than 5 days).



Restoring factory settings See page 17.



PACK +: GAUGE CONSUMPTION, ENERGY SAVINGS

The Energy Saving Trust (EST) and carbon trust recommend reducing temperature control down by 1°C to save up to 10% of your energy bill.

In the radiators display, a selector indicates the energy consumption level by positioning it in front of the colour: red, orange or green.

So, depending on the setting temperature, you can choose your level of energy usage.

As the temperature setting increases, the consumption will be higher.

The gauge appears in Auto, Comfort, Eco and Frost protection modes regardless of the level of temperature.


C- Red Colour High temperature level: it is advisable to significantly reduce the setting temperature	Setting temperature > 22°C When the setting temperature is higher than 22°C	
B - Orange colour Average temperature level: it is advisable to slightly reduce the setting temperature	19°C < Setting temperature ≤ 22°C When the setting temperature is higher than 19°C and lower or equal to 22°C	
A - Green colour Ideal temperature	Setting temperature ≤ 19°C When the setting temperature is lower or equal to 19°C	

SETTING THE COMFORT MODE TEMPERATURE

You can access the Comfort temperature set up from the Auto and Comfort Mode. It is preset to 19°C.

Using $\ominus$ and $\oplus$ you can adjust the temperature from 7°C to 30°C by intervals of 0.5°C.

Note: You can limit the Comfort temperature, see page 14 for more details.

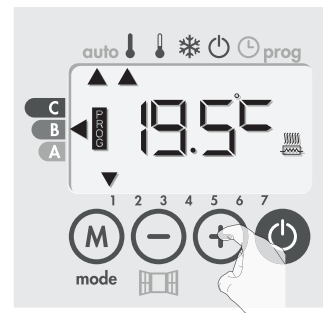


PACK +: CONSUMPTION INDICATION ACCUMULATED IN KWH, ENERGY SAVINGS

It is possible to see the estimation of energy consumption in kWh since the last reset of the energy meter.

• Display of the estimated energy consumption

To see this estimation, select the Standby mode, as indicated page 8, then press $\oplus$.


To exit the display mode of consumption, press M , the device is automatically in Standby mode.

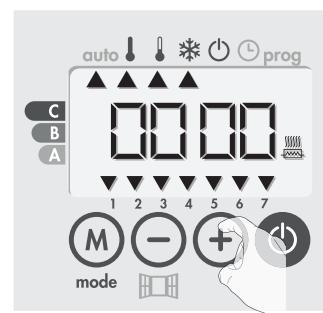

• Resetting the energy meter


To reset the energy meter, select the Standby mode, as indicated page 8, then proceed as follows:

1- Press $\oplus$.

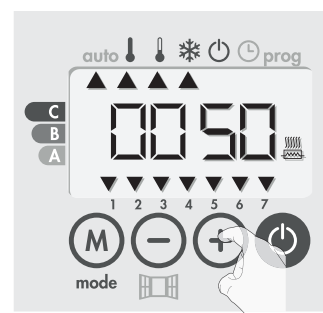

2- Press simultaneously $\ominus$ and $\oplus$ for more than 5 seconds.

To exit resetting the energy meter, press M , the device is automatically in Standby mode.

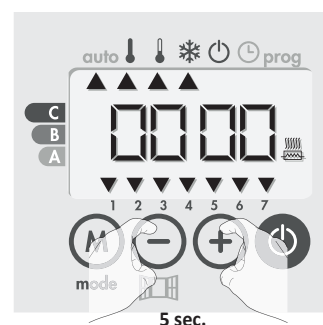

CHILD ANTI-TAMPER, KEYPAD LOCK/UNLOCK

• Keypad lock

To lock the keypad, press the $\ominus$ and $\oplus$ buttons and hold them down for 10 seconds. The padlock symbol $\mathfrak{P}$ appears on the display, the keypad is locked.



• Keypad unlock

To unlock the keypad, press the $\ominus$ and $\oplus$ buttons hold them down for 10 seconds again. The padlock symbol $\mathfrak{P}$ disappears from the display, keypad is unlocked.


Important: when the keypad is locked, only the key $\mathfrak{P}$ is active.

If the device is on Standby mode when the keypad is locked, you have to unlock it for the next heating on to access the setup.

3- The two minute figures will flash.

Select using $\ominus$ or $\oplus$.

Save by pressing $\mathfrak{M}$.

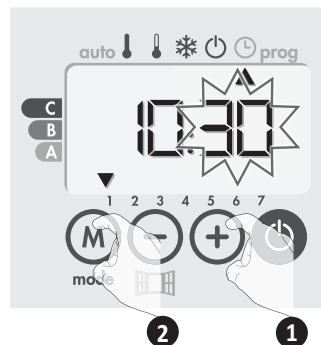

4- The cursor above the number 1 (which represents the Monday) will flash. Select the date using $\ominus$ or $\oplus$.


Save by pressing $\mathfrak{M}$.



5- To exit the setting the time and day mode, press $\mathfrak{M}$.

• Choices programmes

Schematic sequence of programmes:

 

Your device's default setting is non-stop Comfort for 7 days a week.

• Programmes overview

- **Comfort:** your device will operate in Comfort mode, 24 hours a day, as regards each day selected.

Note: You can set the Comfort mode temperature to the temperature you require (see the Setting the Comfort mode temperature section page 9).

- **Eco:** The device will operate 24 hours a day in Eco mode.

Note: You can set the temperature-lowering parameters (see Setting the eco mode temperature lowering-level page 14).

- **P1:** your device will operate in Comfort mode from 06:00 to 22:00 (and in Eco mode from 22:00 to 06:00).

- **P2:** your device will operate in Comfort mode from 06:00 to 09:00 and from 16:00 to 22:00 (and in Eco mode from 09:00 to 16:00 and from 22:00 to 06:00).

- **P3:** your device will operate in Comfort mode from 06:00 to 08:00, from 12:00 to 14:00 and from 18:00 to 23:00 (and in Eco mode from 23:00 to 06:00, from 08:00 to 12:00 and from 14:00 to 18:00).

• Potential modifications of programmes

If the default time schedules for the P1, P2 and P3 programmes does not suit your routines, you can change them.

Modifying the P1, P2 or P3 programmes.

If you modify the time schedules for the P1, P2 or P3 programmes, the schedules will be modified for all the days of the week for which P1, P2 or P3 had been set.

PACK +: 7 DAY AND DAILY PROGRAMME INTEGRATED, ENERGY SAVINGS

In this mode, you have the option of programming your radiator, by setting one of the five programmes on offer for each day of the week.

• Access to the programming mode

From the Standby mode, press $\mathfrak{M}$ for 5 seconds to enter into the programming mode.

Schematic sequence of programming settings:




• Setting day and time

In this mode, you can set day and time to program your radiator in line with your needs.

1- From the Standby mode, press $\mathfrak{M}$ for 5 seconds.

The cursor moves to the setting day and time mode.

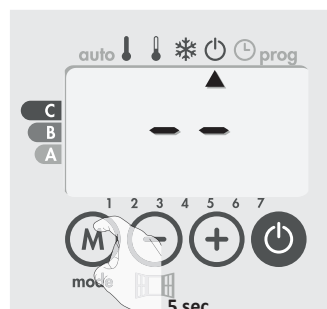


2- Select using $\ominus$ or $\oplus$.

The two hour figures will flash.

The hours will scroll quickly, if you press the $\ominus$ or $\oplus$ and hold them.

Save by pressing $\mathfrak{M}$.

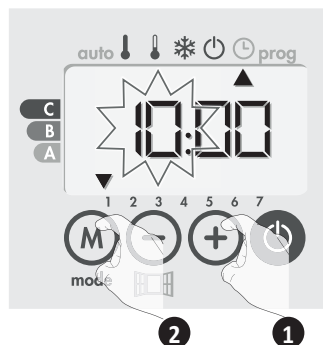


- Starting from Standby mode, press **(M)** for 5 seconds. When the cursor moves above the setting time symbol **(⌚)**, press **(M)** shortly. Press **(-)** or **(+)**. Programming indicator appears.



1 5 sec.

- With **(-)** or **(+)**, select P1.

P1 will flash. Press **(M)** for 5 seconds to make changes.

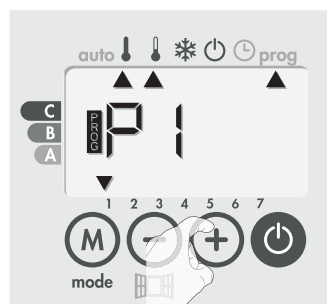

1



2 5 sec.

- The P1 start time (which by default is 06:00) will flash. Using **(-)** or **(+)**, you can change this time, by increments of 30 minutes. Save by pressing **(M)**.



1



2

- The P1 end time (which by default is 22:00) will flash. Using **(-)** or **(+)**, you can change this time, by increments of 30 minutes. Save by pressing **(M)**.



1



2


- Press **(M)** twice to exit the programming Mode and return to Auto Mode.

Note: without action on the keys, it will return to Auto after a few minutes.

Choices and allocation programmes

Prior information:

Display area

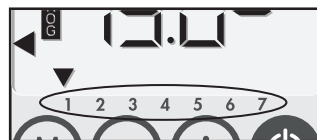

Correspondence days/numbers	
Monday	1
Tuesday	2
Wednesday	3
Thursday	4
Friday	5
Saturday	6
Sunday	7

- If you just set the time and day, the cursor moves automatically under PROG and the days of the week will scroll on display with the programmes that you set for them, meaning Comfort **CONF** every day.


From any other mode (Auto, Comfort or Frost protection), select the Standby mode then press **(M)** for 5 seconds. When the cursor positioned under the set time symbol **(⌚)**, press **(M)** again.




- Press **(+)** or **(-)**.

The programme set for day 1 (1= Monday, 2 = Tuesday, etc.) will flash.

The programming indicator will come on.

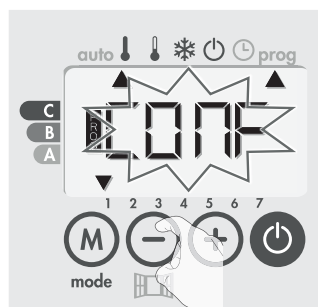

- Choose the programme you want for this day with **(-)** or **(+)**. Save by pressing **(M)**.

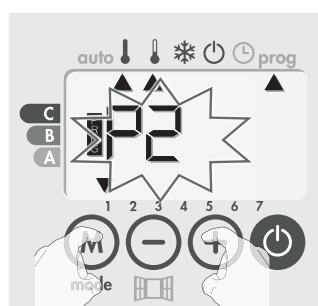


2

1

- The programme assigned to the second day of the week (Tuesday) will flash.

Repeat the procedure described previously (in point 3) for each day of the week.

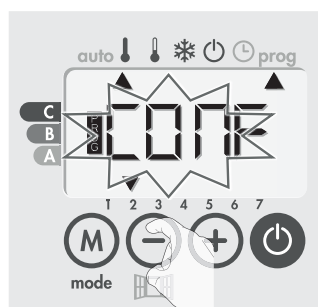

- Once you have chosen a programme for each day, confirm your selection by pressing **(M)**. The days of the week will successively scroll on display with the programmes that you set for them (P1, P2, P3, COMF or ECO). To exit the Programming mode, press **(M)**.

● Viewing the programmes that you have selected

- From Standby mode, press **(M)** for 5 seconds. Press **(M)** twice, the programme for each day of the week (Comfort, Eco, P1, P2 or P3) will scroll on display in front of you.
- To exit the programme viewing mode, press **(M)**.

● Manual and temporary program override from a running programme

This function allows you to change the Eco mode temperature temporarily until the next scheduled change in temperature or the transition to 0:00.

Example:

- 1- The device is in Auto mode, the running programme is Eco 15,5°C.



- 2- By pressing **(-)** or **(+)**, you can change temporarily the desired temperature up to 18°C for example.



- 3- This change will be automatically cancelled at the next change of programme or transition to 0:00.




PACK +: OPEN WINDOW DETECTION, ENERGY SAVINGS

● Important information about the open window detection:

Important: the open window detection is sensitive to temperature variations. The device will react to the window openings in accordance with different parameters: temperature setting, rise and fall of temperature in the room, the outside temperature, the location of the device...

If the device is located close to a front door, the detection may be disturbed by the air caused by the opening door.

If this is a problem, we recommend that you disable the automatic mode open window detection (see page 15). You can, however, use the manual activation (see above).

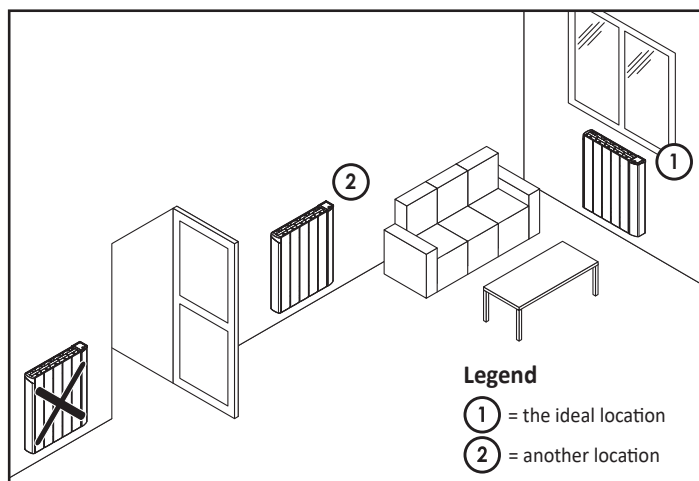

● Overview:

Lowering temperature cycle by setting frost protection during aeration of a room by open window. You can access the open window detection from the Comfort and Auto Modes. Two ways to enable the detector:

- **Automatic activation**, the lowering temperature cycle starts as soon as the radiator detects a temperature change.
- **Manual activation**, the cycle of lowering temperature starts by pressing a button.

● Automatic activation (factory settings):


To disable this mode, see page 15.

Digital Aloe detects a temperature fall. An opened window, a door to the outside, can cause this temperature fall.

Note: the difference between the air from the inside and the outside must cause a significant temperature fall to be perceptible by the device. This temperature drop detection triggers the change to Frost protection mode.

● Manual activation

By pressing **(-)** more than 5 seconds, the device will switch on Frost protection mode.

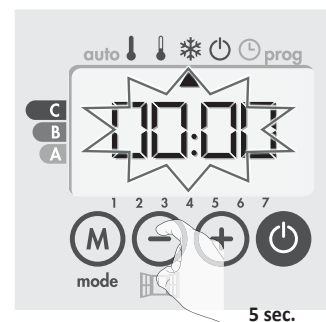

● Frost protection digital meter

When the device performs a lower temperature cycle due to opened window, a meter appears on the display to show the cycle time. The meter is automatically resets at the next time to Frost protection by open window (automatic or manual activation).

● Stop the Frost protection mode

By pressing one button, you stop the Frost protection mode.

Note: if a temperature rise is detected, the device may return to the previous mode (active mode before the open window detection).

INFORMATION ABOUT REMOTE CONTROL BY PILOT WIRE (IF CONNECTED)

• Overview

Your device can be controlled by a central control unit through a pilot wire, in which case the different operating modes will be remotely enabled by the programmer. You can only control the device by pilot wire in the Auto mode. In the other modes, the orders transmitted by the pilot wire will not be executed.

In general, a pilot wire control system makes it possible to impose externally a lowering of the temperature setpoint, combined with the internal programming.

If several lowering requests appear simultaneously, priority is given to the lowest temperature setpoint, thus maximizing savings (see information on priorities for different modes at the right of this page).

Below the different views of the display for each order sent by pilot wire:



Pilot wire = **Comfort**



Pilot wire = **Eco**
Comfort - 3,5°C




Pilot wire = **Eco - 1**
Comfort - 1°C



Pilot wire = **Eco - 2**
Comfort - 2°C



Pilot wire = **Frost protection**

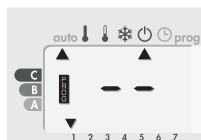

Pilot wire = **Stop**
(Standby mode)

• Exemption to an order coming from a power manager by the pilot wire


This feature allows you to modify temporarily the setting temperature until the next order sent by the central control unit or the transition to 00:00.

Example:

- 1- The device is in Auto mode. The central control unit sent an Eco order 15,5°C.



- 2- By pressing $\ominus$ or $\oplus$, you can modify temporarily the setting temperature up to 18°C for example.

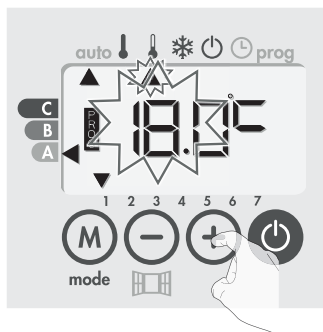

- 3- This modification will be automatically cancelled at the next order sent by the central control unit or the transition to 00:00.



INFORMATION ABOUT PRIORITIES BETWEEN THE DIFFERENT MODES

• Principle

In **Comfort, Eco and Frost protection modes**, only orders of the open window sensor will be considered.

In **Auto mode**, the radiator can receive different orders coming from:

- 7 day and daily programming integrated (Comfort or Eco orders);
- 6-order pilot wire, if connected to a central control unit;
- Open window detector.

In general, it is the lowest received order which prevails.

If case of open window detection, switching to frost protection takes precedence unless a load shedding order is present on the pilot wire.

• Examples

- + 7 day and daily programming = Comfort
- + Pilot wire 6 orders = Eco

= Eco



- + 7 day and daily programming = Comfort
- + Pilot wire 6 orders = Eco
- + Open window detector = Frost protection

= **Frost protection**





ADVANCED SETTINGS



PACK +: MODIFICATIONS, RESTRICTIONS OF THE TEMPERATURE SETTINGS, ENERGY SAVINGS

• Comfort setpoint temperature limit

You can limit the setting temperature range by introducing a maximum and/or minimum setting, preventing unintentional changes in temperature. The limit setting of the temperature setpoint is accessible from Comfort mode only.

To set:

- 1- Select the Comfort mode with the **(M)** button.



- 2- Press simultaneously on **(M)** and **(+)** for 8 seconds.



• Low-temperature limit

Locking of the setting range using a minimum temperature stop, preventing the temperature from being set below that temperature.

The minimum setting is preset to 7°C. You can adjust from 7°C to 15°C by intervals of 1°C.

To change the minimum temperature setting, press **(-)** or **(+)** and save by pressing **(M)**.

If you do not want to change it, press **(M)**: the device changes automatically to set the maximum setting.



• High-temperature limit

Locking of the setting range using a maximum temperature increase, preventing the temperature from being set above that temperature. The maximum setting is preset to 30°C. You can adjust from 19°C to 30°C by intervals of 1°C.

If you do not want to change it, press **(M)** to exit the setting and return to the Comfort mode.

To change the maximum temperature setting, press **(-)** or **(+)**. To save and exit the adjustment, press the **(M)** button.



• Setting the Eco mode temperature self lowering

The drop in temperature is set at -3.5°C compared to the set temperature of the Comfort mode. You can adjust the lowered level from -1°C to -8°C, by intervals of 0.5°C.


Important: whatever the lowering level set, the Eco setting temperature will never exceed 19°C.

- 1- By pressing the **(M)** button, several times, position the arrow beside the Eco mode.

- 2- Press **(M)** and **(+)** simultaneously for 8 seconds to enter in the setting mode.



- 3- Press **(-)** or **(+)** to obtain the temperature level you require.

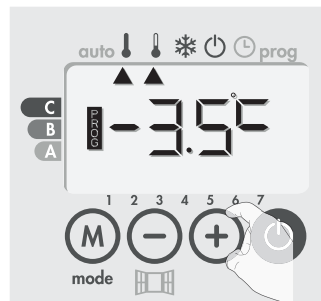

- 4- Save by pressing **(M)**.



● Setting the Frost protection temperature


Your radiator is preset at 7°C. You can adjust the Frost protection temperature from 5°C to 15°C, by intervals of 0.5°C.

1- By pressing the **(M)** button, several times, to position the arrow beneath the Frost protection mode.

2- Press **(M)** and **(+)** buttons simultaneously for 8 seconds to enter in the setting mode.



3- Press **(-)** or **(+)** to obtain the temperature you require.

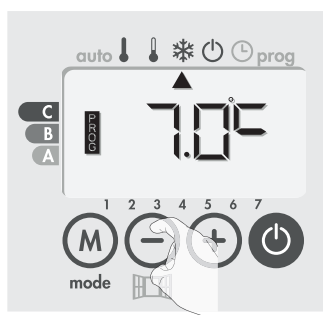


4- Save by pressing **(M)**.



3- Press **(-)** or **(+)**.

= automatic mode enabled.

= automatic mode disabled.

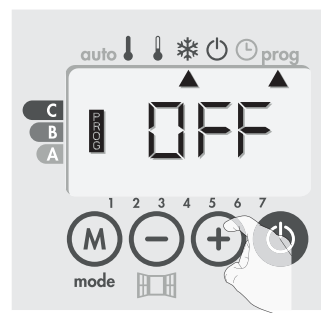

4- To save press **(M)**.

Note: Even if the auto mode is disabled, you always have the option to use the manual mode (see page 12 chapter manual activation).



PACK +: PIN CODE LOCK

● Overview

Your heating device is protected by a safety code against non-authorised use. The PIN code (Personal Identity Number) is a customisable 4 numbers code. When enabled, it prevents access to the following settings:

- Selecting the Comfort mode: The access to the Comfort mode is forbidden, only the Auto, Eco and Frost protection modes are available.
- Minimum and maximum limits of the setting temperature range (the Comfort temperature modification is forbidden out of the authorised setting range).
- Programming mode.
- Open window detection settings.
- Setting the Eco mode temperature lowering-level.
- Setting the Frost protection temperature.
- Ambient temperature sensor adjustment.


3 important steps are needed for the first use of the pin code lock:

- 1- **PIN code initialisation**, enter the preset PIN code (0000) to access to the feature.
- 2- **Activation of the PIN Code** to lock settings which will be protected by the PIN code.
- 3- **Customizing the PIN code**, replace 0000 by the customized code.

● PIN code initialisation

By default, the PIN code is not enabled. The setting access is available in Standby mode only.

1- Select the Standby mode by pressing

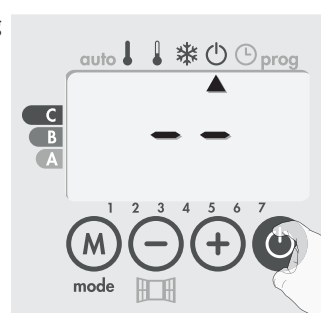


OPEN WINDOW DETECTION SETTINGS

● Activation/deactivation of the Auto mode


From Auto, Comfort ou Eco Modes:

1- Press **(-)** button - for 5 seconds.


The display blinks and the Frost protection mode duration appears on display.

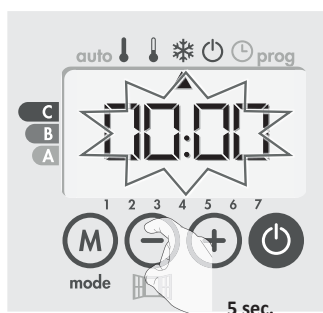


2- Press **(M)** for 5 seconds to enter the open window detection mode.

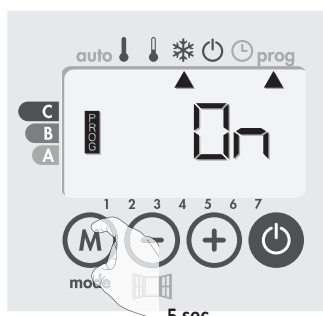


- 2- Simultaneously press the **(M)** and **(+)** for at least 20 seconds.

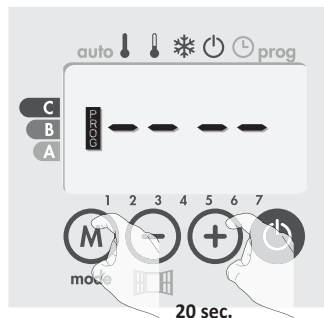

- 3- By default registered PIN code is 0000. Press **(-)** or **(+)** to select 0. It is blinking, save and press **(M)** to exit.

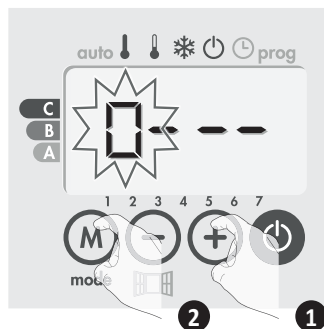

- 4- For others numbers, select 0 by press **(M)**. When 0000 appears, press on **(M)** again to save and exit.

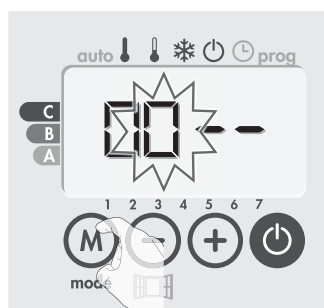

The PIN code is initialized, the next setting automatically appears: PIN Code activation.

• Activation/deactivation of the PIN Code


- 1- **OFF** appears on the display.

Press **(-)** or **(+)** to enable PIN code.

On appears on the display.


On = PIN code enabled.

OFF = PIN code disabled.

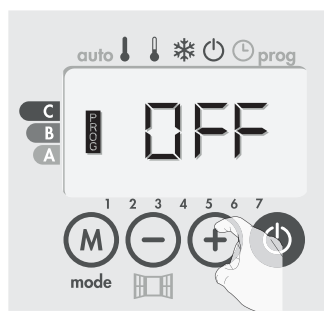

- 2- Press **(M)** to save and return to Standby mode.

The PIN code is enabled. Any modification of reserved settings listed page 15 in «Overview» is now impossible.

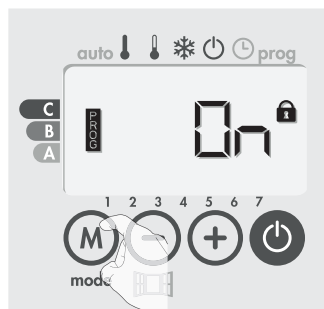


• Customizing the PIN code

If you have just activated the PIN code, follow the stages described below.

Alternatively, you must copy the steps 1, 2, 3 and 4 of the initialisation process as well as the steps 1 and 2 of the activation process before personalising the PIN code.


Please remember that the personalisation of the PIN code can only be set once the initialisation and activation of the PIN code has been completed.

- 1- When **On** appears, press **(M)** for at least 5 seconds.

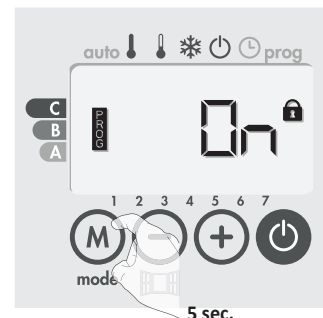

- 2- The 0000 code appears and the first number blinks.


Press **(-)** or **(+)**, to select the first desired number then press **(M)** to save and exit. Repeat this operation for remaining 3 numbers.

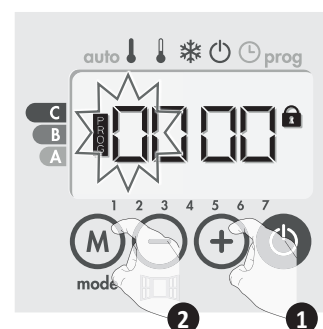

- 3- Press **(M)** to confirm. The new code is now saved.




- 4- Press again on **(M)** to exit setting PIN code mode and go back to standby mode.

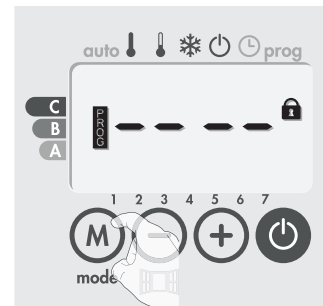


BACKLIGHT SETTING

- 1- Select the Standby mode by pressing .

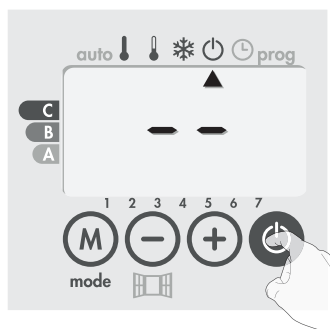


- 2- Press down the buttons  and  simultaneously, for 2 seconds then release it. You are in backlight setting mode.

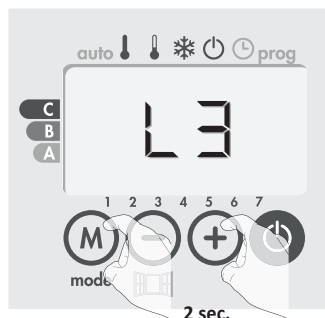

- 3- Three back-light settings can be set:

- L1** = Temporary backlighting: Backlight of the display when a button is pressed.
- L2** = Non-stop backlighting: Backlight of the display all the time.
- L3** = In this version, the device will work according to the L1 mode.
- L3** mode is the default setting.

Press  or  to choose the setting you require.

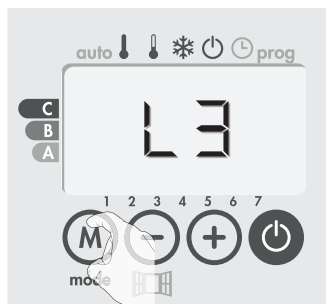

- 4- Press  to save and exit.

RESTORING FACTORY SETTINGS

In order to a coming back to factory settings, you must hold simultaneously for 8 seconds on ,  and .

- If the PIN code protection is enabled, the following factory values will be effective:

Settings	Factory settings
Comfort setting temperature	19°C
Eco mode temperature lowering-level	-3,5°C
Frost protection temperature	7°C

- If the PIN code protection is disabled, the following factory values will be effective:

Settings	Factory settings
Operating	
Comfort setting temperature	19°C
Eco mode temperature lowering-level	-3,5°C
Frost temperature mode	7°C
Active operating mode	Auto
Counter energy consumption	0 kWh
Keypad lock	Unlock
Active operative mode	Permanent Comfort daily
P1	Comfort from 6:00 to 22:00
P2	Comfort from 6:00 to 9:00 and from 16:00 to 22:00
P3	Comfort from 6:00 to 8:00, from 12:00 to 14:00 and from 18:00 to 23:00
Advanced settings	
Minimum set of Comfort setting temperature	7°C
Maximum set of Comfort setting temperature	30°C
Automatic open window detection	Enabled
Backlighting	L3 (temporised)
PIN code protection	Disabled
Value of the PIN code	0000



EXPERTS SETTINGS (RESERVED TO THE INSTALLER)

AMBIENT TEMPERATURE SENSOR ADJUSTMENT

• Overview

Important: This operation is reserved for professional installers only; any wrong changes would result in control anomalies.

In which case if the temperature measured (measured by reliable thermometer) is different by at least 1°C or 2°C compared to the setting temperature of the radiator.

The calibration adjusts the temperature measured by the ambient temperature sensor to compensate for a deviation from + 5°C to - 5°C by intervals of 0.1°C.

Important: Before carrying out the calibration it is recommended to wait for 4h after the setting temperature modification to insure that the ambient temperature is stabilized.

• Ambient temperature sensor adjustment

- 1- If the room temperature difference is negative, example:

Setting temperature (what you want) = 20°C.

Ambient temperature (what you read on a reliable thermometer) = 18°C.

Difference measured = -2°C.


To correct, press simultaneously the  and  for 30 seconds.

Sensor temperature = 24°C
(The measured temperature may be different due to the location of the thermostat in the room).



Decrease the temperature measured by the ambient temperature sensor by 2°C by pressing **-**.

In our example the measured temperature by the sensor goes from 24°C to 22°C.

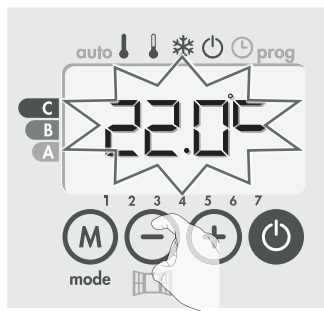

2- If the room temperature difference is positive, example:

Setting temperature (what you want) = 19°C.

Ambient temperature (what you read on a reliable thermometer) = 21°C.

Difference measured = +2 °C.


To correct, press simultaneously **M** and **-** for 30 seconds.

Sensor temperature = 21°C.
(The measured temperature may be different due to the location of the thermostat in the room).



Increase the temperature measured by the ambient temperature sensor by 2°C by pressing **+**.

In our example the measured temperature by the sensor goes from 21°C to 23°C.

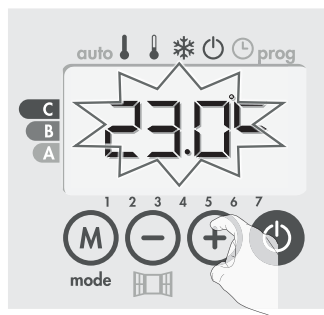


To validate, save the new value and exit the mode, press **M**.

● Sensor calibration reset

To put the value of the correction to «0», do the following:

- 1- Press simultaneously the **M** and **-** for 30 seconds.
- 2- When the temperature measured by the sensor appears, press **-** or **+** for at least 3 seconds.

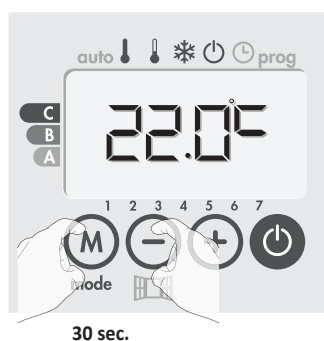

- 3- Press **M** to exit the ambient sensor adjustment mode.



POWER CUT

REMOTELY MANAGEMENT BY POWER SHUTDOWN



Important: The power supply of the device should be cut when working on the electrical system only. The load shedding does not be operated by an additional system with mechanized power shutdown (with contactor...). Unlike pilot wire shedding, the load shedding with frequent mechanized power shutdowns can cause deterioration of the device depending of the quality of switching elements used. This type of deterioration would not be covered by the manufacturer's warranty.

If remotely stop or standby orders should be frequently operated, you must use the pilot wire.

IN CASE OF POWER CUT, BACKUP

- **After short power cuts (less than 16 hrs)**, the device will start up again without any outside input being required – you do not have to do anything. All the settings and the correct time will be saved.
When the main power supply returns, your device will again operate using correct time and the settings that were programmed before the power cut (as regards desired temperature, operating mode, programmes, etc.). It will start up again in the mode which was active before the power outage.
- **For longer power supply cuts (more than 16 hrs)**, check the timer setting. All the other settings are automatically and permanently saved.



TROUBLESHOOTING

DIAGNOSIS SUPPORT

● Heating body

The device doesn't heat:

- Check the position of the circuit breaker/power supply protection fuse in your fuse board.
- Check the active operating mode (see page 8), you could be in "Standby mode" or in Auto mode, with an imposed stop order by the energy manager (see page 13).
- Check the ambient temperature using a thermometer: if it is elevated, the device has reached the desired temperature setting, therefore it is normal that it doesn't heat more.
- Switch the power off for 5 seconds at the mains supply then switch back on again.

The room temperature is not high enough, the device is not providing enough heat:

- Check the active operating mode (see page 8), you may be in Eco, Frost protection, Standby or in Auto mode, with an imposed stop order by the integrated programming or the energy manager. Activate the permanent Comfort mode.
- Check the active temperature setting and increase it if necessary (see page 9).
- Check the adjustment of the setting temperature limit (see page 14).
- If the problem persists, check the radiator sizing compared with the room dimension and insulation.

The device heats continuously and is hot on the surface:

- Check that the device is not influenced by an airstream.
- Check that the setting temperature has not been changed.
- In operation, it is normal that the device surface is hot.
- If the problem persists, check the radiator sizing compared with the room dimension and insulation.

Several situations can generate a slight metallic slam.

- The device is fixed on an irregular wall.
- The device is fixed on an uninsulated wall.
- The device is in a stream of cold air.
- The device is badly positioned in the wall-mounting brackets.
- Heat up or sudden temperature change.

Important: Failure of the internal thermal limit due to overheating caused by the user eg covering with clothing is not covered by warranty.

● Controller

The ambient temperature is lower than the setting temperature:

- Check the programming mode. You may be in Eco period.
- Check the time setting.
- Otherwise, switch the power off for 5 seconds at the mains supply circuit then switch back on again.

The ambient temperature measured by a thermometer doesn't correspond to the setting temperature after several hours.

- An offset is always possible, you can refine the device setting (see page 17).

The device does not heat while the heating indicator is on:

- The heating symbol is lit on the display, the unit is cold, contact your installer.

After a subsequent temperature drop at the opening of a window, the device will not enter in Frost protection mode:

- Check that the automatic mode of the open window detection is enabled (see page 15).
- Check the location of your radiator (see page 12).
- Check that the temperature difference between the room air and outside air is significant.

The device automatically enters in Eco or Frost protection mode when the windows are closed:

- If the pilot wire is connected to a central programming via pilot wire, check the programming of the central.
- Disable the automatic open window detection mode (see page 15).

The device is in Auto mode, remotely controlled by an energy manager or programmer but the programming orders are not executed by the device:

- Make sure the energy manager or programmer is in good condition, refer to the user instructions.
- Change the batteries of the energy manager or the programmer if this one contains it.

No symbol appears on the display screen.

- Check the position of the circuit breaker/power supply protection fuse in your distribution/fuse board.

You want to increase or decrease the setting temperature but pressing a key on the keyboard has no effect:

- If the padlock symbol is displayed, the keypad lock is enabled. Unlock the keypad as shown in the manual, child anti-tamper section (see page 10).
- Check the changes, restrictions temperature settings (see page 14).

You made a mistake while setting the advanced settings.

- Just restore factory settings – see the "Restoring factory settings" paragraph (see page 17). This will erase any programmes that you would have implemented.

If the problem persists, then contact your reseller.



TECHNICAL INFORMATION


MAINTENANCE

Before any maintenance work, select the Standby mode  by pressing  and wait until the device is cold.

The device can be cleaned with a damp cloth; never use abrasives or solvents.

PRODUCT LABEL

The product label is the identity card of your device. It contains all informations required of its traceability through time.

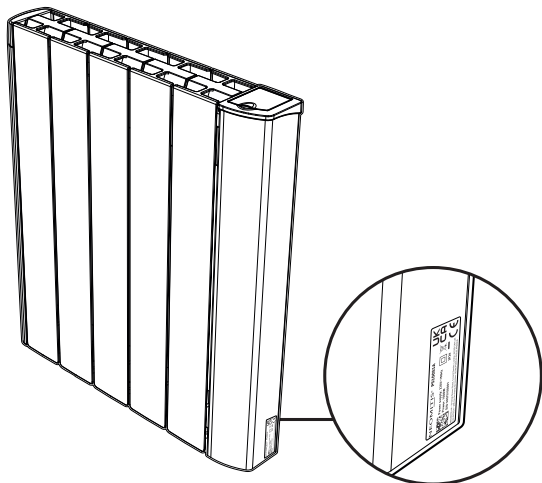

Product reference

Logos and symbols relating to standards

Serial number

Manufacturer identification

Product identification


Important: the serial number allows the manufacturer to identify your device.

If you contact your installer about the product you have purchased, take the references of your radiator.

Make sure to keep instructions even after the product installation.

DIMENSIONAL SPECIFICATIONS

Models	Power outputs (W)	Width (mm)	Height (mm)	Depth* (mm)	Number of elements
PS050S1A	500	417	580	80	4
PS075S1A	750	498	580	80	5
PS100S1A	1000	578	580	80	6
PS125S1A	1250	738	580	80	8
PS150S1A	1500	817	580	80	9
PS200S1A	2000	1057	580	80	12

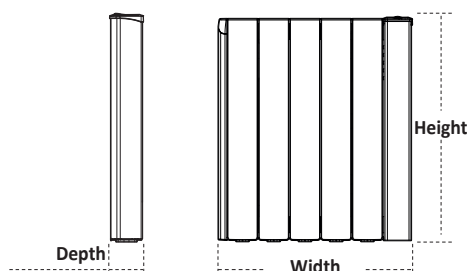

* For the depth of Digital Aloe radiators installed, add 40 mm to the value of their depth.

TECHNICAL SPECIFICATIONS

General specifications:

- Power supply: 230V AC +/-10% 50 Hz.
- Consumption in standby mode: <1W.
- Electronic control integral plus, with engagement by triac.
- Thermal Safety: The radiators are equipped with a system to protect the device against overheating.

Environment:

- Safety: Class II, IP24.
- Storage temperature: -20°C to +60°C.

Features:

- Setpoint adjustment range Confort +7°C to +30°C.
- Saving settings users in case of power failure.
- Programming: assigning a Comfort/Eco profile for each day of the week.
- 5 programming profiles.
- Pilot wire 6 orders.

UKCA declaration of conformity: We, Neomitis Ltd, hereby declare under our sole responsibility that the products described in these instructions comply with statutory instruments 2016 No.1101 (Electrical Equipment safety Regulations), 2016 No.1091 (Electromagnetic Compatibility Regulations), 2012 No.3032 (ROHS), 2019 No. 539 (The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations) and following designated standards listed below:

- Safety Regulations 2016 (2016 No.1101): EN 60335-1:2012/ AC:2014/ A11:2014/ A13:2017/ A1:2019/A14:2019/ A2:2019, EN 60335-2-30:2009/ A11:2012/ AC:2010/ AC:2014, EN 62233:2008/ AC:2008 ;
- EMC Regulations 2016 (2016 No.1091): EN 55014-1:2017/ A11:2020, EN 55014-2:1997/ A1:2001/ A2:2008/ AC:1997, EN 61000-3-2:2014, EN 61000-3-3:2013 ;
- RoHS Regulations 2012 (2012 No.3032): EN IEC 63000:2018.

Neomitis Ltd: 16 Great Queen Street, Covent Garden, London, WC2B 5AH UNITED KINGDOM - contactuk@neomitis.com

EU declaration of conformity: We, Co-Intech, hereby declare under our sole responsibility that the products described in these instructions comply with the provisions of Directives and harmonized standards listed below:

- LVD: EN 60335-1:2012 +A11:2014 +A13:2017 +A1:2019 +A2:2019 +A14:2019 /EN 60335-2-30:2009 +A11:2012 +A1:2020 +A12:2020 / EN 62233:2008
- EMC: EN 55014-1:2017 +A11:2020/ EN55014-2 :2015/ EN 61000-3-2: 2019/ EN 61000-3-3:2013 +A1 :2019
- ROHS: EN IEC 63000:2018
- ERP directive : 2009/125/CE: standard 2015/1188/EU

Co-Intech: ZI Montplaisir - 258 Rue du champ de courses - 38780 Pont-Evêque - France - contact@co-intech.com

Neomitis Ltd and Co-Intech belong to Axenco Group.

The symbol , affixed on the product indicates that you must dispose of it at the end of its useful life at a special recycling point, in accordance with European Directive WEEE 2012/19/EU. If you are replacing it, you can also return it to the retailer from which you buy the replacement equipment. Thus, it is not ordinary household waste. Recycling products enables us to protect the environment and to use less natural resources.

INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATERS

Item	Symbol	Value						Unit
Heat output								
Nominal heat output	P _{nom}	PS050S1A	PS075S1A	PS100S1A	PS125S1A	PS150S1A	PS200S1A	kW
		0.5	0.75	1.0	1.25	1.5	2.0	
Minimum heat output (indicative)	P _{min}	PS050S1A	PS075S1A	PS100S1A	PS125S1A	PS150S1A	PS200S1A	kW
		0	0	0	0	0	0	
Maximum continuous heat output	P _{max,c}	PS050S1A	PS075S1A	PS100S1A	PS125S1A	PS150S1A	PS200S1A	kW
		0.5	0.75	1.0	1.25	1.5	2.0	
Auxiliary electricity consumption								
At nominal heat output	el _{max}	None						kW
At minimum heat output	el _{min}	None						kW
In heating standby mode	el _{sb}	0.001kW						kW
Item								Unit
Type of heat input, for electric storage local space heaters only								
Manual heat charge control, with integrated thermostat								NO
Manual heat charge control with room and/or outdoor temperature feedback								NO
Electronic heat charge control with room and/or outdoor temperature feedback								YES
Fan assisted heat output								NO
Type of heat output/room temperature control								
Single stage heat output and no room temperature control								NO
Two or more manual stages, no room temperature control								NO
With mechanic thermostat room temperature control								NO
With electronic room temperature control								NO
Electronic room temperature control plus day timer								NO
Electronic room temperature control plus week timer								YES
Other control options								
Room temperature control, with presence detection								NO
Room temperature control, with open window detection								YES
With distance control option								NO
With adaptive start control								NO
With working time limitation								NO
With black bulb sensor								NO
Contact details								
NEOMITIS LIMITED - 16 Great Queen Street, Covent Garden, London, WC2B 5AH UNITED KINGDOM								

LEGAL GUARANTEE (EXTRACT OF TERMS AND CONDITIONS)

Clause 6 - Guarantee:

6.1. Guarantee of patent defects - Principle: Our products must be verified by the customer upon delivery. Any and all claims, reservations or disputes regarding missing items and patent defects must be submitted in the manner set forth in these General Terms and Conditions.

In the event of patent defects, the defective parts shall be replaced by us, subject to verification of the alleged defects.

We shall not be held responsible for patent defects or missing parts of which the purchaser was aware before entering into the sales agreement.

The customer shall have to provide any and all evidence as to the reality of the defects noted (paperwork, photographs, etc.), and our company reserves the right carry out, directly or indirectly, any and all checks and verifications, notably on site.

Notice of the missing items or of the patent defects which were noted at the time of delivery, and those discovered after acceptance and intake of the products, shall have to be provided by the customer in writing within twenty-four hours following the date on which the latter discovered the said missing item or defect. No notice shall be taken into account if it is provided more than eight full days following delivery of the products. Once said timeframe has expired, the customer shall no longer be able to put forward as a ground non-conformity of the products as regards patent defects or missing items, or raise said non-conformity in a counter-claim in its defence at the time of legal proceedings regarding the collection of monies owed brought by our company.

6.2. Guarantee of hidden defects: Our company guarantees its products against the hidden defects which existed on the date on which products are delivered, in accordance with the law, under the terms set forth hereinafter.

Our guarantee only applies to products which have lawfully become the property of the purchaser. It only applies to products which were manufactured in full by our company. Our guarantee covers hidden defects. Since our customers are trade professionals, a hidden defect is defined as an unacceptable manufacturing defect affecting a product which renders the latter unfit for the intended use thereof which is not liable to be detected by the purchaser before it is used. "Unfit for the intended use thereof" means that the defect prevents the piece of equipment from operating. Thus, the design of the product is not covered by the hidden defects guarantee – our customers are deemed to have received all of the technical information regarding our products. We do not guarantee against malfunctions or damage or wear and tear arising out of adaptations or fitting of our products which are special or unusual or usual. Likewise, allegations regarding occasional or variable malfunctions, a lack of comfort, unhappiness regarding the results obtained, aesthetic defects, in particular, are not covered by the guarantee against hidden defects. A defect is not hidden if, despite the fact that the purchaser was not aware of it in good faith, it could have been discovered by carrying out basic verifications.

Our guarantee is limited to the replacement or repair of defective parts. It does not give rise to compensation.

6.3. Contractual guarantee: A specific contractual guarantee can be provided by our company for such equipment. In such case it shall be strictly limited to the stipulations set forth by us.

6.4. Terms covering the application of guarantees: Any and all requests for coverage in respect of the guarantee must be made using our After-Sales Service Return Request Form. All claims must be made by the Customer to the Supplier's After-Sales Service Department, given that no direct claims by the user shall be taken into account. The guarantee request shall be taken into account upon production of a dated purchase receipt.

It is the responsibility of the purchaser who alleges a defect, regardless of the defect in question, to provide proof of the existence and of the nature thereof. An application is for-warded by the purchaser to our staff. Likewise, any and all guarantee requests shall have to be accompanied by evidence that it does not fall under one of the said exclusion cases. The purchaser must do his or her utmost to enable said defects to be officially recorded and remedied. He or she must further-more absolutely abstain from replacing the products or have said replacement carried out by a third party, failing which guarantee coverage shall not be provided.

The guarantee coverage is limited to merely exchanging or repairing the defective part. If it proves indispensable, after examination by the Supplier's Technical Staff, replacement of the appliance in full shall be carried out as a temporary measure. Said replacement measure, taken as a temporary measure, under no circumstances howsoever constitutes an acknowledgment of responsibility on our part. In the event of replacement of the defective part or of the appliance as a whole, transport, removal and fitting costs are excluded from the guarantee. In the event of immediate replacement as a temporary measure, the defective equipment shall have to reach our staff within fifteen calendar days of the replacement thereof. Failing which, the replaced equipment shall be invoiced.

All returns shall be carried out in suitable packaging, with the equipment properly wedged. The cost of the return shall be borne by the customer. No returns of parts shall be accepted unless approved beforehand by our After-Sales Service Department. The customer shall receive an assessment carried out by our After-Sales Service Department in the event that the latter concludes that the return was unjustified.

The guarantee coverage excludes any and all compensation in respect of damages. The installer must be insured against any eventual damage.

Moreover, our guarantee automatically ceases to apply when our customer has not notified us of the alleged defect within a timeframe of thirty full days from the date of

the facts cited as justifying the claim for guarantee coverage.

The onus is on the customer to provide evidence of the dates referred to in the claim.

6.5. Specific exclusion in respect of apparent defects: Defects and damage to the products delivered consecutive upon circumstances relating to carriage, to storage and/or to preservation conditions at the customer's premises, in particular in the event of an accident of any type howsoever, shall not give rise to an entitlement under the guarantee provided by our company.

The guarantee does not apply to equipment already resold by our purchaser.

6.6. General exclusions in respect of the all the guarantees: All guarantees are invalid as soon as our products have been used under usage or performance circumstances for which they were not intended or which do not constitute normal usage.

The guarantees do not apply if the following conditions have not been complied with, to wit notably:

- Storage away from sources of humidity and the effects of bad weather.
- Set-up and installation in accordance with best practice.
- Utilisation with a 230V domestic power supply.
- Utilisation compliant with the Supplier's instructions for installation and use.

The guarantees do not apply to any eventual damage which is the consequence of overvoltage or other faults which occur in power supply and distribution circuits.

The guarantees apply to corrosion defects only if the appliances are used in accordance with the usual circumstances which apply in a single housing unit or in the tertiary sector; in particular they must not be:

- Subject to intensive and continuous ambient humidity (from swimming pools, etc.);
- Cleaned using acidic substances which are liable to affect their properties.

The development of a shade of colour over time is a natural phenomenon and cannot give rise to a guarantee claim. The guarantees do not come into play if the acquirer cannot provide evidence of full payment for supplies and/or if the installation and usage instructions provided by the vendor were not complied with, and less specifically in the event that the damage caused arose out of the actions of the purchaser or of the servants thereof, out of force majeure circumstances or out of unforeseen circumstances. The guarantees do not apply in the event of a defect originating either in the components supplied by the purchaser and in the event of a design having been required by the purchaser, without the vendor having taken part in said end design process, or if the product did not meet aims determined by the customer of which the vendor was not notified. All points not mentioned in writing in the order are not guaranteed. All damage caused by normal wear and tear is also excluded from the guarantee.

The guarantees only apply to products produced in production runs, to the exclusion of prototypes and samples.

6.8. Guarantee period: The guarantee period for missing parts and patent defects varies depending on the nature of the defect in question and on the type of equipment in question:

- As regards domestic hot water heat pumps : a 3-year guarantee on the product and a 5-year guarantee on the tank (anode excluded) from delivery of the appliance in the case of a non-compliance defect ;
- As regards central heating steel panel heaters: a 10-year guarantee from delivery of the appliance in the case of a non-compliance defect ;
- As regards central heating towel dryer radiators: a 5-year guarantee from delivery of the appliance in the case of a non-compliance defect ;
- As regards electric radiators, electric and dual-fuel towel rails and accessories: a guarantee lasting 30 months from delivery of the appliance up to a maximum of 36 months after its manufacturing date in the case of a non-compliance defect ;
- As regards spare parts: 2 years from the exchange.

The guarantee for hidden defects is provided for duration of 30 months from delivery. The spare parts vital for the use of the machine or equivalent spare parts continue to be available for five years from the date of manufacture of the appliance.

Work carried out under the guarantee does not have the effect of extending the duration of the guarantee.



NOTES



NEOMITIS® LIMITED - 16 Great Queen Street, Covent Garden, London, WC2B 5AH UNITED KINGDOM
Registered in England and Wales No: 9543404

Tel: +44 (0) 2071 250 236 - Fax: +44 (0) 2071 250 267 - E-mail: contactuk@neomitis.com



www.neomitis.com

