



Instruction Manual

Top Half Antique Unifloss

Model Series: 3119



3119 (100) shown on Cart with
Floss Unit (all sold separately)



3119NL shown on Cart with
Floss Unit (all sold separately)



GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA





Table of Contents

SAFETY PRECAUTIONS	3
INSTALLATION INSTRUCTIONS	5
Inspection of Shipment	5
Manual	5
Model Description	5
Items Included with this Unit	5
Setup	6
Electrical Requirements	7
Before You Plug In Machine	7
OPERATING INSTRUCTIONS	8
Controls and Their Functions	8
Care and Cleaning	9
Daily Unit Cleaning Instructions	9
Daily Filter Cleaning Instructions	9
—THE FOLLOWING SECTIONS ARE FOR QUALIFIED SERVICE PERSONNEL ONLY—	10
MAINTENANCE INSTRUCTIONS	10
ORDERING SPARE PARTS	11
Replacing Broken Glass	11
Cabinet Exterior – Front View	12
Cabinet Interior	13
Dome Interior – Safety Labels	14
Wiring Diagram	15
WARRANTY	17



SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning. 008_012221
	 DANGER Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. 014_020416
	 WARNING Floss head rotates at high speeds. Operator MUST keep hands and face clear of the floss head to avoid injury. Operator must wear eye protection. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection. 015_062714
	 WARNING Keep all foreign objects out of floss head. To avoid eye injury, DO NOT fill floss head with sugar while the head is on and rotating. 016_010914
	 WARNING Burn Hazard. DO NOT touch spinner head. Allow to cool before cleaning or servicing. Avoid contact with molten sugar. 006_092414
	 WARNING ALWAYS wear safety glasses when servicing this equipment. 010_010914
	 WARNING No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514





	 WARNING Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862 022_060215
	 WARNING DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012_010914
	 WARNING This machine is NOT to be operated by minors. 007_010914
	 CAUTION If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard. 039_080614

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) General images may be used in manual for reference only.



INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

3119 (100): Top Half Antique Unifloss, gold color cabinet with 15 vintage LED display lights. (Top Half Antique Unifloss mounts on a cart, base, or countertop for use with a cotton candy machine, items not included with unit.)

3119NL: Top Half Antique Unifloss, gold color cabinet; no display lights.
(Top Half Antique Unifloss mounts on a cart, base, or countertop for use with a cotton candy machine, items not included with unit.)

Items Included with this Unit



**Instruction
Manual**

**Registration
Warranty Card**

**Only included in units
with Display Lights;
select Models only.**



Display Light Bulbs (x15)
(PN 105041, one bulb)




**Clear Lens Body and
Lens Cap (x15)**



Setup

This unit has been tested at the factory.

1. Remove all packaging and tape prior to operation.
2. Place the unit on a sturdy, level base, or cart. For Countertop installation, place the unit over a cutout in the countertop. A shelf (sold separately) is required under the counter to set the floss unit on.
3. Blower vents out the top of unit, allow adequate clearance for airflow.
4. **To Install the Display Lights (if equipped, select Models only):** There are 15 Display Lights on the unit. Each light has an LED bulb, clear lens body, and a clear lens cap. Unpack the display light parts and assemble as shown below.

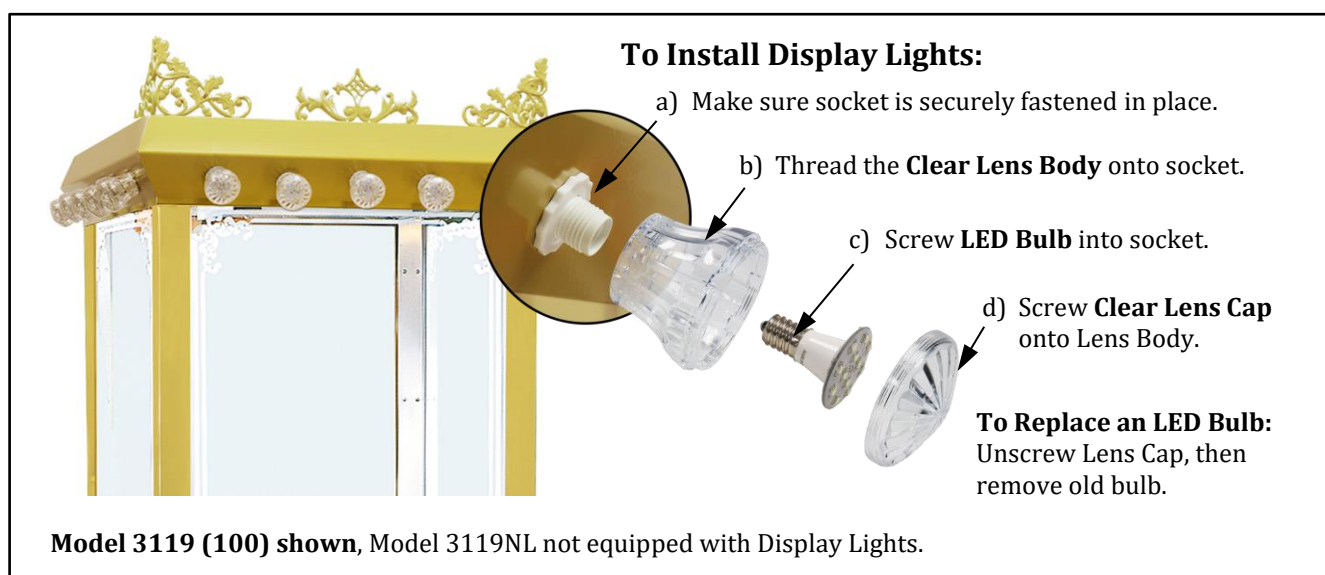

5. After setup, unit should be cleaned prior to use (see Care and Cleaning section).



Electrical Requirements

The following power supply must be provided (reference unit Data Plate for Wattage requirement):

120 V~, 60 Hz

	 DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning. 008_012221

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle (reference unit Data Plate for model specific Volts AC, Hertz, and Wattage requirements). We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.

	 CAUTION
	If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard. 039_080614



OPERATING INSTRUCTIONS


Controls and Their Functions

LIGHTS SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the exterior display lights (if equipped, on select Models only) and interior cabinet light. The green switch light ON indicates there is power to the lights.

FAN SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the exhaust blower. The green switch light ON indicates there is power to the blower.

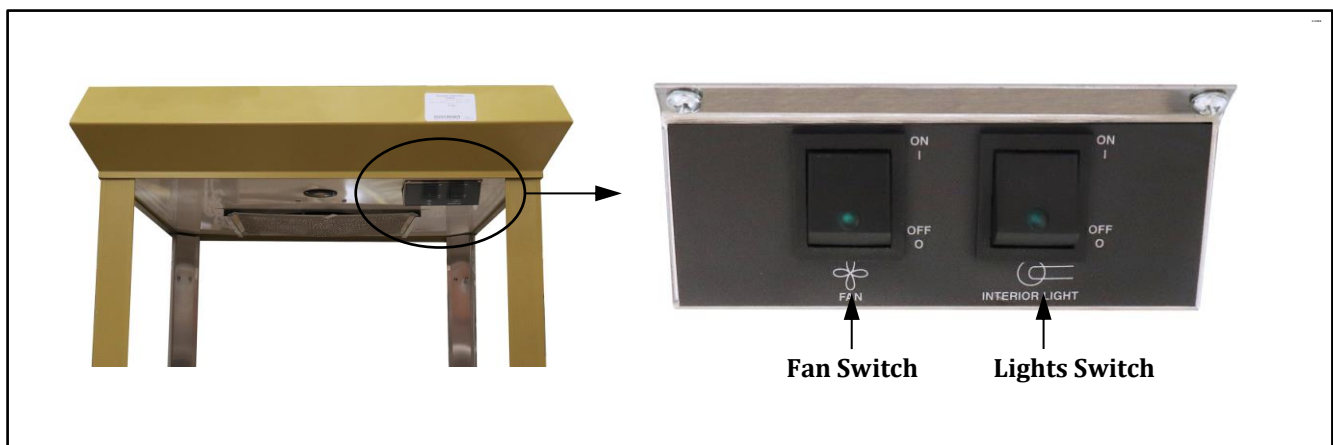

Care and Cleaning

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. DO NOT clean appliance with a water jet or steam cleaner. Always unplug the equipment before cleaning or servicing. 025_051321
---	---

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners).

Daily Unit Cleaning Instructions

1. Refer to the Floss Unit Manual for instructions on cleaning the floss machine.
2. Turn Floss Machine and the Antique Unifloss OFF, unplug the units and allow them to cool before attempting to clean.
3. Take a clean, SLIGHTLY damp cloth and wipe unit.
4. Wipe stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).
DO NOT use oven cleaners or abrasive materials as they will damage parts of machine.
5. Clean glass panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.

Ammonia cleaners will damage plastic panels. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).

Daily Filter Cleaning Instructions


The Antique Unifloss is equipped with an efficient and durable filtration system. The filter should be cleaned each day after use.

Steps to Clean Filter

Step 1: Turn unit OFF. Filter is located on the ceiling inside the unit.

Step 2: Remove filter by sliding it out of the filter retaining angles.

Step 3: Clean filter in warm soapy water, then rinse and allow to dry overnight. Reinstall filter to its original position (reference image shown).

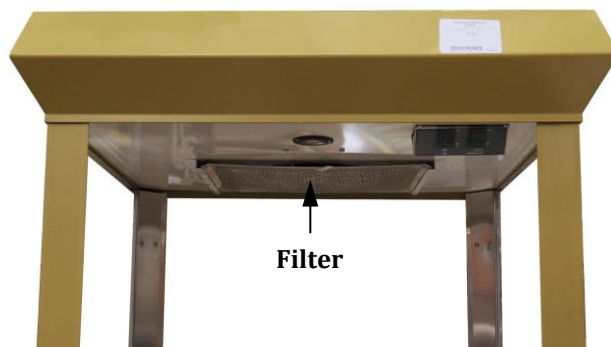

—THE FOLLOWING SECTIONS ARE FOR QUALIFIED SERVICE PERSONNEL ONLY—

MAINTENANCE INSTRUCTIONS

	 DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. DO NOT immerse any part of this equipment in water. DO NOT use a water jet or excessive water when cleaning. 008_012221

	 DANGER
	Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. 014_020416

	 WARNING
	No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514

	 CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR. 027_010914





ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list. (General images may be used in manual for reference only.)
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to Parts Department, Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, Ohio 45241-4807

or place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676

Fax: (800) 542-1496
(513) 769-8500

E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com

Replacing Broken Glass

Broken glass panels can be easily replaced. Gold Medal Products Co. does not ship glass. It can be obtained from a local glass shop, always purchase tempered glass.

GLASS DIMENSIONS (Height x Width x Thickness)

Front and Side Glass: 28 1/8" x 23 3/16" x 1/8"

1. Turn machine OFF, unplug unit and allow it to cool before attempting to replace glass.
2. Carefully remove all loose pieces of broken glass.
3. Lift out the corn pan (bottom pan).
4. Locate the Glass Retainer Strips on each corner post holding in the glass panel, and remove the screws to unfasten the retainers.
5. Carefully remove the rest of the broken glass.
6. Remove all rigid glass channels from around the glass to be replaced, set channels aside for reuse.
7. Apply decals (if desired) to new glass panel.
8. Slide rigid glass channels over the exposed sides and bottom of new glass panel.
9. Fasten new glass panel in machine with existing glass strips and screws.
10. Reinstall corn pan (bottom pan).





Cabinet Exterior – Front View

1

Inspection Cover Assembly
(Gold cover/ornament assy.)

3

4

2

3

4

5

6

7

8

9*, 10

Power Cord,
Strain Relief
(not shown)

Reference Setup section for
bulb installation.

Assembly includes socket
and lens pieces shown
(LED Bulb sold separately).

Display Lights on
select Models only.

For Glass Panels,
see Replacing
Glass section.

*CAUTION: If supply cord is damaged, it must be replaced by
Gold Medal Products Co., its service agent, or similarly
qualified persons in order to avoid a hazard.


General 3119 (100) image shown for parts reference only (Cart, Floss Machine and Floss Pan sold
separately); (Model 3119NL not equipped with display lights).

Item	Part Description	Part Number	
		3119-00-100	3119NL
1	INSPECT COVER, W/A GOLD (Top Inspection Cover and Ornament Assembly – Gold)	13124	13124
2	ORNAMENT WELDMENT (center ornament)	17078G	17078G
3	CORNER ORNAMENT NEW STYLE (left mount)	47402LG	47402LG
4	CORNER ORNAMENT NEW STYLE (right mount)	47402RG	47402RG
5	ANTIQUE LED SOCKET (see image reference)	105040	
6	ANTIQUE LED BULB (not included in socket assy.)	105041	
7	27 13/16" GLASS CHANNEL (used on side edges of glass panels)	47697	47697
8	22 7/8" GLASS CHANNEL (used on top and bottom edges of glass panels)	47694	47694
9*	POWER SUPPLY CORD	22038	22038
10	STRAIN RELIEF SR-6P3-4	76026	76026





Cabinet Interior

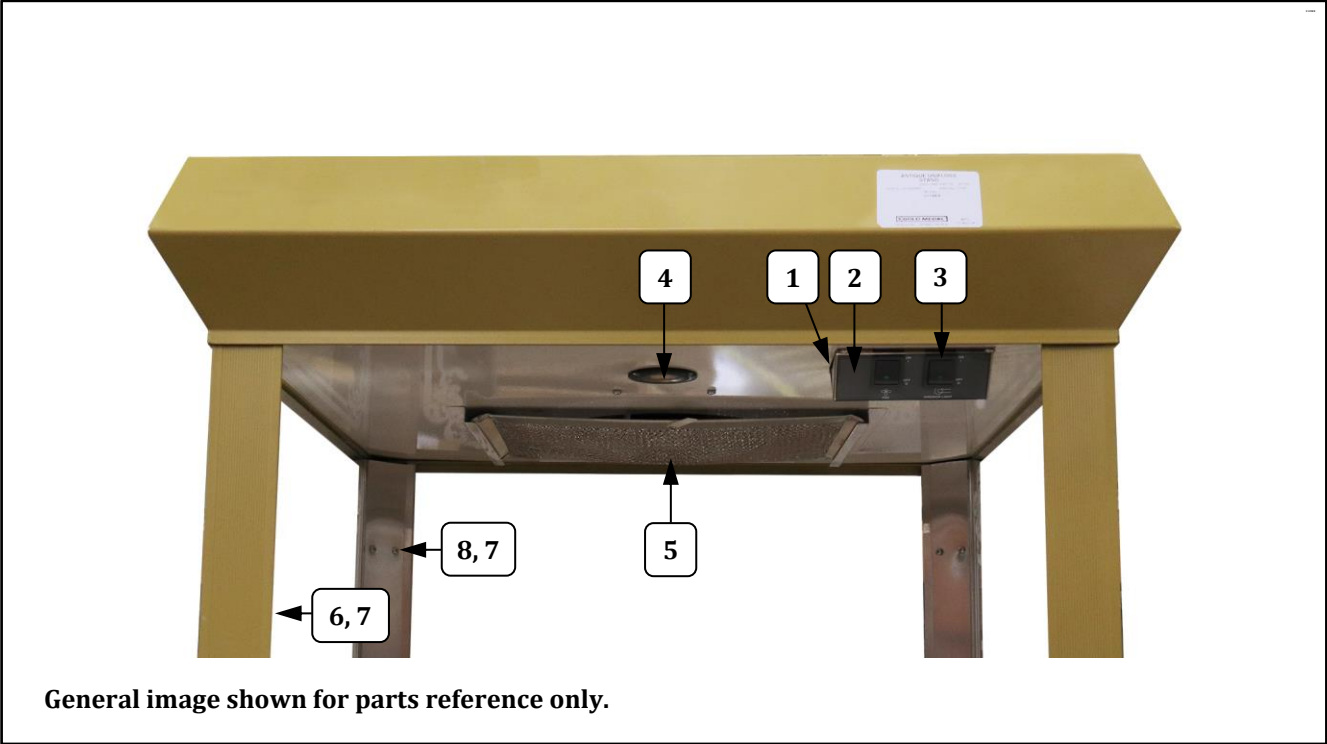


Item	Part Description	Part Number
1	ROCKER SWITCH BOX 2 C/O	74887
2	ROCKER SWITCH LABEL	13014
3	LIGHTED ROCKER SWITCH	42798
4	LED LIGHT 800 LUMENS	55590
5	ALUMINUM MESH FILTER	13013
6	GLASS RETAINER REAR (2 required)	47592
7	SCREW #8-32X1/2 PAN HD PH (fastens rear/front retainers)	74147
8	GLASS RETAINER FRONT (2 required)	47593





Dome Interior – Safety Labels

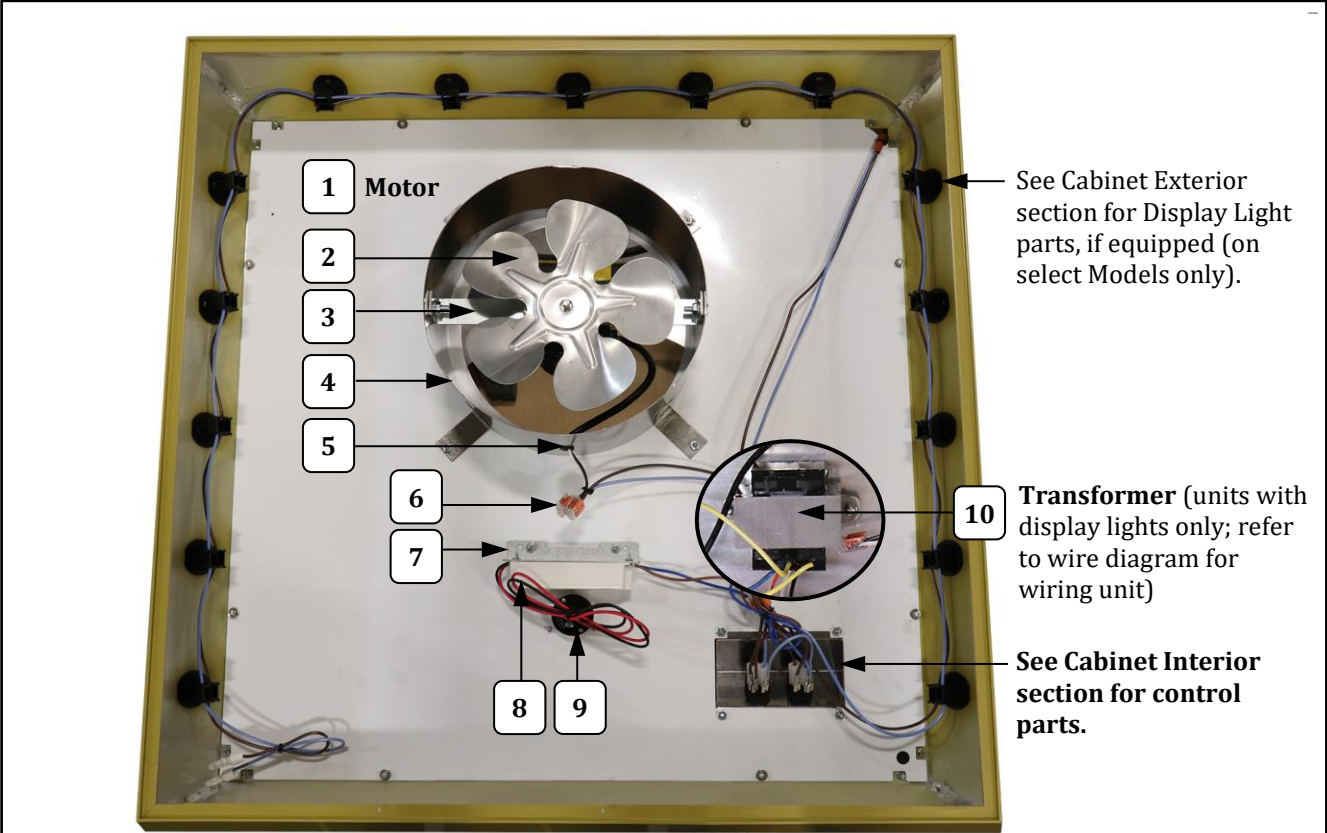

General 3119 (100) image shown for parts reference only (Model 3119NL not equipped w/display lights).

Safety Labels




Unit Labels

Power Cord Label


Item	Part Description	Part Number	
		3119-00-100	3119NL
1	MOTOR	13010	13010
2	FAN BLADE	13009	13009
3	FAN MOUNT BRACKET	13028	13028
4	FAN HOUSING ASSY	13105	13105
5	BUSHING, SNAP .500 IN	47236	47236
6	3 POSITION WIRE CONNECTOR	55244	55244
7	20W POWER SUPPLY BRACKET	55414	55414
8	POWER SUPPLY 24VDC 20W	55394	55394
9	LED LIGHT 800 LUMENS	55590	55590
10	TRANSFORMER, 12/24 VOLT	39459	
11	LABEL UNPLUG TO CLEAN	76097	76097
12	MAIN GROUND LABEL	42375	42375
13	WARNING LABEL CORD	68720	68720

Wiring Diagram

Model No. 3119-00-100

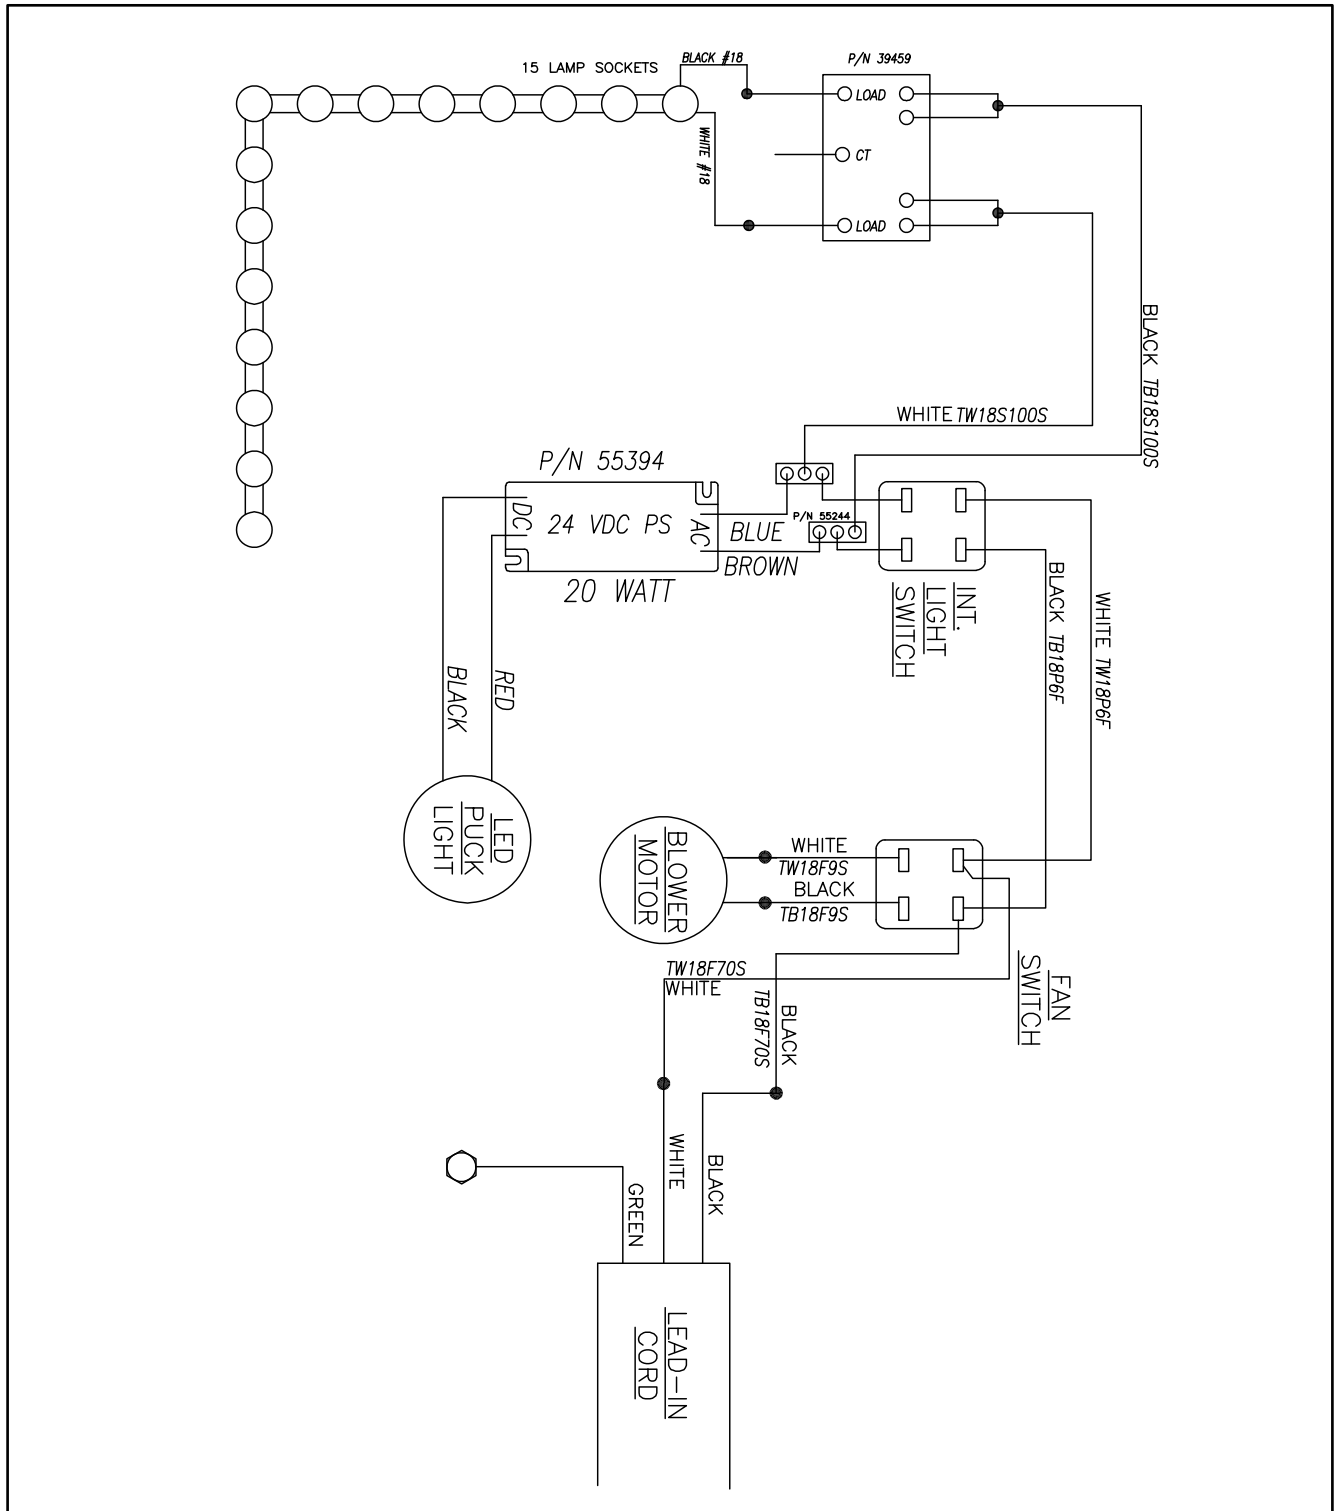

Model No. 3119NL

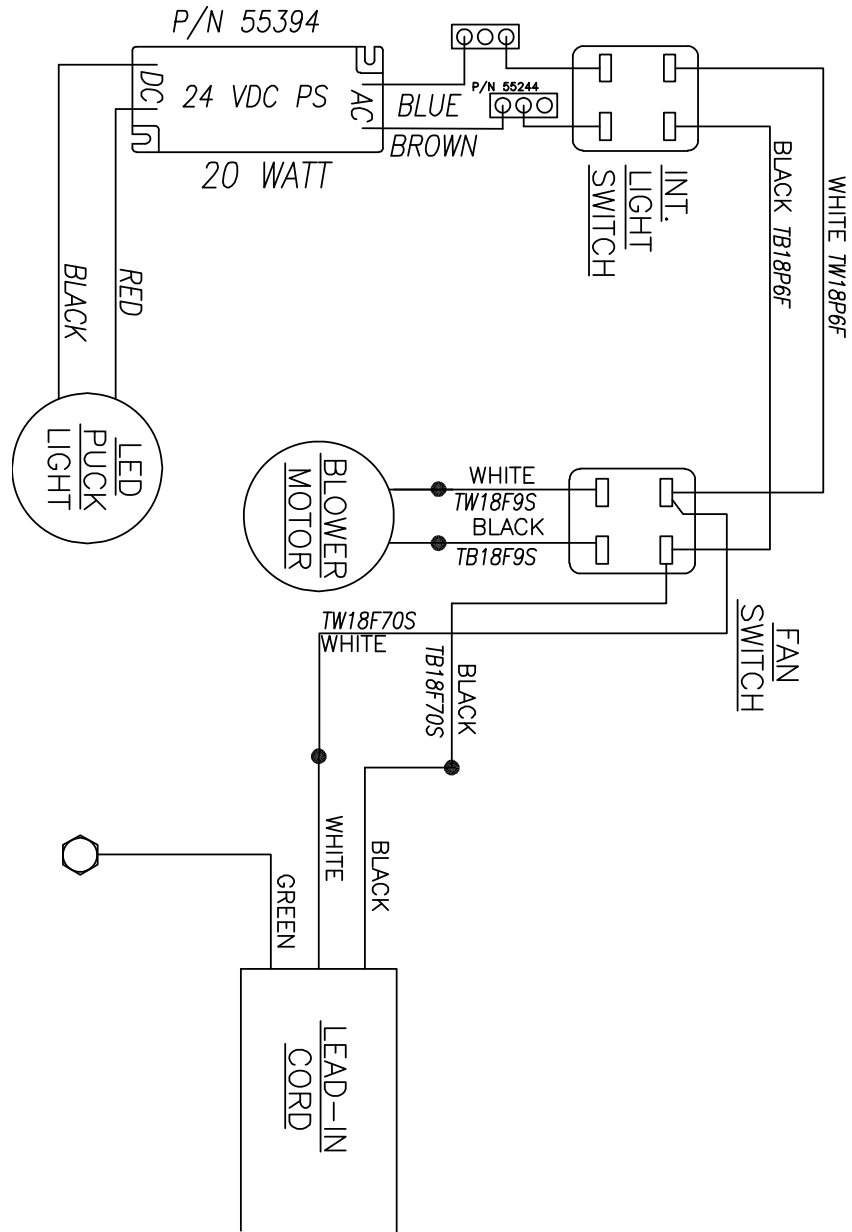



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500

