


decakila

KEEN001W

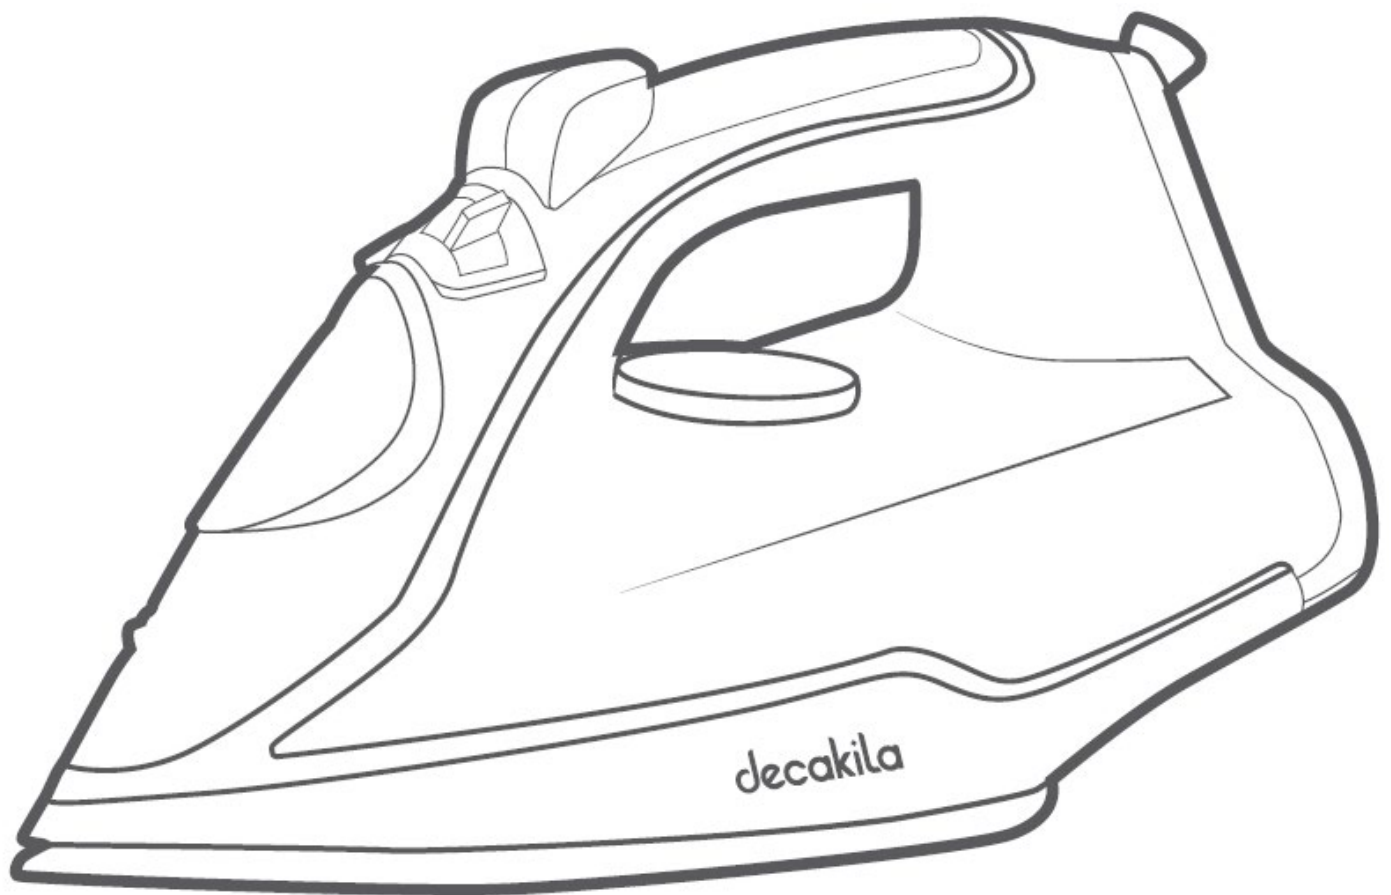

Content:

1. BASIC WARNINGS ABOUT YOUR SAFETY
2. MAIN PARTS OF THE MACHINE
3. INSTRUCTIONS FOR USE
4. CLEANING AND MAINTENANCE
5. DISPOSAL OF DEPOSITS AND REMAINS
6. WARRANTY

1. BASIC WARNINGS ABOUT YOUR SAFETY


Please read the Instructions for Use carefully and then proceed and save them!

Do not forget to enclose these instructions if you give the device to someone else. This appliance is intended for domestic use or for use in non-industrial applications similar to domestic ones.

- Read the owner's manual before using the product.
- Before use, check the voltage of the product if it is the same as your home.
- When ironing with steam, it is recommended to use distilled water.
- When the iron is in operation, the user should not leave the work area or allow children to touch the iron.
- When filling water or pouring out the remaining water, first unplug the iron.
- After use, turn the temperature control knob to "0", pull out the plug, place the iron on a smooth and vertically stable place. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- The iron should not be used if it has been dropped, if there are visible signs of damage, or if it is leaking.
- The iron must not be left unattended while it is connected to the mains.
- The plug must be removed from the outlet before the water tank fills with water.
- The iron must be used and rest on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed is stable.
- This appliance is not designed for use by persons (including children) with reduced physical, sensory or mental abilities, or who lack experience and knowledge, unless they have been supervised or instructed in the use of the appliance by a responsible person. of your safety.
- Children must be supervised to ensure that they do not play with the appliance.



2. MAIN PARTS OF THE MACHINE

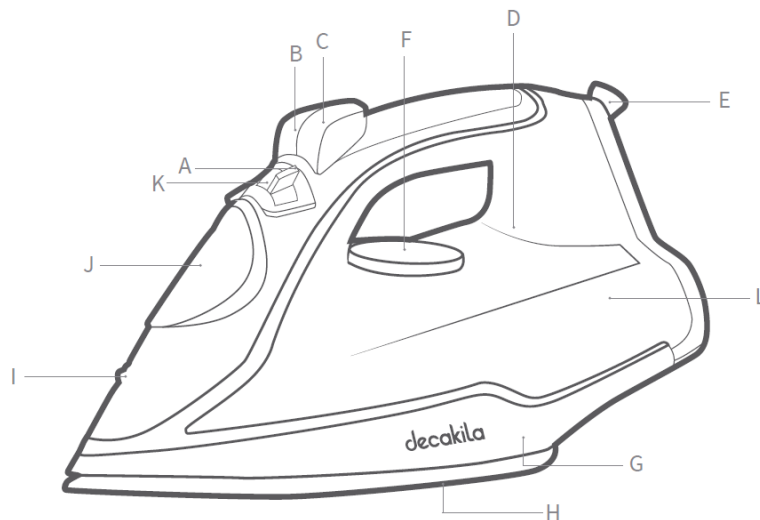

- A: Steam selector
- B: Steam fire button
- C: Spray button
- D: Indicator light on
- E: Power cord
- F: Temperature control knob
- G: Water inlet cap
- H: Heat plate
- I: Spray nozzle
- J: Water filled opening
- K: Self-cleaning button
- L: Iron body

The product has many functions such as temperature regulation, spraying, dry ironing, normal steam, burst steam, self-cleaning, etc. And it has characteristics: high thermal efficiency, easy to use, good ironing result, labor saving and time saving, etc.

3. INSTRUCTIONS FOR USE

HOW TO FILL WATER

Lift the cap off the water filler neck, fill it until full, push the cap back to its original position.

HOW TO IRON DRY

1. Turn the temperature regulating knob to "0" position, turn the steam knob to "0" position, put the plug into the socket.
2. Turn the temperature control knob to the temperature scale that the ironed clothes require, the indicator will light up and then place the iron on a smooth and vertically stable place.
3. After the indicator turns off, you can start ironing.

HOW TO SPRAY

Press the spray button repeatedly, the water will come out from the spray nozzle, at that time, you need to keep enough water in the water tank.

HOW TO IRON WITH STEAM

1. Fill the water tank with water.
2. Use steam ironing, turn the steam knob to position "1, 2, 3", the method of regulating the temperature is the same as for dry ironing.
3. After the indicator turns off, turn the steam knob to the "1, 2, 3" position, steam will come out and you can start ironing.
4. After ironing is finished, turn the temperature regulator knob to "0" position, remove the cap, take out the water tank, pour out the remaining water, turn the steam knob to "0" position.

HOW TO USE STRONG STEAM

Press the strong steam button, the motherboard will spray strong steam.



Attention: Strong steam should be used for steam ironing. (The temperature regulating knob should be turned towards the steam section).

4. CLEANING AND MAINTENANCE

Be sure to unplug this appliance before cleaning it.

To protect against electric shock, do not immerse cord, plug, or unit in water or liquid.

After each use, always be sure to remove the plug from the wall outlet.

5. ELIMINATION OF DEPOSITS AND REMAINS

Dispose of the packaging in an environmentally sound manner. This appliance is marked with the symbol of compliance with the European Directive 2012/19 / EU relating to used electrical and electronic equipment (Waste Electrical and Electronic Equipment WEEE). The directive provides the general framework valid throughout the European Union for the removal and reuse of waste electrical and electronic equipment. Inquire about current disposal routes from your dealer.

6. WARRANTY

Decakila undertakes to repair or replace free of charge for a period of 24 months, from the date of purchase by the end user, the parts whose defect or lack of operation is due to manufacturing causes, as well as the necessary labor for repair, as long as the device is taken by the user to the Authorized Technical Service workshop. In the event that the user requests the Authorized Technician to visit his home to repair the device, the user will be obliged to pay the travel expenses.

This warranty does not include: lamps, crystals, plastics, or aesthetic parts, claimed after the first use, or breakdowns caused by causes beyond the manufacturing or non-domestic use. Likewise, failures or lack of operation caused by causes not attributable to the device (improper handling, cleaning, voltages and incorrect installation) or failure to follow the operating and maintenance instructions for each device are not covered by this guarantee. included in the instruction booklet.

For the effectiveness of this guarantee, it is essential to prove by the user and before the Authorized Service, the date of acquisition by means of the corresponding PURCHASE INVOICE that the user will accompany with the device when in the event of a breakdown it has to be reviewed at one point. authorized. Intervention on the device by personnel other than the Decakila Authorized Technical Service automatically means the loss of the guarantee. KEEP YOUR PURCHASE INVOICE FOR SO MUCH.

The right to modifications and updates without prior notice is reserved.



decakila

