



Quick Start Guide

iD2P

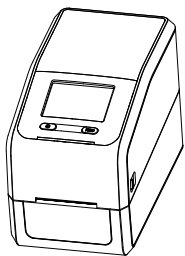


iD2X

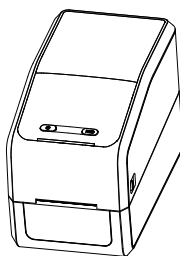

Caution:

This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.


Packing List

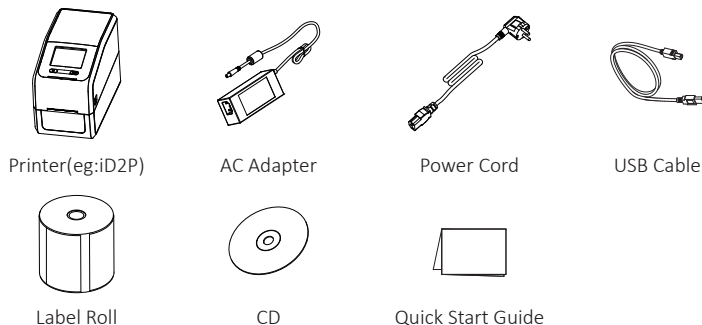

Note: The packing items are actually based on the order.


Appearance and Components

Front

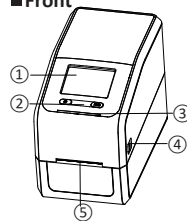


- ① Display
- ② Function Button
- ③ Status Indicator
- ④ Cover Open Levers
- ⑤ Front Paper Outlet

Rear

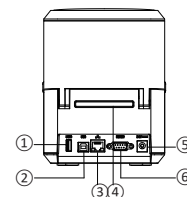

- ① USB Port (Type A)
- ② USB Port (Type B)
- ③ Ethernet Port
- ④ Back Paper Outlet
- ⑤ Power Receptacle
- ⑥ Serial Port

Inside

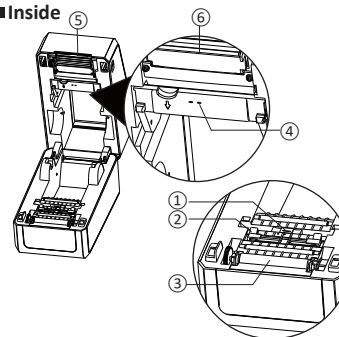

- ① Moveable Label Sensor
- ② Moveable Label Guides
- ③ Platen
- ④ Upper Sensor
- ⑤ Serrated Knife
- ⑥ Print Head Module

Note: The interface shown in the figure above is for reference only.

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Paper Loading

1. Pull and lift the cover.

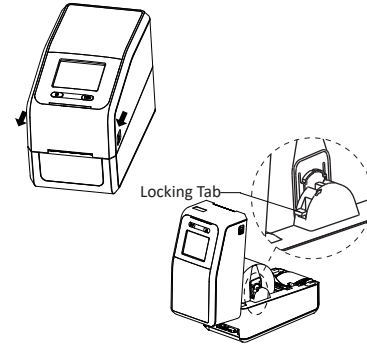

2. Put the paper roll into the axis by with the inner diameter of the paper roll.

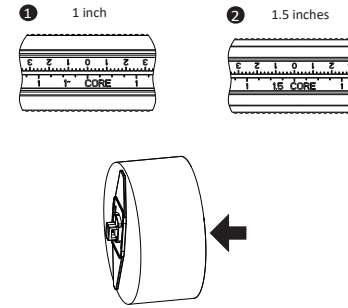


⚠ Note:

1. After lifting the top cover, the locking tab will hold the top cover to prevent the top from falling and hurting hands.
2. When using the 1 inch paper roll, the font of "1 CORE" should be upward; when using the 1.5 inch paper roll, the axis should be turned 180 degrees and the font of "1.5 CORE" should be upward.


3. Pull the roll holders open and place the roll between them.

4. Pass the label through the label guides, then adjust guides to adapt to the label width.

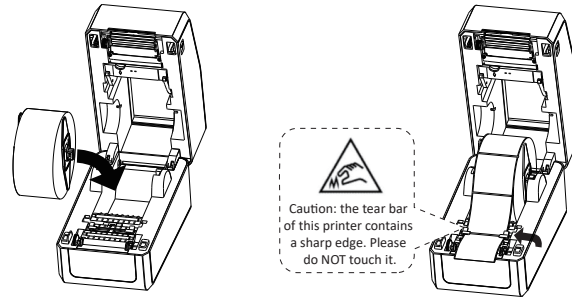


Paper Loading

5. Press the cover lock and close the cover slightly.

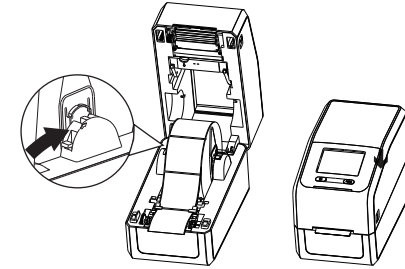

Power Connecting

1. Connect B-U port of printer to A-U port of computer by USB cable.
2. Connect the power cord to the power adapter.
3. Connect the other end of the power cord to a nearby socket.

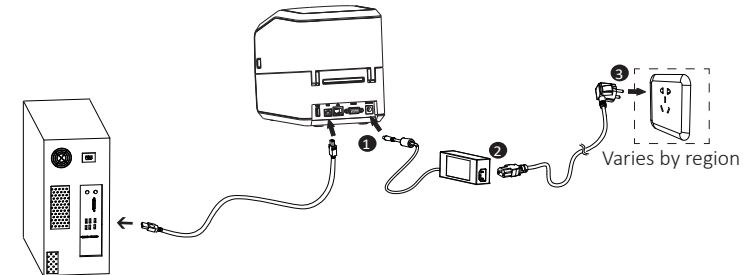

⚠ Note: Please refer to windows driver installation in iD2P_iD2X User Manual.