

TABLE OF CONTENTS

INFORMATION TO THE USER	2
BEFORE YOU START	3
GETTING TO KNOW YOUR PSX36	4
BEFORE YOU START	5
BLUETOOTH OPERATION	6
STREAMING MUSIC	7
AUX INPUT	8
USB INPUT	9
REMOTE CONTROL	10
INSTALLATION	11
TROUBLESHOOTING	12
WIRE DIAGRAM	13
SPECIFICATIONS	13

SUPPORT

For the latest information about this product please visit www.planetaudio.com

TECH SUPPORT: 805-751-4854
www.planetaudio.com/customer-support

ENGLISH

Thank you for purchasing this

PSX36 All-Terrain Sound System

Please read through these instructions carefully so you will know how to operate your model properly.

After you have finished reading the instructions, keep this document in a safe place for future reference.

THIS PACKAGE CONTAINS

1- PSX36 All-Terrain Speaker System

1- Mounting Kit

1- Power Accessory Extension Adaptor

1- Remote control

1- User Manual

1- Warranty Card

INFORMATION TO THE USER

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

2

- Do not operate others should always
- In this event you immediately turn
- Set your volume without distortion
- BE SURE TO
- Do not turn up
- Use caution or

WARNING -

- Do not attempt without professional
- Refer any repair
- The PSX36 call battery through a
- When wiring dis
- The ground call
- The PSX36 has
- Use only the im
- Wash with a m
- clean water.

"Don'ts" - Ve

- DON'T clean m
- DON'T use abn
- DON'T scrape
- DON'T ever us

ENGLISH

ENGLISH

BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

mobile equipment while driving a motorized vehicle – safe driving and safety consideration of your be your highest priority.

should not smoke, strange noises or odor from this product, or any other abnormal signs. Stop the power and consult your dealer or the nearest authorized **Planet Audio** Service point. This condition may result in permanent damage to the system.

control at a low setting, then slowly increase the sound until you can hear it comfortably or ear discomfort.

OBSERVE THE FOLLOWING GUIDELINES:

the volume so high that you can't hear what's around you.

temporarily discontinue use in potentially hazardous situations.

INSTALLATION PRECAUTIONS

Always consult a professional installer

to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and motorized vehicle accessories may result could expose you to the risk of electric shock, injury or other hazards.

to a qualified **Planet Audio** Service Center

be powered from a vehicle's cigarette lighter / auxiliary power port, or hard wired directly to the optional relay / accessory switch

to the vehicle battery, be sure to disconnect the batteries negative terminal wire before any procedures. It is suggested that an optional fuse and fuse holder (not included) with a 15 Amps be in line with the positive battery terminal

wire length should not exceed 16-inches (See wiring diagram)

a weather resistant design. It should not be submerged in or under water under any

Installation parts provided with the PSX36

soap or detergent and lukewarm water using a clean sponge or a soft cloth. Rinse well with

ry Important

hot sun or on very hot days.

corrosive or highly alkaline cleaners on the main body

the main body with razor blades, or other sharp instruments

gasoline, acetone or carbon tetrachloride

CAUTION!!!

Using other mounting methods may void this warranty

3

Planet Audio®

GETTING TO KNOW YOUR PSX36

- A** Planet Audio PSX36
- 1** 3.5mm AUX-INPUT
- 2** CIGARETTE POWER CABLE ADAPTOR
- 3** LED POWER INDICATOR
- 4** CONTROL PANEL
- 5** USB JACK

BEFORE YOU START

ENGLISH

PAIRING & DISCOVERING A NEW BLUETOOTH CONNECTION

1. Plug in the **PSX36** by plugging in the male cigarette lighter adaptor into ② a female cigarette lighter receptacle.

2. Press the button ⑨. The **PSX36** will automatically go in to pairing mode:

ANDROID users:

- a. Go into the **Settings Menu** of your device
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth** and press **SCAN**
- d. "**Planet Audio PSX36**" will now be displayed under **AVAILABLE DEVICES**
- e. If prompted, enter passcode: "**0000**"

IOS users:

- a. Go into the **Settings Menu** of your **IOS** device
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth**
- d. "**Planet Audio PSX36**" will now be displayed
- e. If prompted, enter passcode: "**0000**"

 
NOTE: You have 2 minutes before you must restart this procedure over again.

 
3) If **Planet Audio PSX36** is not seen, repeat the above steps to refresh the "**Device List**"

4) When the connection is successful, you are now ready to stream music from your favorite media player to the **PSX36**

5

BLUETOOTH OPERATION

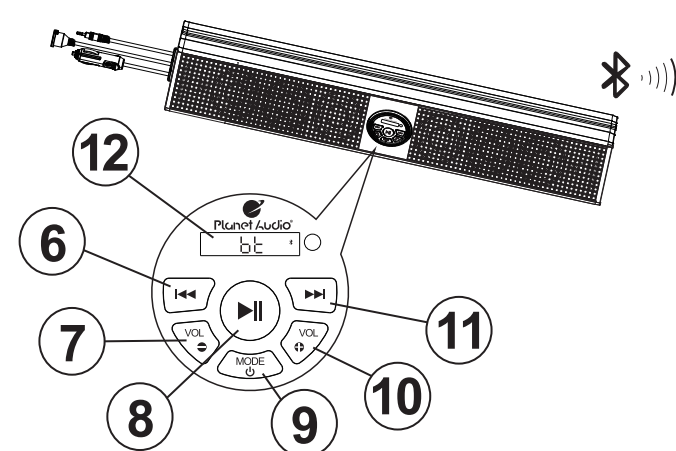

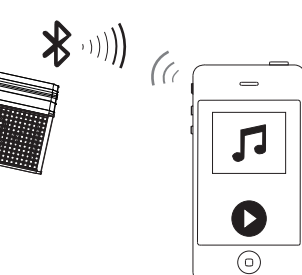

RECONNECTION

- 1) Power on the **PSX36** and your last paired **Bluetooth device**.
- 2) Press the button **(9)**. The unit will now automatically reconnect
- 3) If your device was previously paired with the **PSX36**, but it wasn't the last paired device:
 - a. Ensure no other **devices** are currently paired
 - b. Enter the **Bluetooth Menu** on your device being paired
 - c. "**Planet Audio PSX36**" will display under **AVAILABLE DEVICES**
 - d. Choose the "**Planet Audio PSX36**" to reconnect
- 4) If the device is out of range from the **PSX36**, it will disconnect automatically:
 - a. The **PSX36** will automatically reconnect to the device once back in range

Tips: To avoid battery exhaustion, be sure to occasionally run the vehicles engine while using this product.

Using this product without running the engine can drain the battery.





STREAMING MUSIC

MULTIFUNCTION CONTROLLER BLUETOOTH OPERATION

- 1) Press the **(8) PLAY/PAUSE** once to start playing music or press the **PLAY** button from your devices touchscreen
- 2) To skip songs or advance, press the **(11) NEXT TRACK** button
- 3) To select the previous song, press the **(6) PREVIOUS TRACK** button

VOLUME CONTROL

- 1) To raise the volume press the **(10) VOLUME UP** button or use your devices controls
- 2) To lower the volume press the **(7) VOLUME DOWN** button or use your devices controls

Tips: For maximum audio performance, ensure your device Bluetooth volume is set to a minimum 75% level before storing

7

AUX INPUT

1) Power on the **PSX36** by plugging in the male cigarette lighter adaptor into a female cigarette lighter receptacle.

2) Press the button **(9)**. The **PSX36** will automatically go into **AUX mode**:

3) Connect the integrated 3.5mm **AUX-IN** cable **(1)** to your devices headphone jack

4) Route the wire back to **PSX36**, and secure your device

AUX CONNECTION

1) To raise the volume press the **(10) VOLUME UP** button or use your devices controls

2) To lower the volume press the **(7) VOLUME DOWN** button or use your devices controls

Tips: For maximum audio performance, ensure your device headphone volume is set to a minimum 75% level before stowing

USB INPUT

USB IN OPERATION

- 1) Power on the **PSX36** by plugging in the male cigarette lighter adaptor into female cigarette lighter receptacle.
- 2) Press the button **(9)**. The **PSX36** will automatically go in to arbitrary pattern
- 3) Insert the USB Flash drive on **(5)** and play the music automatically.
- 4) Press the **(8) PLAY/PAUSE** once to start playing music or pause
- 5) To skip songs or advance, press the **(11) NEXT TRACK** button
- 6) To select the previous song, press the **(6) PREVIOUS TRACK** button
- 7) To raise the volume press the **(10) VOLUME UP** button or use your devices controls
- 8) To lower the volume press the **(7) VOLUME DOWN** button or use your devices controls

USB can play music formats MP3 & WMA.
USB can provide 1A current.

Planet Audio®

9

REMOTE CONTROL

REMOTE CONTROL OPERATION

 
1) Remote control receiver window **13**

REPLACEMENT BATTERY - CR2032

Planet Audio®

INSTALLATION

- 1) use the supplied adjustable bracket to secure to rails.
- 2) always recheck bracket before every ride

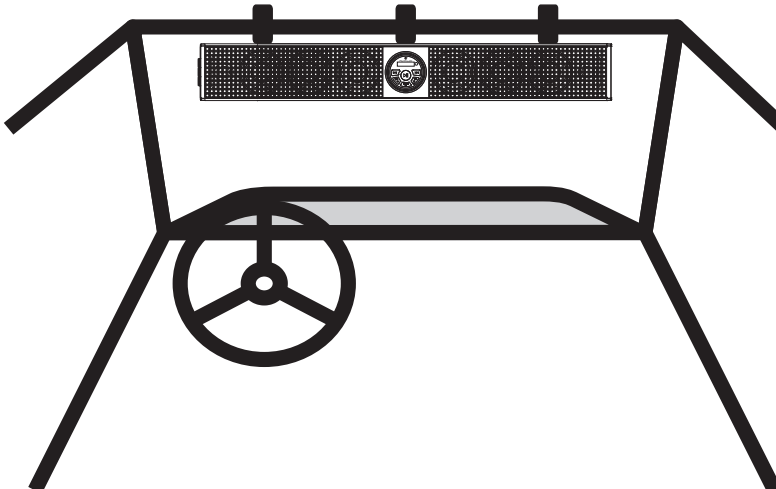

The diagram shows a top-down view of a vehicle's trunk. A subwoofer is mounted in the center of the trunk floor, secured by a black adjustable bracket. The bracket is connected to the metal rails of the trunk. A spare tire is mounted on the left side of the trunk. The subwoofer is a rectangular unit with a mesh grille and a circular speaker driver visible in the center.

 Planet Audio®

ENGLISH

TROUBLESHOOTING



TROUBLE	CAUSE	SOLUTION
Unit will not turn on	The fuse is blown	Check / replace the fuse
	Main acc switch not engaged	Turn switch to on position
	Device volume is low / muted	Turn the volume level up
No sound is heard	Device is paused or muted	Check your devices playing volume status
	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the Bluetooth function
Cannot pair Bluetooth	The Bluetooth reception is poor	Move the device closer to the audio system or remove any obstacles between the device
The audio quality is poor after connection with a Bluetooth enabled device	Power glitch or interference	Disconnect power for 10 seconds to reset

SUPPORT

For the latest information about this product please visit www.planetaudio.com

TECH SUPPORT: 805-751-4854
www.planetaudio.com/customer-support

  DIMENSIONS

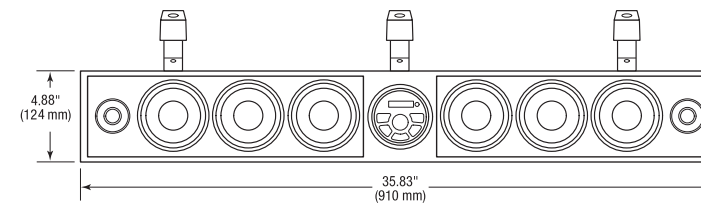11

12



