 
 
 


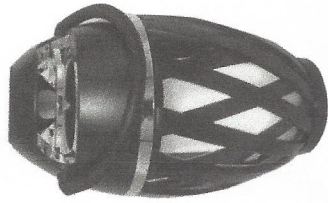

OUTDOOR FLAME SPEAKER

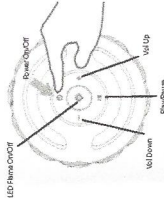

 
PRODUCT OVERVIEW

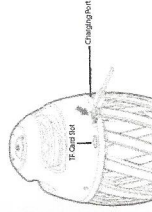

CHARGING YOUR SPEAKER

The battery must be fully charged prior to use. It takes approximately 4 hours to fully charge your Speaker (from depleted unit).

A Via AC Adapter/Wall Charger: Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the AC Adapter (USB port).



B Via Computer: Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the computer/laptop (USB port).



over

PAIRING THE SPEAKER TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available on your cell phone. Specific pairing procedures will be different depending on different cell phones. For detailed information, please refer to your cell phone's User Guide.

- After a successful pairing, devices will memorize each other. Therefore, no pairing will be needed next time.

1. Keep the distance between the cell phone and the speaker within 3 feet (for pairing only).
2. Turn on the speaker by pressing the "Power On/Off" button.
3. The tone prompt will sound. The unit will automatically enter into pairing mode.
4. Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select "A1+" in the device list displayed.
5. Your A1+ speaker is ready to use.

SPEAKER CONTROLS

ON/OFF

Press and release the Power On/Off button

VOLUME

During a call or when listening to music

Volume +

Press and hold **[+]** Button.

Volume -

Press and hold **[-]** Button.

MUSIC

Go to next song

Long Press **[+]**

Go to previous song

Long Press **[-]**

TF CARD MODE

(automatic after inserting TF card)

Go to next song

Press **[+]** Button

Go to previous song

Press **[-]** Button

Play/Pause

Press **[P]** Button

PLAY/PAUSE

Press **[P]** to play/pause the music.

TWS MODE

1. Turn off the Bluetooth mode on your mobile device.
2. Turn on the speakers by pressing the "Power On/Off" button.
3. On either speaker, press and hold the "LED Flame On/Off" button for 3-5 seconds, and wait until you hear a "ding-dong" confirmation tone. The speakers are now connected, and you can connect your Bluetooth device.

LED FLAME

To use the LED flame function, press and release the LED Flame On/Off button once. The lamp will turn on to the dimmest setting. There are 3 brightness levels; press and release to change the brightness.

IMPORTANT SAFEGUARDS

- Keep speaker away from any source of heat.
- Always adjust the speaker volume to a suitable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

SPECIFICATIONS

Frequency: 50 Hz-20KHz
Battery: 1500 mAh Li-Ion
Distance: 33 ft (10m)
Charging time: 4 Hours
Playing time: 10 Hours

