 


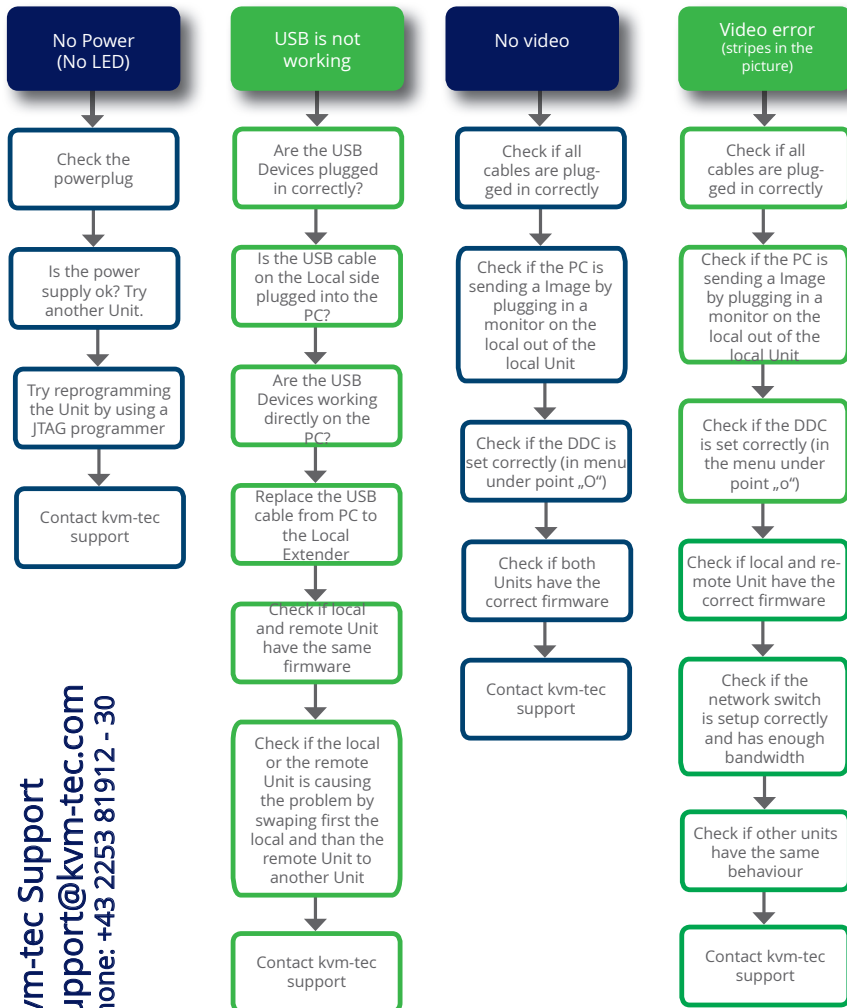

kvm-tec Support
support@kvm-tec.com
Phone: +43 2253 81912 - 30

**We are here for you to answer
your questions about installation!**

Manual download www.kvm-tec.com

or

kvm-tec Installationchannel on our homepage
personally +43 2253 81912



media4Kconnect

kvm-tec
**Quick
Installation**

6930 SET media4Kconnect DP 1.2

6930L CPU/Local media4Kconnect DP 1.2

6930R CON/Remote media4Kconnect DP 1.2

kvm-tec over IP
an ihse company

Check out our Installation
Channel:



Delivery Content

LOCAL/CPU Unit

 
1 x Media4Kconnect local (CPU)
1 x 12VDC 2A power supply
1 x DP-DP cable 1,8m/5.9ft
1 x USB A-cable 1,8m/5.9ft
1 x SFP+Multimode up to 300m/ 984ft
alt. Single Mode up to 10km/6.2mi
4 x rubber feet

REMOTE/CON Unit

1 x Media4Kconnect DP1.2 remote (CON)
1 x 12VDC 2A power supply
1 x SFP+Multimode up to 300m/1984ft
alt. Single Mode up to 10km/6.2mi
4 x rubber feet



4K
over IP

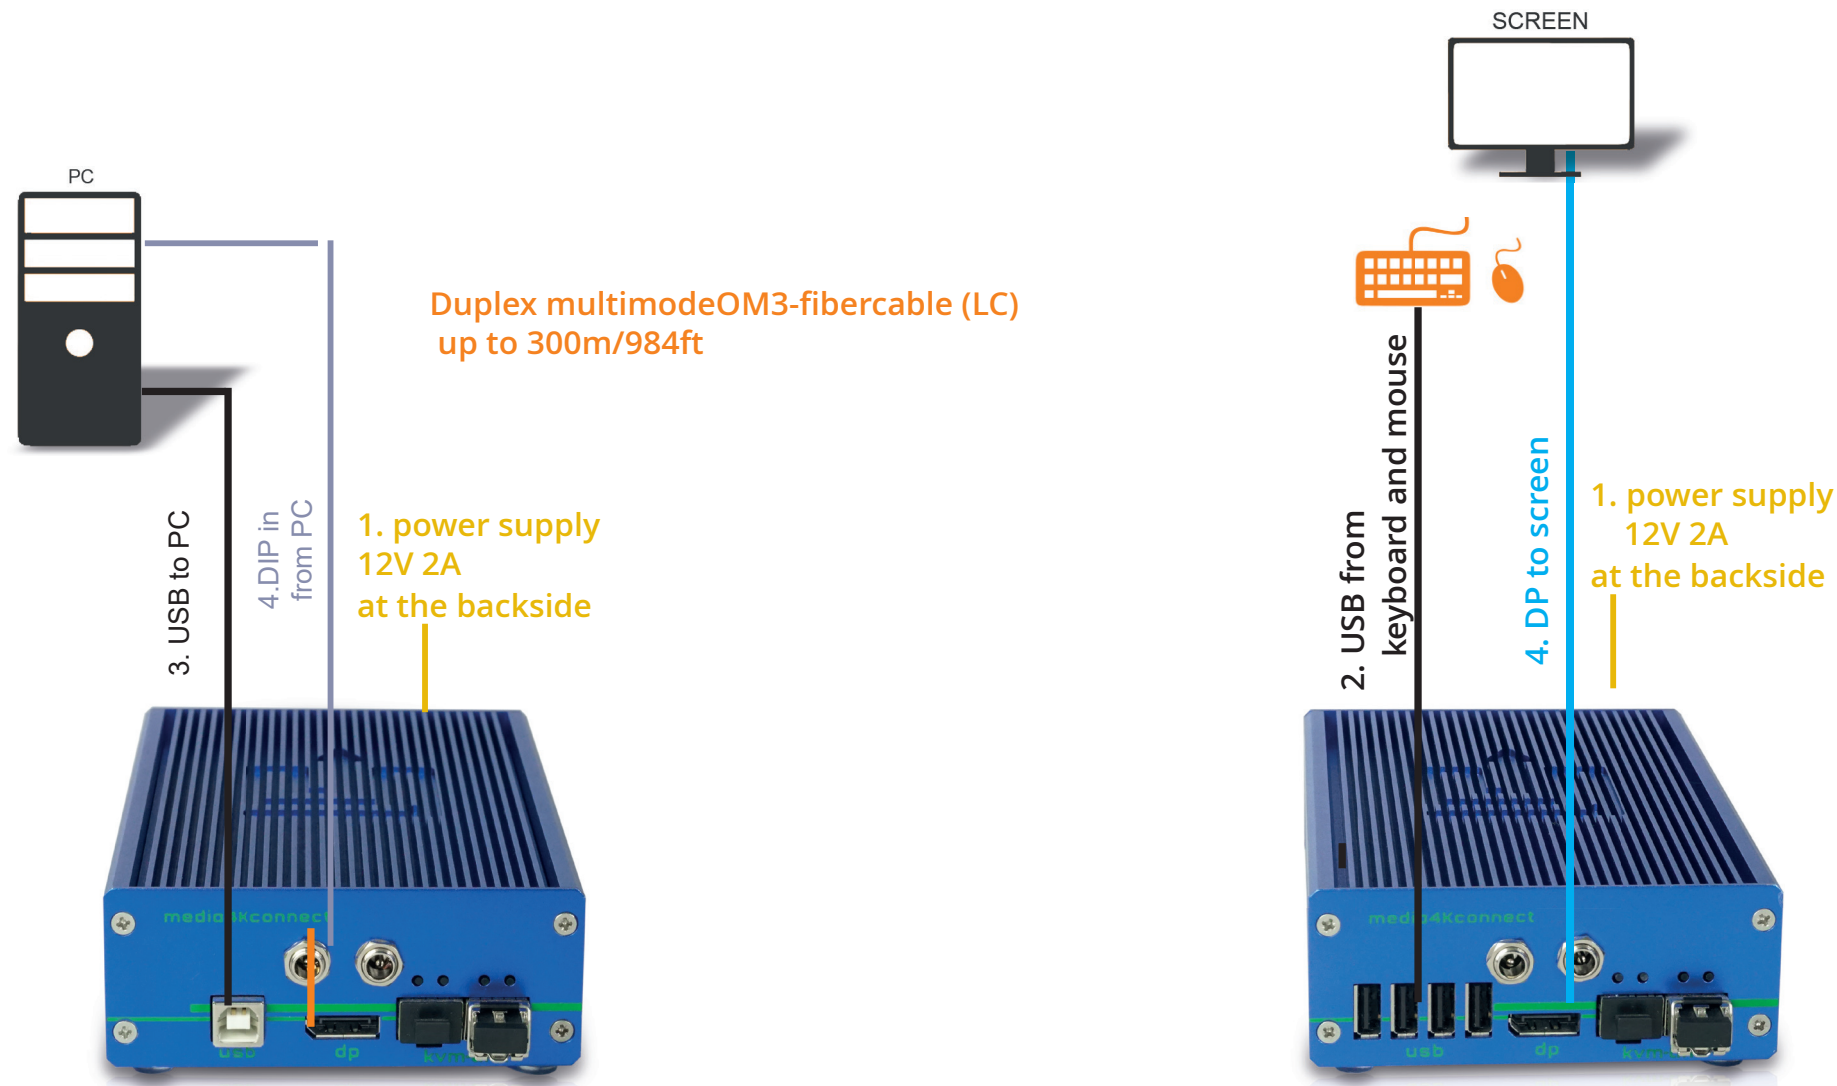

QUICK INSTALLATION

1. Connect the CON/Remote and the CPU/Local Unit each with the included 12V 2A power supplies.
2. Now connect the USB cable to a USB socket of your PC and connect the other end of the USB cable to the Local Unit. Connect the keyboard and mouse to the Remote Unit.
3. Connect the Local Unit and the Remote Unit with a network fiber cable OM3.
4. Connect one end of the DP cable to your PC and the other end to your Local Unit. Then connect one end of the DP cable to your monitor and the other end to your Remote Unit.

 
MUCH FUN - Your kvm-tec Extender will now be in use for many years (MTBF approx. 10 years) for you!



Please note that the recommended length of the display port cable should be max 1.8m, otherwise an interference-free 4K transmission may not be guaranteed.

If you have a monitor that has an HDMI input, please use a video adapter with 60 Hz (at 30 Hz the screen will remain black).
Our recommendation
Please use OM3 cable to have enough bandwidth.

MEDIA4KCONNECT SIMULTANEOUS DOWNSCALING

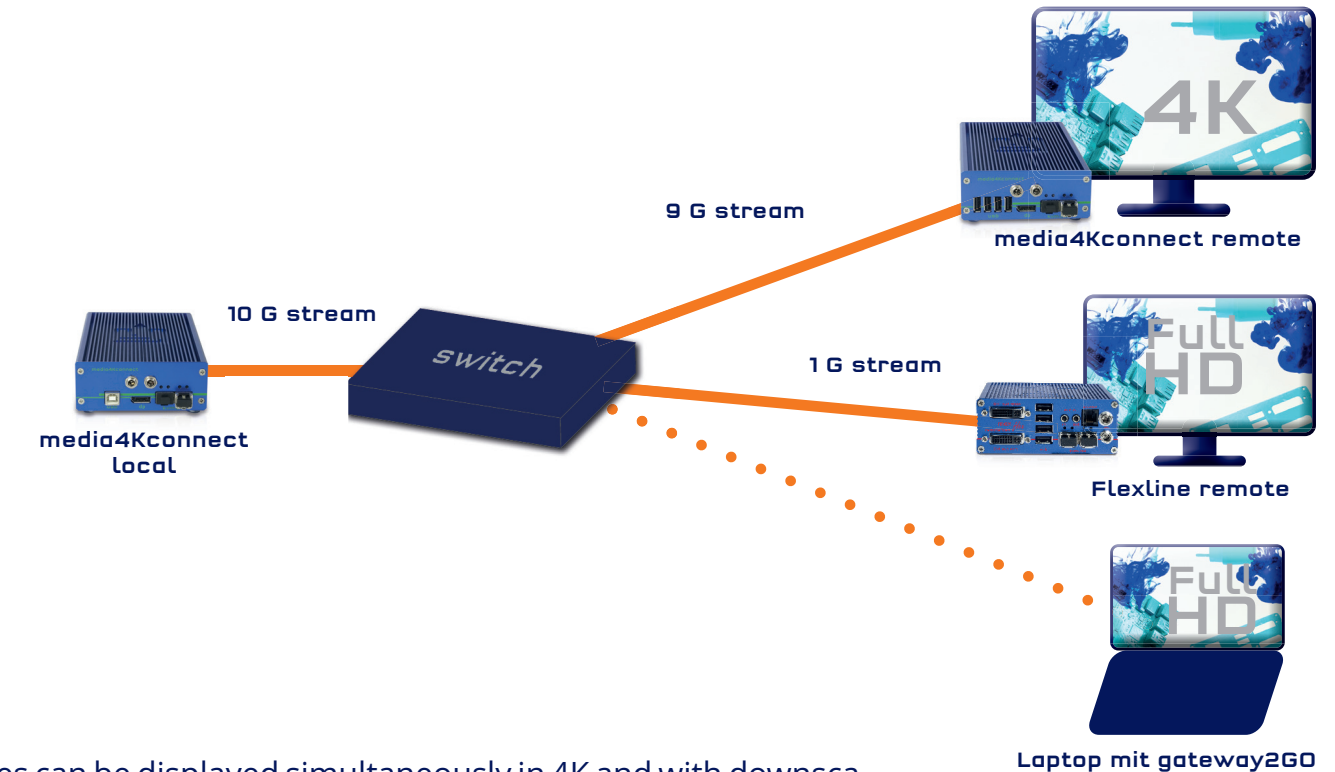


4K sources can be displayed simultaneously in 4K and with downscaling in Full HD on the remote unit. The output of the stream is done with 4K over 10G bandwidth. The FHD video is transmitted over the second link with a bandwidth of up to 1 Gbit. The data streams can be routed and shared independently and one source can be split to any number of screens. J3 cable to have enough bandwidth.

USING ON SCREEN MENU

Use the monitor and keyboard to access the main menu.

Access to the main menu

 1. Make sure that the extenders, monitors and computer are turned on
2. Press the Alt gr five times one after the other. The main menu and the overview of the submenus are displayed.
3. To access a submenu, press the corresponding key or navigate with the arrow keys up and down to the corresponding line and then press Enter key.

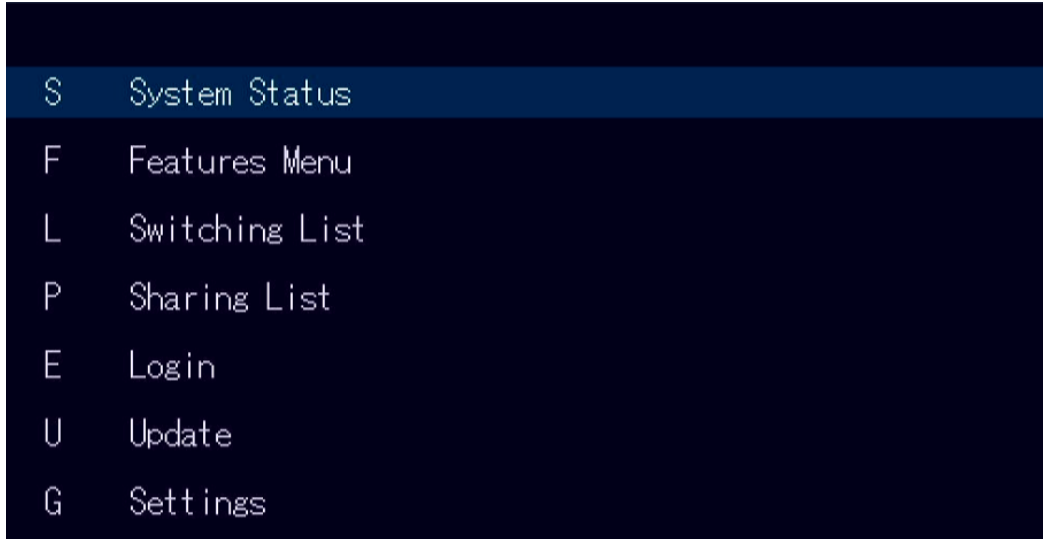

SCREEN „OSD menu“

In the main menu you can make the following settings by selecting the corresponding letters:

Press		
S	System status	menu system status/ current status
F	Features Menu	activated features
L	Switching List	Switching List
P	Sharing List	Sharing List
E	Login	Login
U	Update	update firmware
G	Settings	settings

SYSTEM STATUS

By pressing the „S“ key or by selecting the arrow keys, you access the status menu, where you will find information about hardware and software versions, as well as the activated upgrades

The menu displays information about the connection, the resolution of the video channel and the USB status. The **current Firmware** version is displayed in the upper left corner.

 
The **link status** indicates whether a connection is possible.

Video and USB display data transfer status




SCREEN „System Status“

1. The current version of the firmware can be downloaded from <http://www.kvm-tec.com/de/support>. Each update file contains a detailed description of the update process. For further information please refer to the update chapter
2. Connect the USB stick to the CON (REMOTE) Unit (wait a few seconds until the USB stick is connected to the CON Unit).
3. Then open the update menu with the „U“ key.
4. Press the „ U“ key to start the update on the remote (CON) unit.
5. Call the file with „S
6. The firmware is shown on the display under „Configuration found“,
7. Press the „U“ key to start the update on the remote (CON) unit

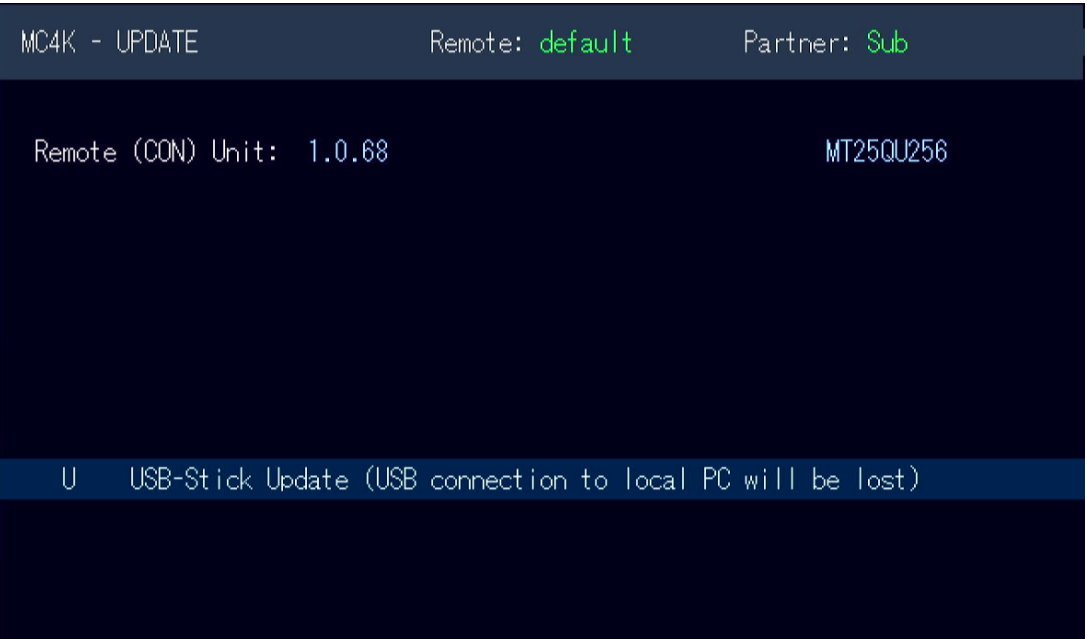

SETTINGS

 By pressing the „G“ key or selecting the arrow keys you will have access to the Settings menu, where you can access all Extender settings.

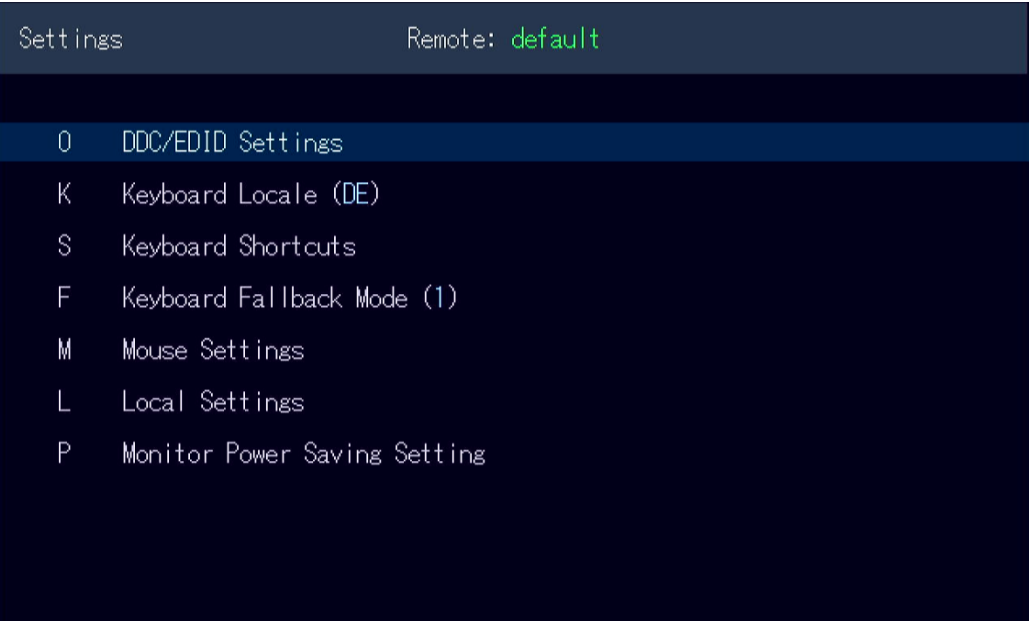


Screen „Settings „

FEATURES

MENU FEATURES

Pressing the „F“ key or selecting the arrow keys, you will access the FEATURES menu, where you can select all the functions and the features.

 - P Point to point Mode on/off
- S Matrix Switching Mode
- E USB Emulation Mode
- U USB Save Feature
- V Uncompressed mode
- M Unlock Features - redundant oder uncompressed im Switching System

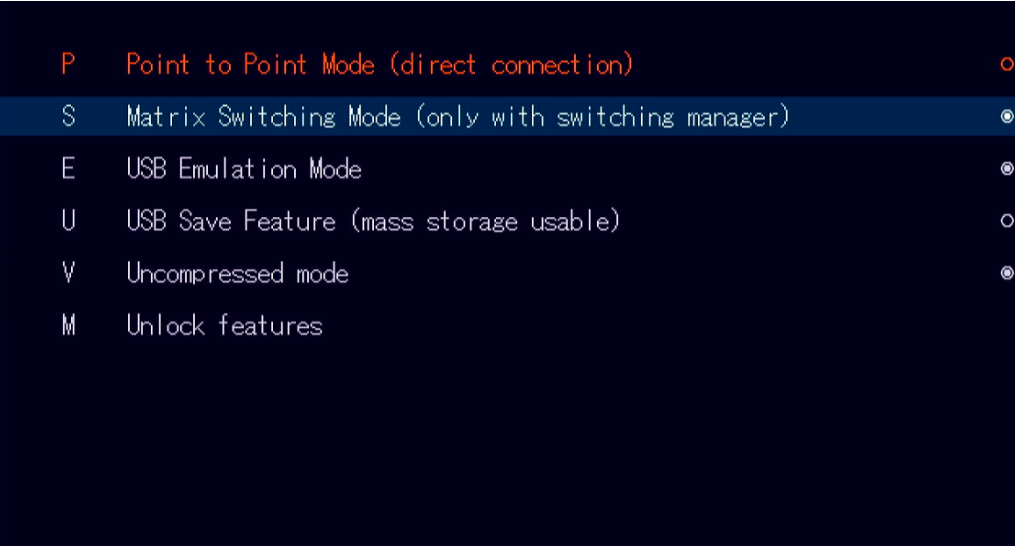

SCREEN „Menu Features“

POINT TO POINT

Pressing „P“ takes you to the point to point configuration. By default the Remote is directly connected to the Local.

MATRIX SWITCHING SYSTEM

Pressing „S“ takes you to the Matrix Switching System configuration.

If this function is active, the Multiview Commander and Mouse Glide functions are controlled via the Switching Manager software (see Switching Manager manual).

All functions of the switching system can be operated via the Switching Manager software.

With this link you can download the Switching Manager Software Manual

downloaden: www.kvm-tec.com/en/support/manual

UNCOMPRESSED MODE

By pressing „V“ you can enable and disable the Uncompressed Mode. Once this function is enabled, the KVM Extender will transmit up to 4K resolution uncompressed and in 10bit color depth.

Please note that for this mode you need two 10G fiber lines between the remote and the local unit!

UNLOCK FEATURES REDUNDANT UNCOMPRESSED FOR SWITCHING SYSTEMS

In this menu you can also unlock the „Uncompressed“ and „Redundancy“ feature after purchasing your 4k KVM Extender.

Order the unlock code for the desired feature from your supplier by providing the device ID and serial number of the 4k KVM Extender.

By typing in the unlock code you unlock the desired feature. After unlocking, activate the desired feature in the feature menu.

ADRESS & PHONE/EMAILS

If you have any questions about our products, please contact kvm-tec or your dealer.

kvm-tec electronic gmbh
Gewerbepark Mitterfeld 1A
2523 Tattendorf
Austria
Phone: 0043 (0) 2253 81 912
Email: sales@kvm-tec.com
Email: support@kvm-tec.com
Web: www.kvm-tec.com

You can find our latest updates and FAQs on our homepage:
<https://www.kvm-tec.com/support/overview-support/>

KVM-TEC	IHSE GmbH	IHSE USA LLC	IHSE GMBH Asia	IHSE China Co.,Ltd
Gewerbepark Mitterfeld 1 A 2523 Tattendorf Austria	Benzstr.1 88094 Oberteuringen Germany	1 Corp.Dr.Suite Cranburry NJ 08512 USA	158Kallang Way,#07-13A 349245 Singapore	Room 814 Building 3, Kezhu Road Guangzhou PRC
www.kvm-tec.com	www.ihse.com	www.ihseusa.com	www.ihse.com	www.ihse.com.cn