



VESTA

BT101

Pop-Up Toaster

750
WATT




USER MANUAL



PARTS IDENTIFICATION

01

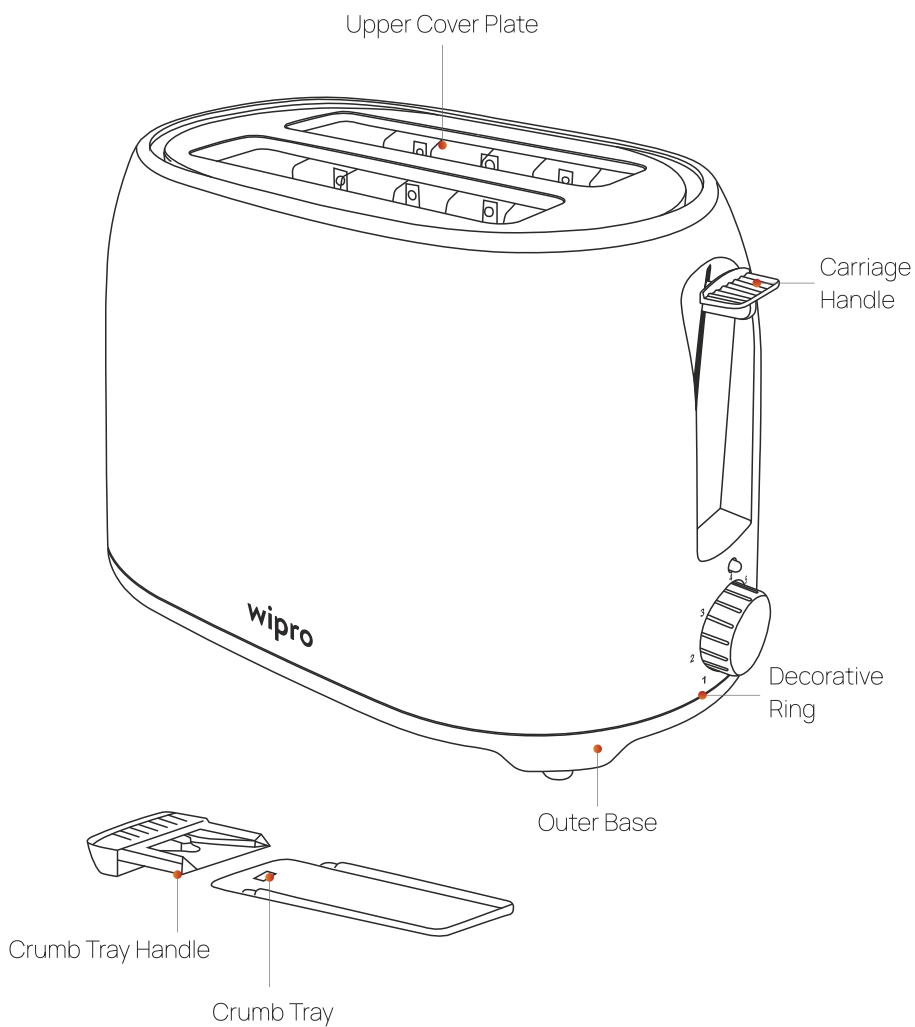

HOW TO USE

02

1. Put bread slice into the bread slot, Maximum of two slices of bread can be inserted at a time (Bread size can be maximum 120X120 mm)

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 7-position level, the lowest is white and the highest is dark brown. The bread slice can be toasted to golden color at the position of '3'
4. Press carriage handle down vertically until it is positioned in place, the indicator of Stop will be illuminated, and toasting begins. Once the bread has been toasted to the pre set color, the carriage handle will be automatically sprung up, and you can remove the bread readily. During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the Stop button at any time, but don't lift carriage handle to stop toasting.
6. If the bread has been taken out from refrigerator. Set color control knob to your desired color. Press carriage handle down vertically until it is positioned in place, then press DEFROST button and the indicator of DEFROST will be illuminated. In this mode it will be toasted to your desired color.
7. If you want to reheat the cold toasted bread. Press carriage handle down vertically until it is positioned in place, then rotate the color control knob to REHEAT setting. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

IMPORTANT INSTRUCTIONS

03

CLEANING & MAINTENANCE

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

READ ALL INSTRUCTIONS BEFORE USING

1. Do not touch hot surface. Use handles or knobs only.
2. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
3. Unplug unit from outlet when not in use and before cleaning.
4. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
5. Do not let the cord hang over edge of table or counter, or touch hot surface.
6. Do not place on or near a hot gas or electric burner, or in a heated oven.
7. Do not use the appliance for other than its intended use.



IMPORTANT INSTRUCTIONS

04

8. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Don't attempt to dislodge food when toaster is in operation.
11. Be sure to take the bread out carefully after toasting so as to avoid injuries.
12. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
15. Keep the appliance and its cord out of reach of children.
14. If bread slices is less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
15. The Toaster is for household use only. Do not use at outdoors.



IMPORTANT INSTRUCTIONS

04

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Stop to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.
(Maximum 120X120 mm bread size)



You can help protect the environment. Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

For more information please visit
Wipro Smart light: www.wiproconsumerlighting.com

