



 
www.qrostore.com



qrostore.us



Chicago, IL

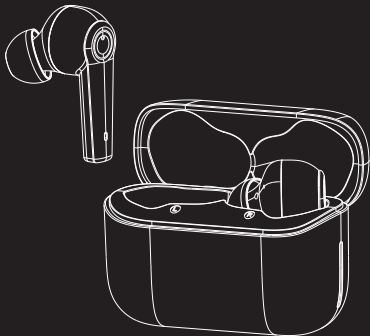

User Instructions

www.qrostore.com

U.S. Service Hotline: 1 (800) 760-1688

Email: support@qrostore.com

 


Contents in the Box

Model Name: EVERSOUND



Earbuds (2)



Charging Case (1)



Ear Tips (6)



USB-C Charging Cable (1)



User Instructions (1)

Product Features

Active Noise Cancellation (ANC)

Transparency Mode

Entertainment Mode

Call Noise Cancellation (ENC)

Music Play Time (ANC Off): 5H

Music Play Time (ANC On): 4H

Charging Port: USB-C

Charging Time (Earbuds): 1-1.5H

Charging Time (Charging Case): 1-1.5H

Bluetooth Version: 5.1

Water Resistance: IPX4

Warning

 
Dispose of earbuds in accordance with country and local regulations.

Keep earbuds away from young children and animals.

Powering On and Off


Powering On:

1. Earbuds will be powered on automatically when the charging case is opened.

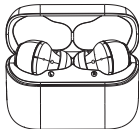


Powering Off Options:

1. Place the earbuds back into the charging case and close the lid.
2. The earbuds will automatically shut down if they are not connected to a device for more than 5 minutes. The blue LED light will blink once after the units are powered off.

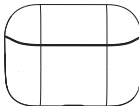


Wearing Your Earbuds

1. Identify the left and right unit (master).
2. Try different wearing position until they fit your ears.

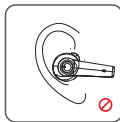

Pairing, Connecting to & Disconnecting from Devices

1. *Pairing between the Two Earbuds:* After the earbuds are powered on, the master earbud (the right ear unit) will blink blue briefly for 1 second signaling the two earbuds are paired.
2. *Connecting to Your Device:* Choose "QRO Eversound" from the device list in your device's Bluetooth settings.

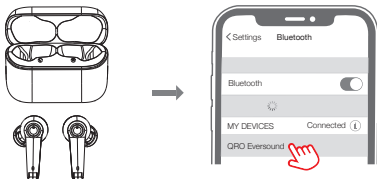

3. *Disconnecting from Your Device:* The earbuds will be disconnected from your device when they stray away from their Bluetooth coverage (10 meters).
4. *Reconnection:* (a) The earbuds will reconnect to your device when they return to the coverage area within 5 minutes. (b) The earbuds will automatically reconnect to the last device they were connected to every time they are turned on within that device's Bluetooth range.
5. Earbuds can only be connected to one device at a time. If you are experiencing Bluetooth pairing issues, make sure earbuds are not connected to another device.

Music & Call Touch Controls

Left Earbud



Right Earbud (Master)



A sound effect can be heard
when touching the earbud touch-control panels

- 1 TapPlay/Pause
- 2 TapsPrevious Song/Take
and Hang Up Calls
- 3 TapsVoice Assistant
(Siri, Bixby, etc.)
- Press & Hold
- 1.5 SecDecrease Volume/
Reject Calls

- 1 TapPlay/Pause
- 2 TapsNext Song/Take
and Hang Up Calls
- 3 TapsANC/Transparency/
Normal/Entertainment
- Press & Hold
- 1.5 SecIncrease Volume/
Reject Calls

Listening Modes

- Normal mode: Increases battery life by turning off other listening modes.
- ANC mode: Blocks external noise
- Transparency mode: Amplifies external noise to hear what is going on in your surrounding environment
- Entertainment mode: Eliminates delay between visual content and corresponding audio (ANC automatically turns off)


Reset to Factory Settings

The Earbuds Can Be Reset to Factory Configuration

1. Place the earbuds back to the charging case. Close the lid.
2. Delete or "Forget" the earbuds from your device.
3. Open the charging case. The master unit (right ear) will flash blue.
4. Take the left or the right earbud out of the case.
5. Press the touch panel of the earbud 6 times.
6. The earbuds will be reset to their original factory configuration signaled by the red LED flashing twice.

If the LED doesn't flash red after 6 taps repeat Step 1 through 5 to reset the earbuds.


Place the earbuds back to the charging case. Close the lid. Follow the procedures for pairing and connection to reconnect earbuds to your device.

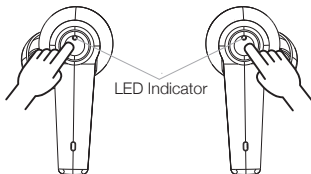

Charging

Charging the Earbuds

1. Place the earbuds in the charging case. Close the case. The LED on the charging case is on for 1 minute.
2. Earbuds Low Power Warning: Warning sound will be heard and the blue LED will flash every 3 seconds when the voltage is lower than 3.4V.

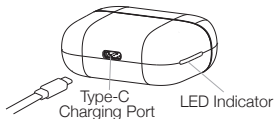

Charging the Charging Case:

1. Use the included USB-C cable to charge your charging case.
2. Charging Case Power Level Indicator (The LED on the sides of the charging case):

0-25%: Red	76% - 99%: Purple
26%-50%: Blue	100%: LED off
51%-75%: Light Green	
3. Charging Case Low Power Warning: The red LED will flash 10 sec per minute.

Earbuds and Charging Case Maintenance: Charge the earbuds and charging case once every three months to maximize the life of both devices. Failing to do so may result in damaging of the device.