

IMPROTANT SAFEGUARDS

- 1. Read all instructions before using this heater.
- 2. Extreme caution is necessary when towel warmer is used by or near children or invalids and whenever the heater is left operating and unattended.
- 3. Always unplug heater when hot in use.
- 4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner .Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 5. Do not use outdoors.
- 6. Never locate heater where it may fall into a bathtub or other water containers.
- 7. Does not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like? Arrange cord away from traffic area and where it will not be tripped over.
- 8. To disconnect heater, remove plug from outlet.
- 9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
- 10. Do not use it in area where gasoline, paints, or flammable liquids.
- 11. Use this heater only as described in this manual .Any other use not recommended by the manufacture may cause fire, electric shock, or injury to persons.
- 12. Keep these instructions for your late reference.


CAUTION:

- THIS HEATER ONLY OPERATES IN UPRIGHT POSITION.
- STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE.
- DO NOT STORE UNTIL THE HEATER HAS COOLED DOWN.
- ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPERSENTATIVE
- THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

TOWEL WARMER

Model No: BK-109-12(Matte black)

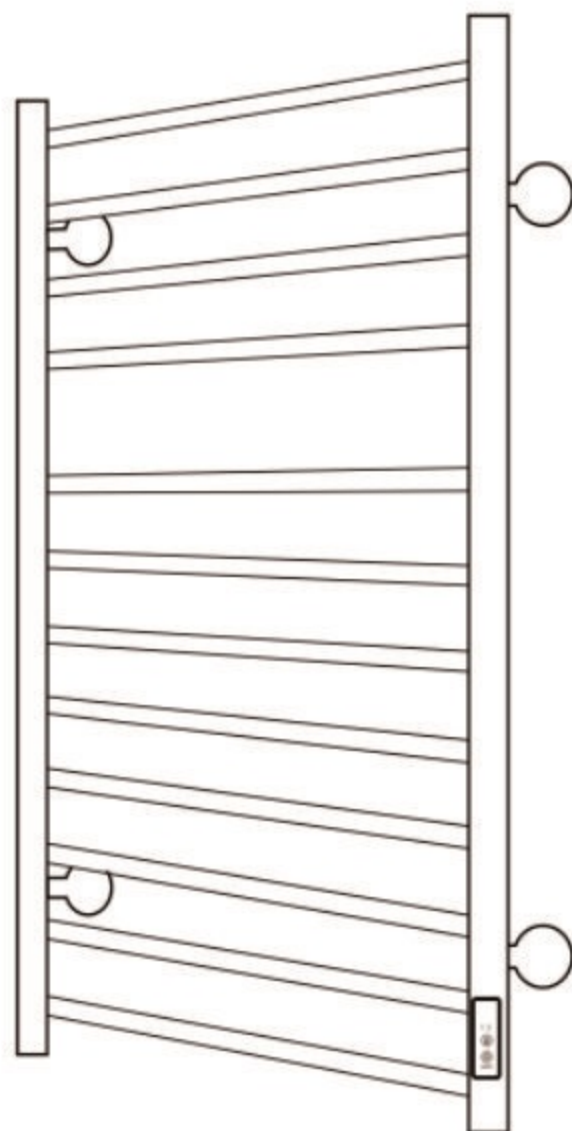

Instruction manual:

This towel warmer is intended for the use in bathrooms or laundry areas. Read the instructions carefully before operating

Specification

Voltage: AC120V
Frequency: 60Hz
Rated power: 165W
Unit size: 45.3*20.9 inch

Maintence

If the supply cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified persons in order to avoid hazard.

WARNING


This appliance is intended only for drying textiles washed in water.

THE TOWEL AND CLOTH WARMER IS ONLY ALLOWED TO BE INSTALLED AT A DISTANCE OF AT LEAST 24 inch FROM BATH TUBES SHOWERS.


TWO INSTALL OPTIONS INCLUDED




WALL-MOUNT INSTALLATION INSTRUCTION

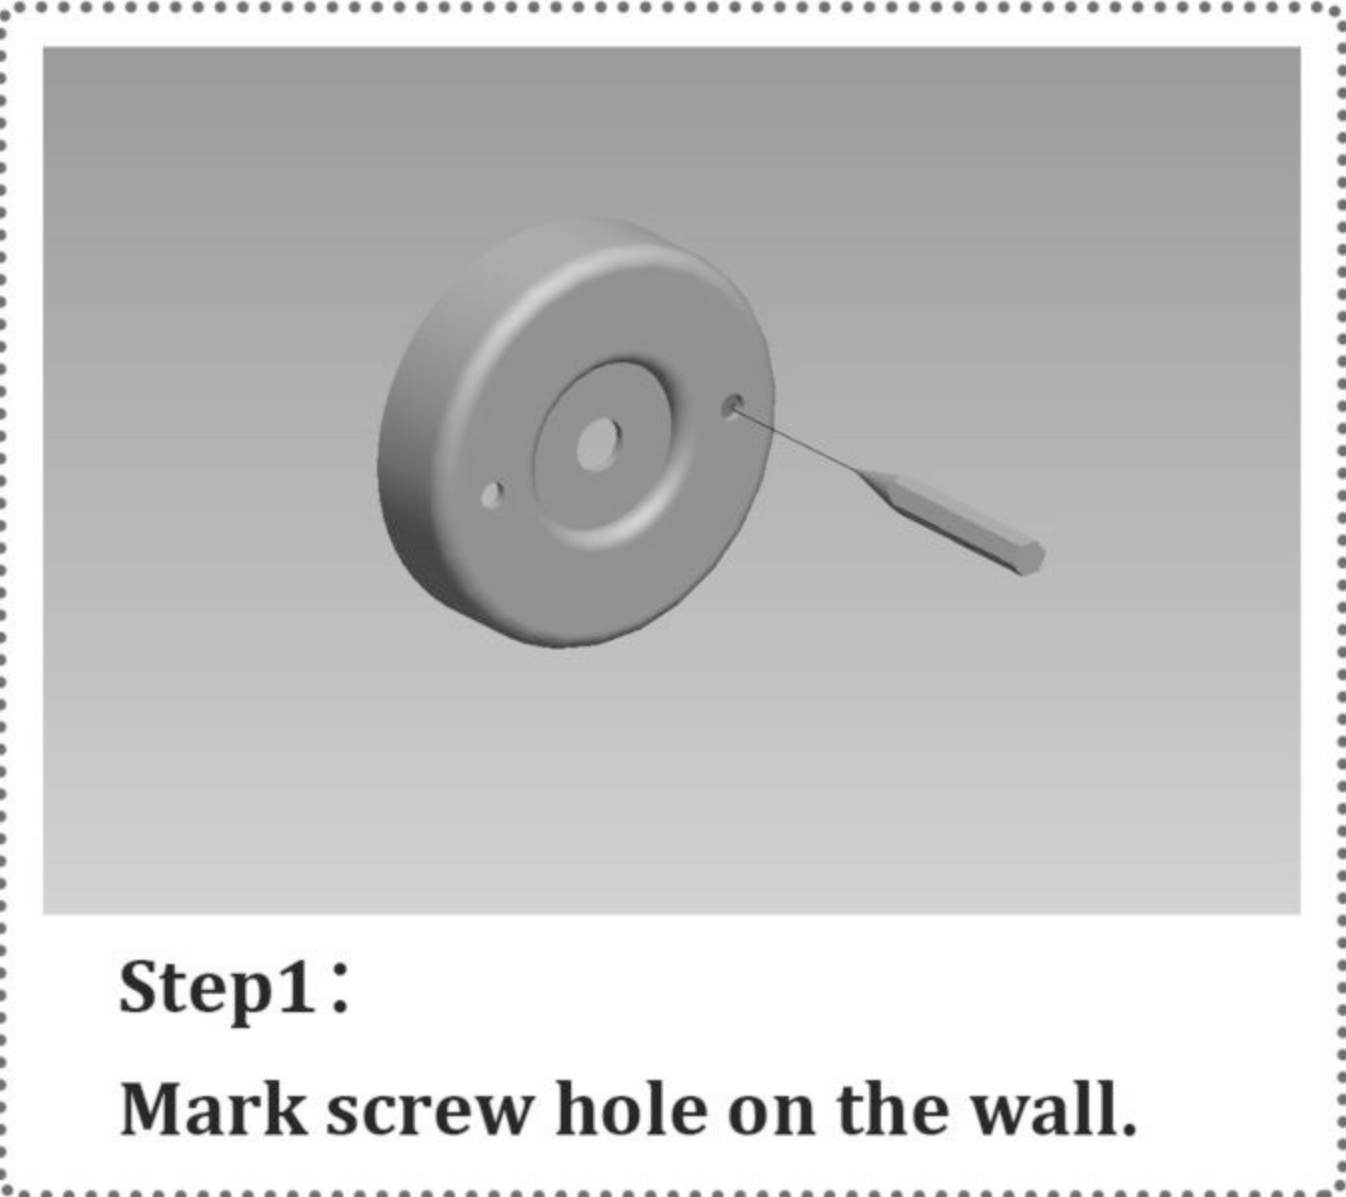


Step1: Mark screw hole on the wall.

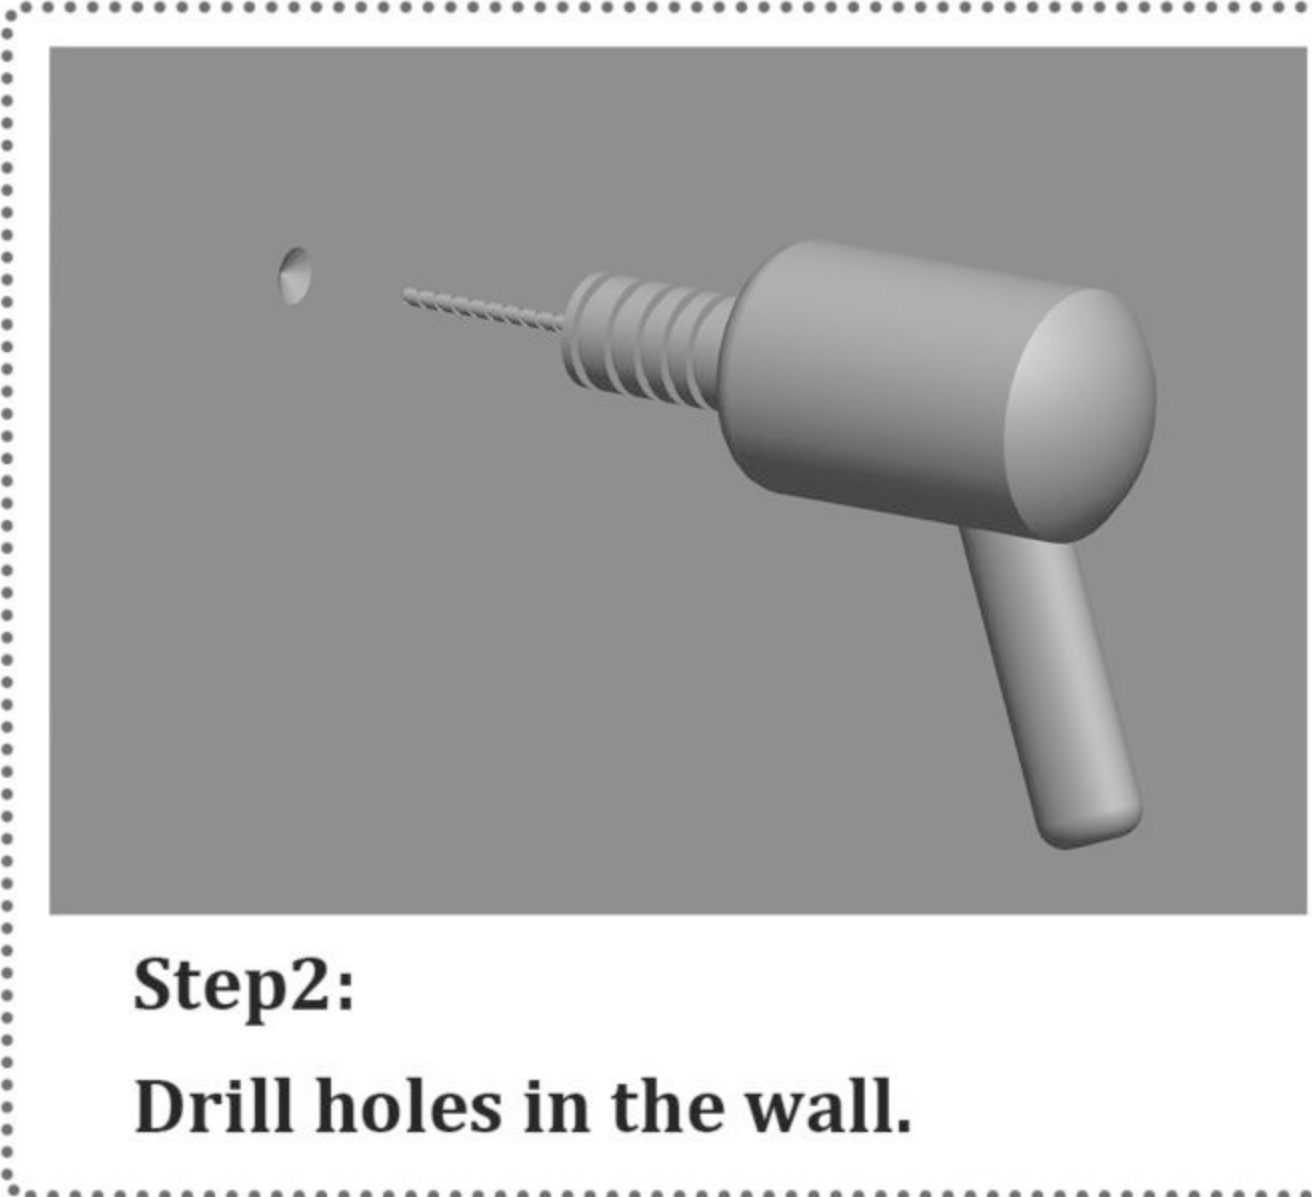


Step2: Drill holes in the wall.

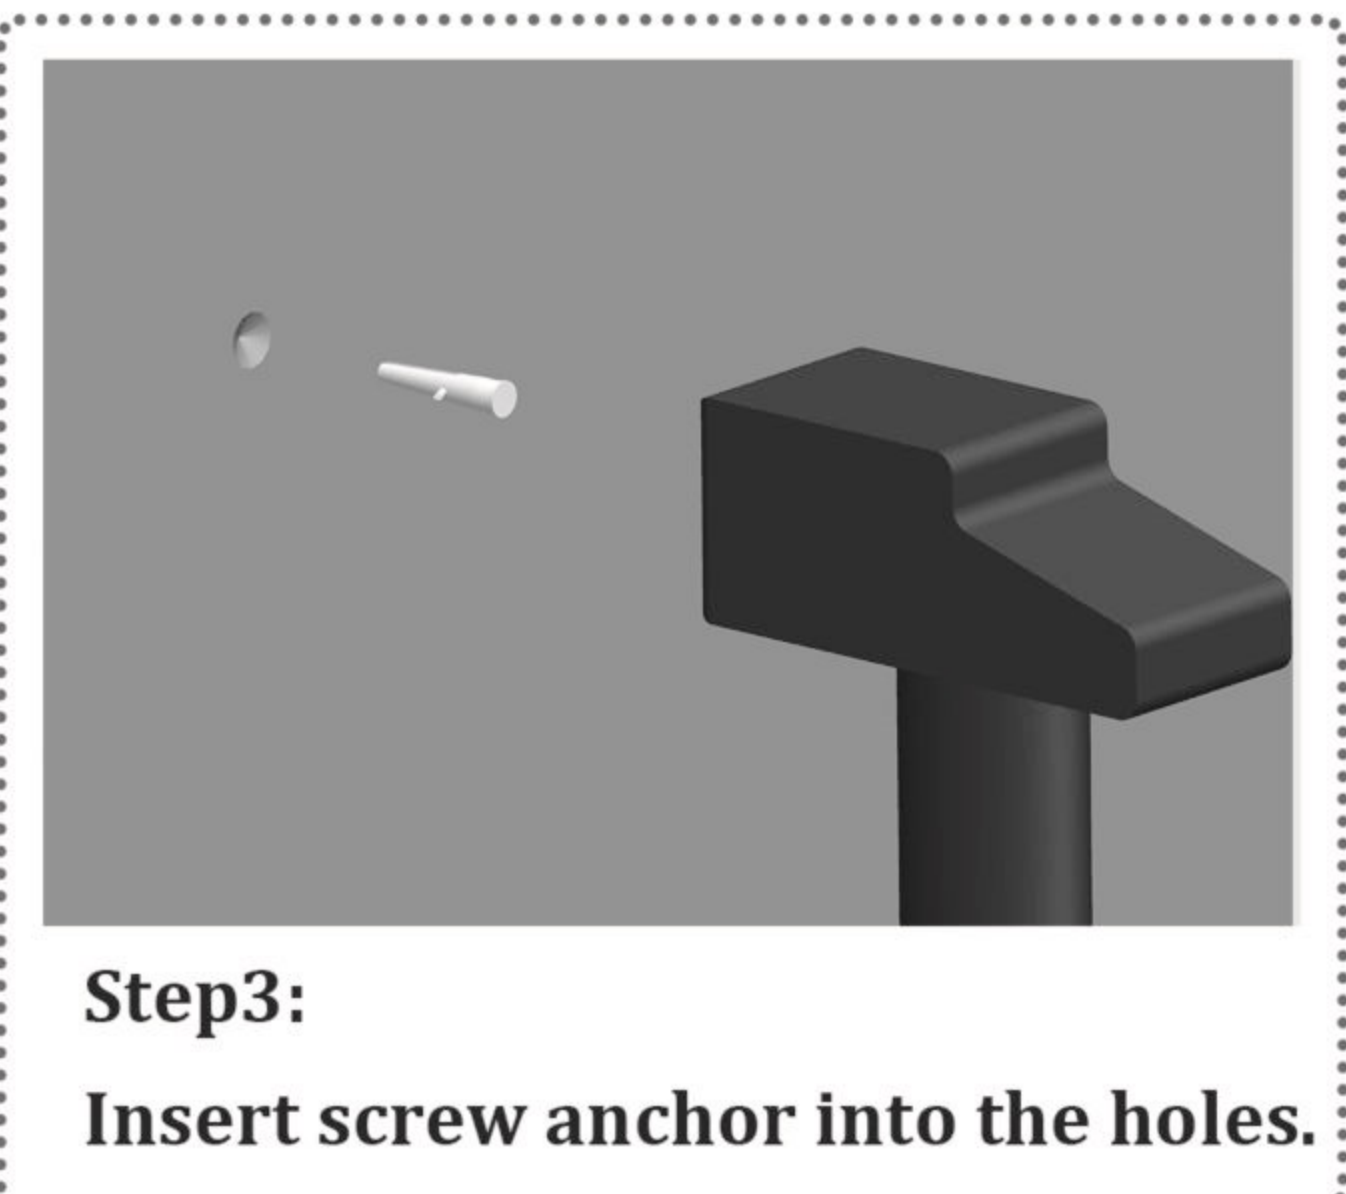


Step3: Insert screw anchor into the holes.

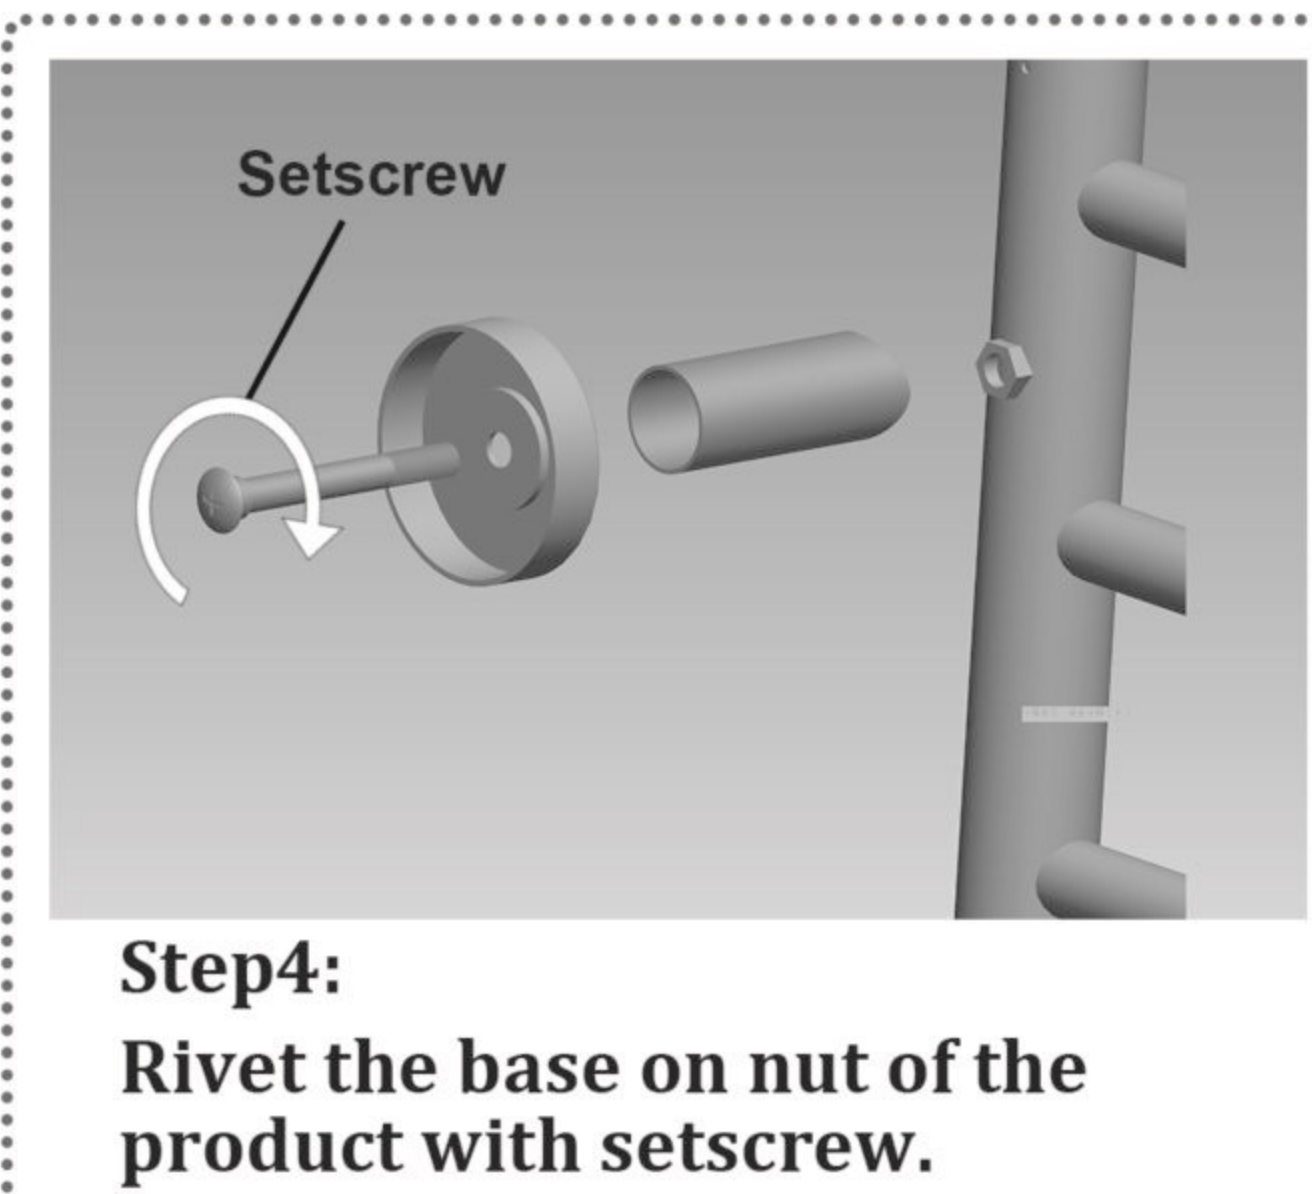


Step4: Rivet the base on nut of the product with setscrew.

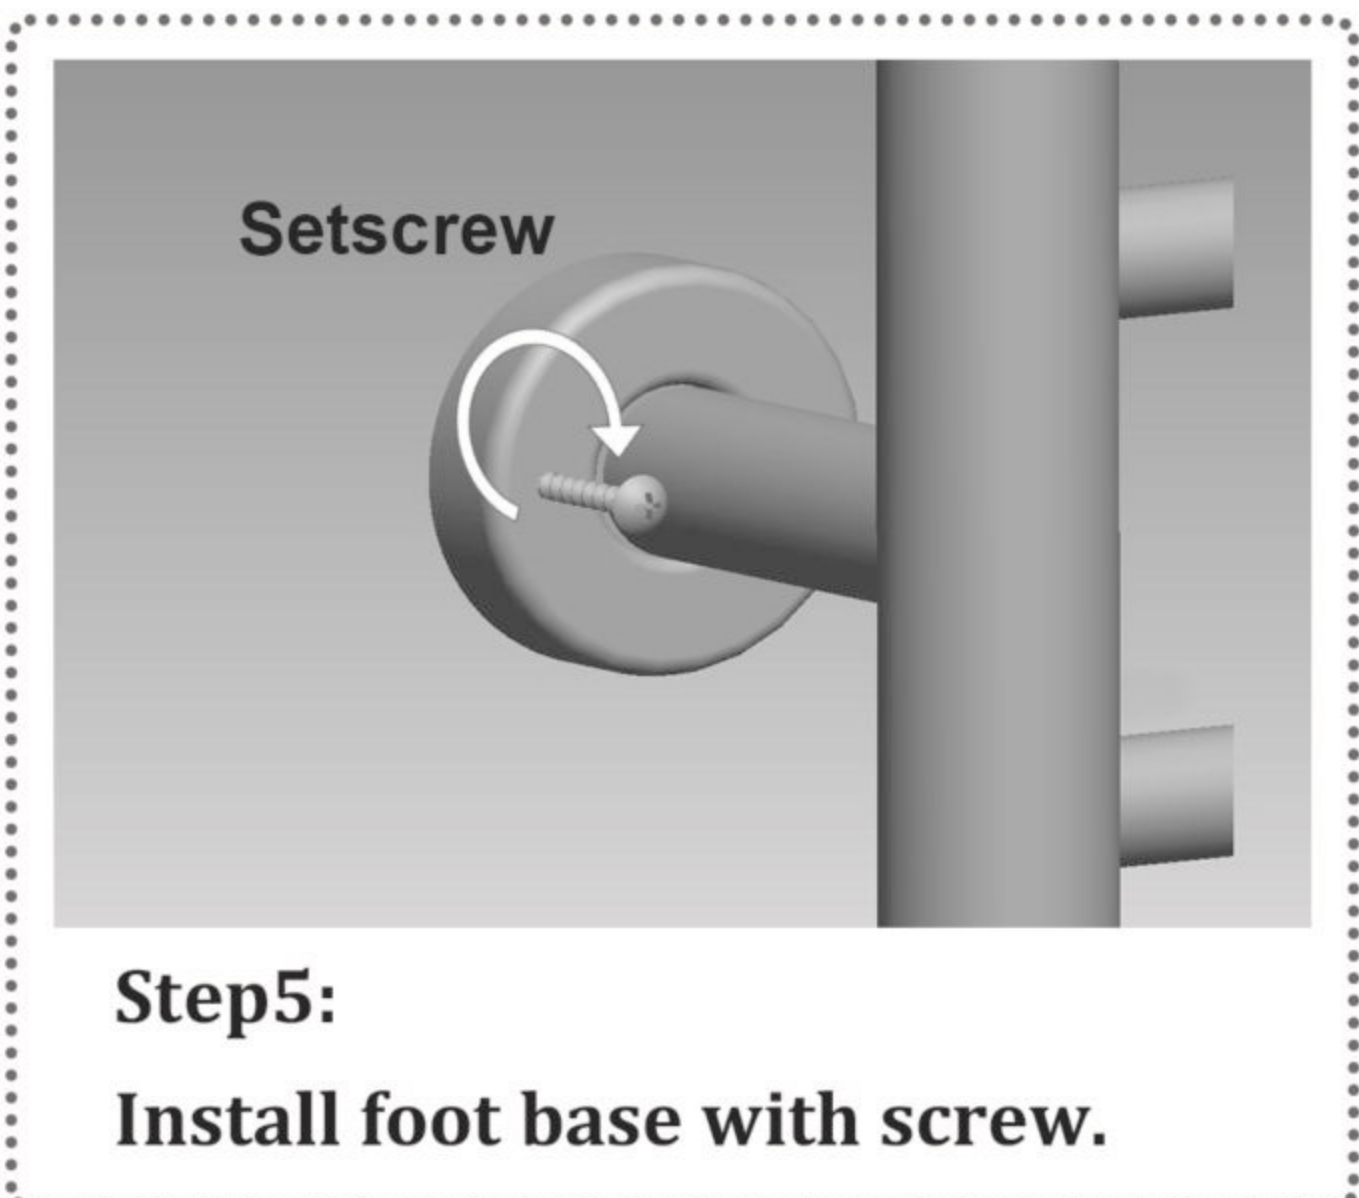


Step5: Install foot base with screw.

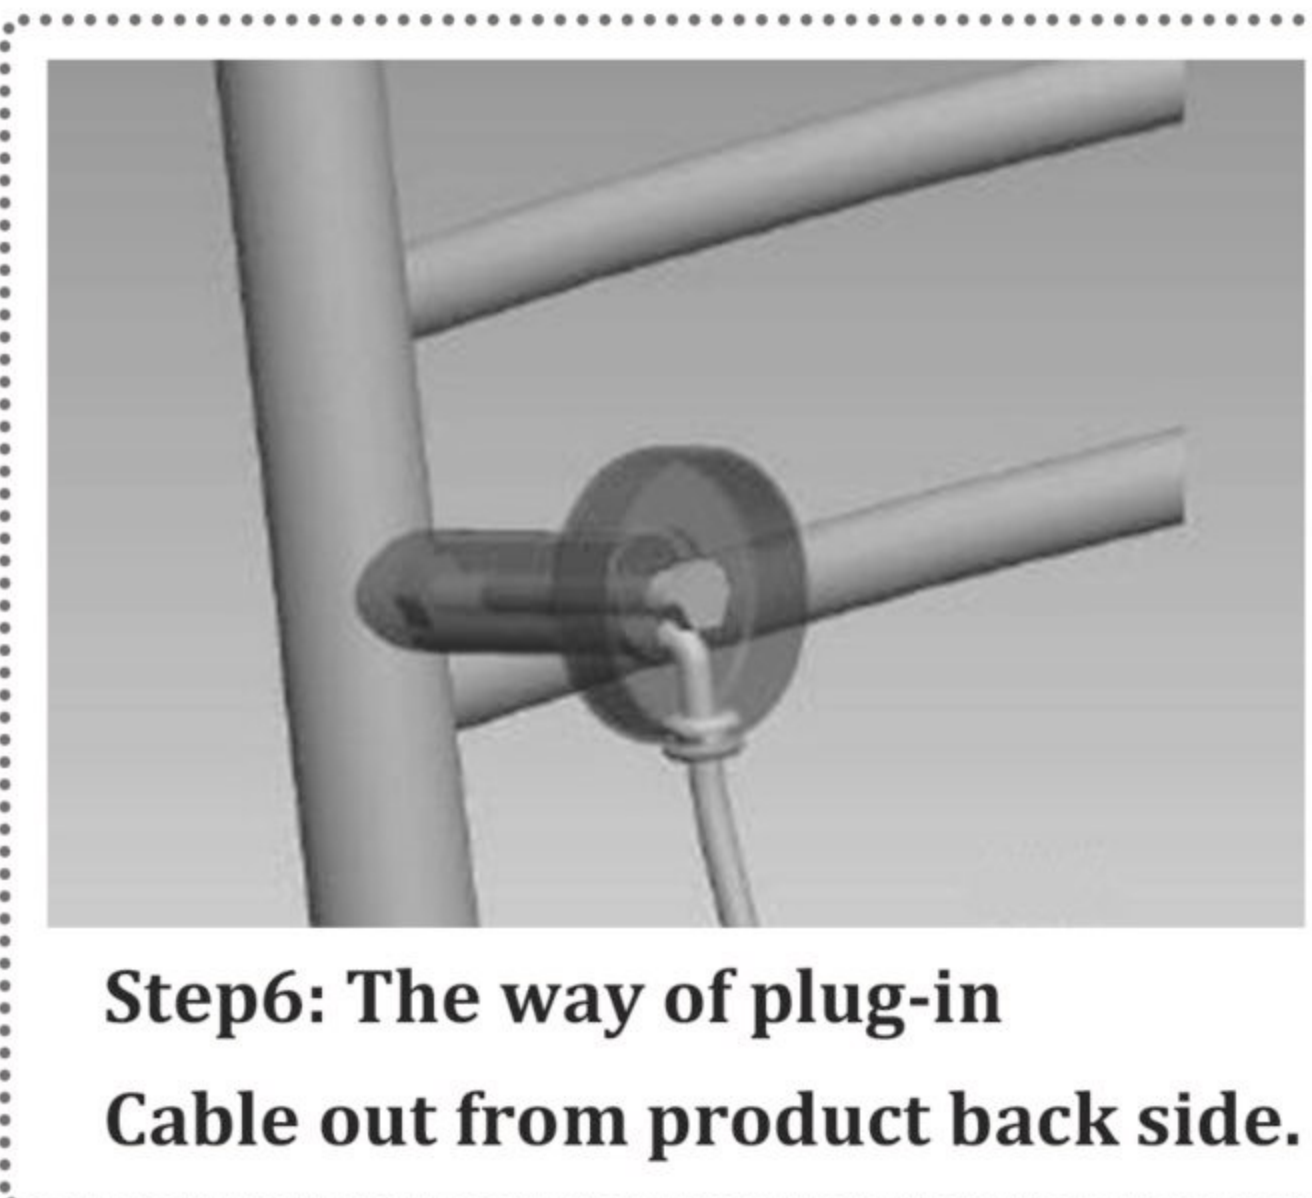

Step6: The way of plug-in Cable out from product back side.

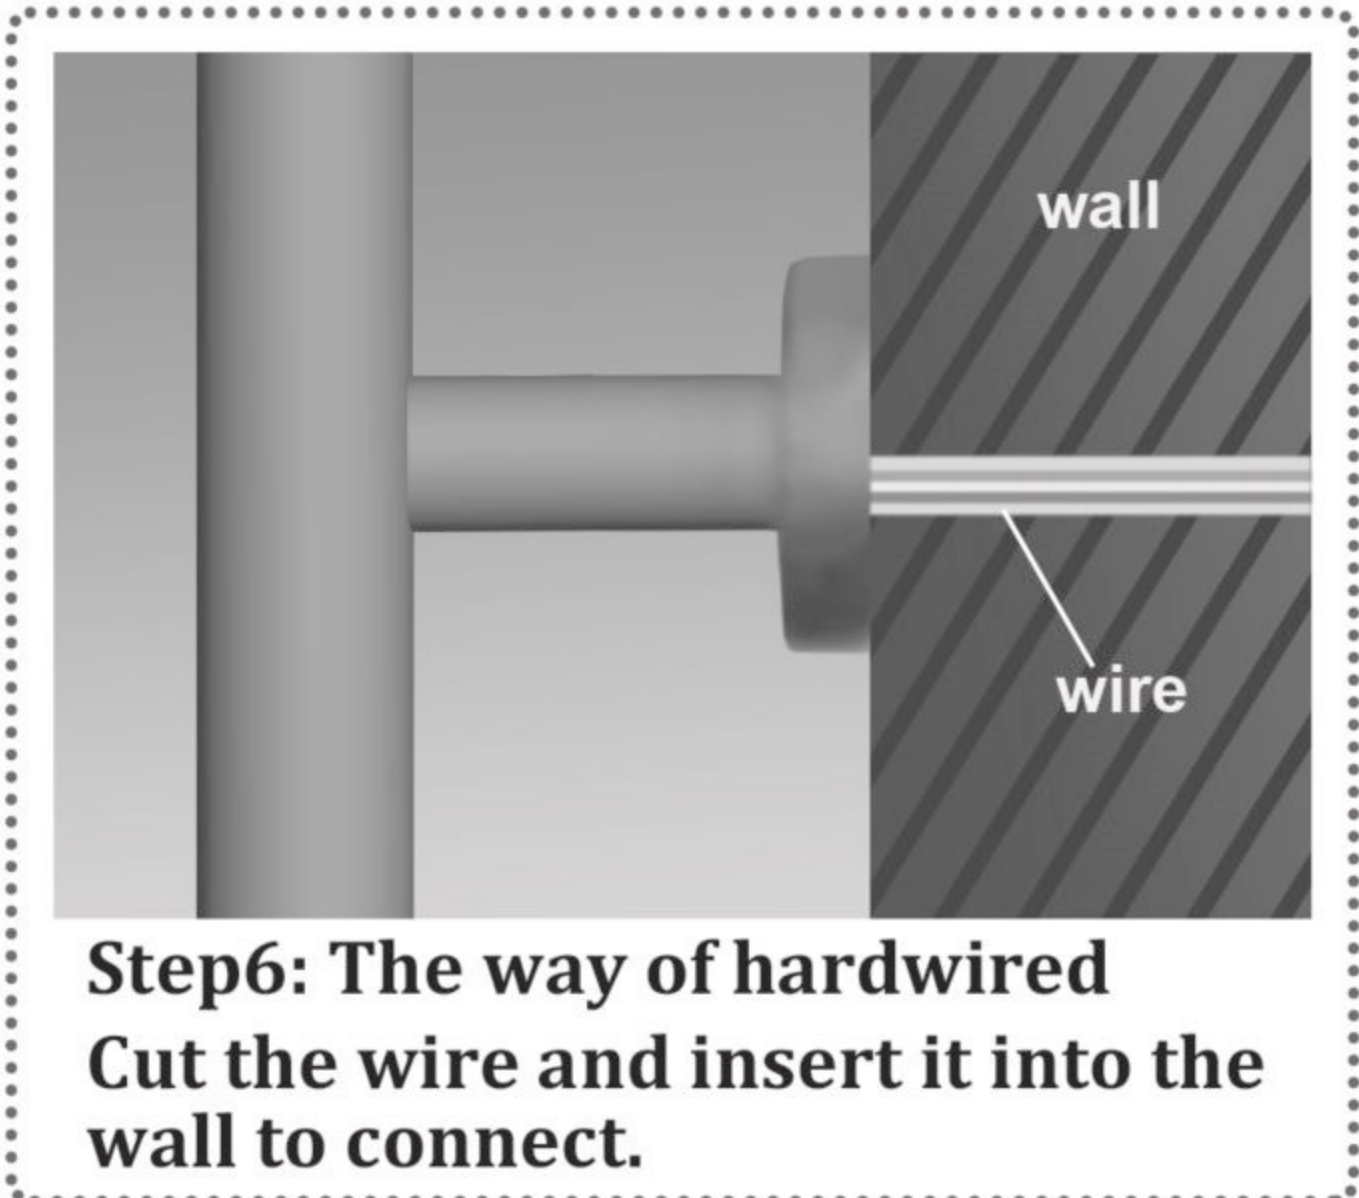

Step6: The way of hardwired Cut the wire and insert it into the wall to connect.

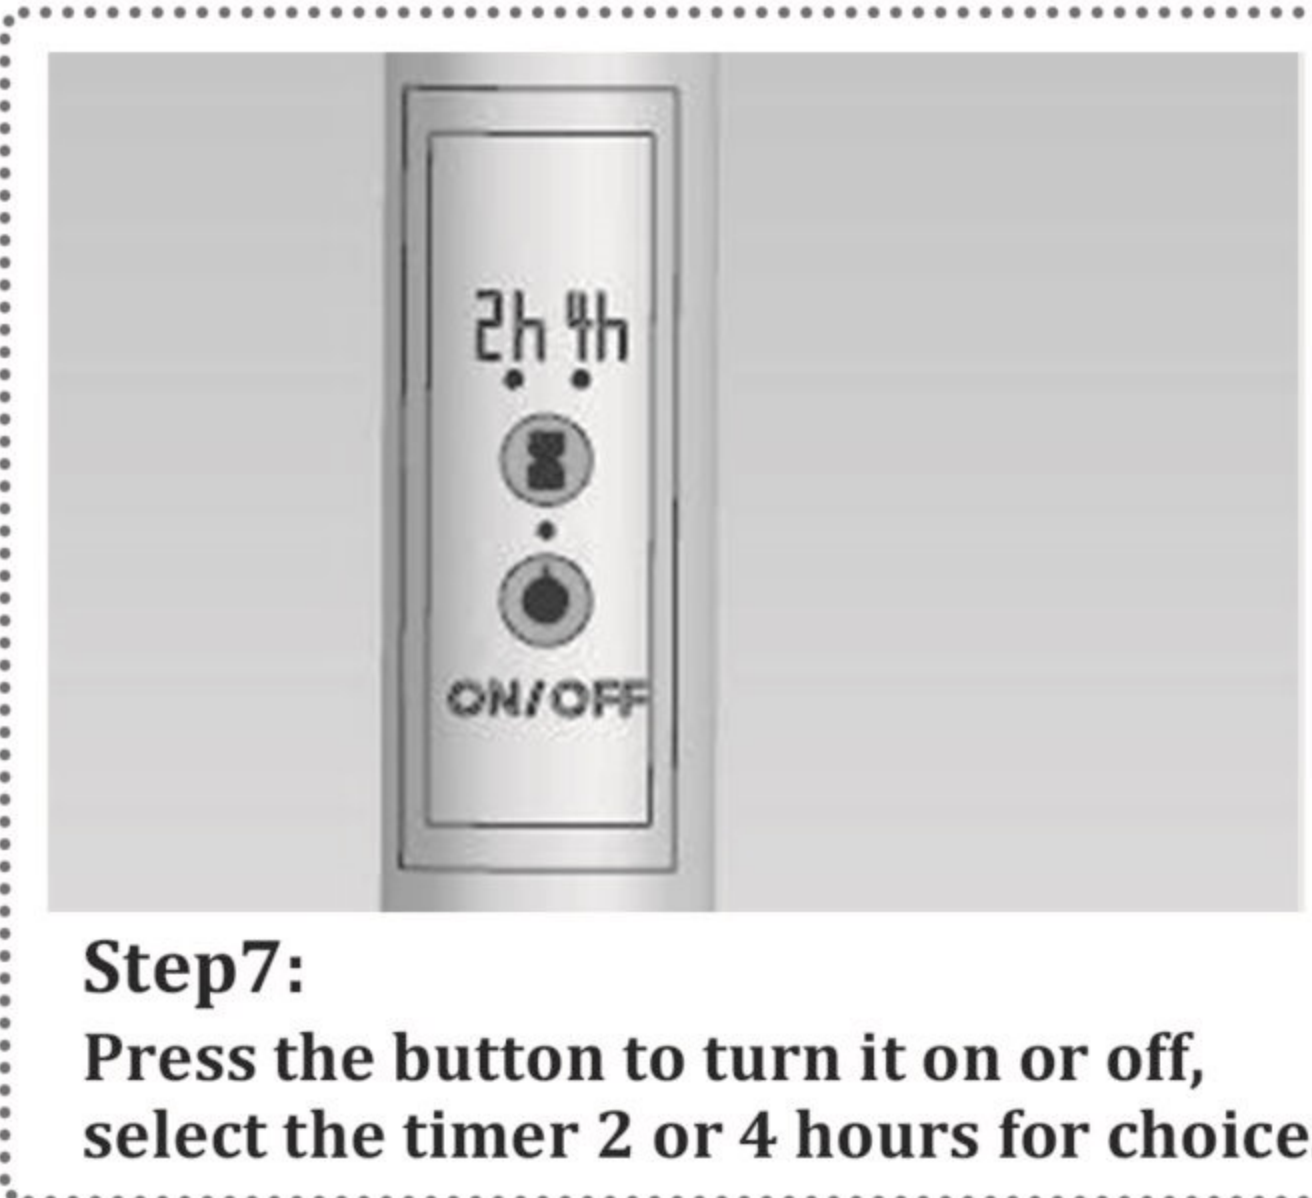

Step7: Press the button to turn it on or off, select the timer 2 or 4 hours for choice.

OPERATING INSTRUCTION

- 1. Please read the wall-mounted installation carefully to understand how to install on your ideal location of the wall.
- 2. Make sure to complete the installation.
- 3. Plug the power cord into an electrical outlet or cut the power cord and hardwired.
- 4. Switch ON/OFF“ ”: Press button ON/OFF, product will start to work, if turn it off to stop work, just press it again.
- 5. TIMER “ ”: the timer can be adjusted from 2H(hour) to 4H(hour) for choice, just press button “ ”to select. It also can run 24-hour a day ,because it’s energy-saving.
- 6. Please turn it off and take the plug out from the outlet if not use it.