



 
KOGAN QLED

50" 4K UHD HDR Smart Google TV

SERIES X Q98J

(KAQLED50XQ98JSTA)

COMPONENTS

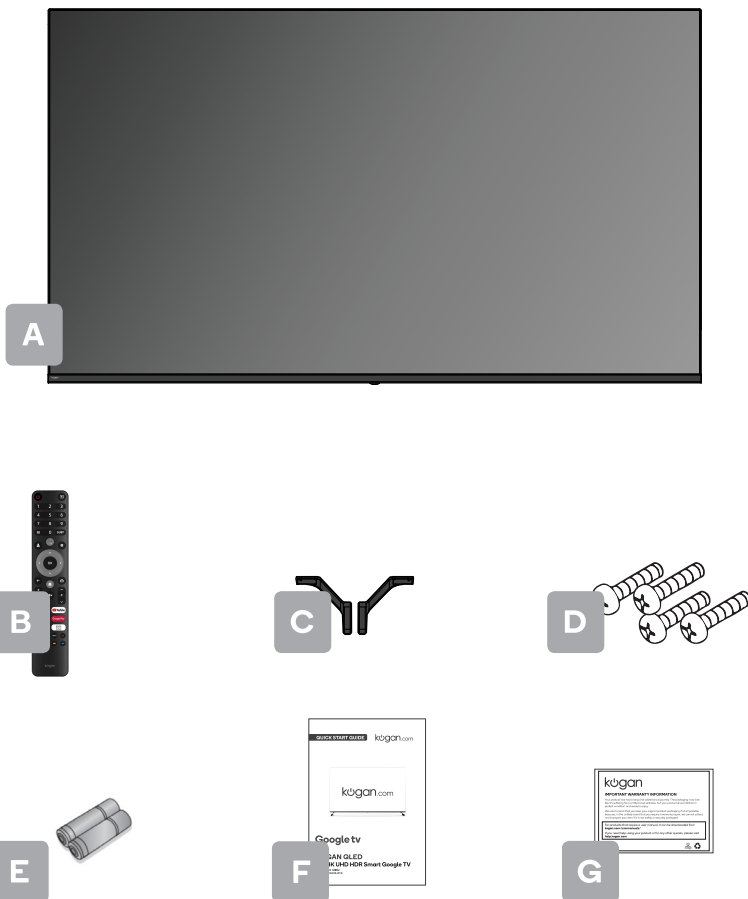

- A** Kogan QLED 50" 4K UHD HDR Smart Google TV
- B** Remote control
- C** Stand (x2)

- D** M4 x 16 mm screw (x4)
- E** AAA battery (x2)
- F** Quick-start guide
- G** Warranty card

 
NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

REMOTE CONTROL OVERVIEW



- 1 **Power**, press to enter or exit standby mode
- 2 **Source** displays the list of input source channels.
- 3 **Number buttons** to select channels or input passwords
- 4 **Quick Menu** to display TV options with optional, adjustable settings
- 5 **SUBT Subtitles** to select subtitles
- 6 **Account** Switch account
- 7 **Google Assistant** to launch the built-in virtual assistant for voice commands
- 8 **Direction buttons** for navigating menus and settings
- 9 **Dashboard** Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.
- 10 **Back** to the previous menu
- 11 **Enter** select the current item or confirm selection, display Channel list in DTV mode
- 12 **Home** to access the home page
- 13 **Electronic Program Guide** DTV mode

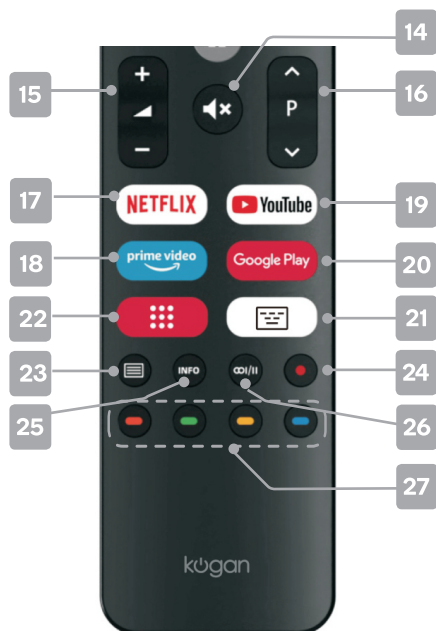

14 **Mute** to toggle sound on/off

15 **Volume** to adjust the volume up or down

16 **Program** to scroll channels

17 **NETFLIX** to open app homepage

18 **prime video** to open app homepage

19 **YouTube** to open app homepage

20 **Google Play** to open app homepage

21 **Virtual keyboard** Open virtual keyboard (only under Live TV)

22 **Apps** Show all installed apps

23 **Teletext** to show/hide Teletext (Teletext not available in Australia or New Zealand)

24 **Record** in DTV mode;

25 **info** displays the current program information

26 **Audio** to select available languages and audio channels.

27 **Colour buttons** for navigational use within apps

 
ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.


1. Stand assembly

- Attach stands to base of TV, ensuring 'L' and 'R' markings on the TV and stands match.
- Insert two 16 mm screw for each stand and use Phillips head screwdriver (not supplied) to tighten.

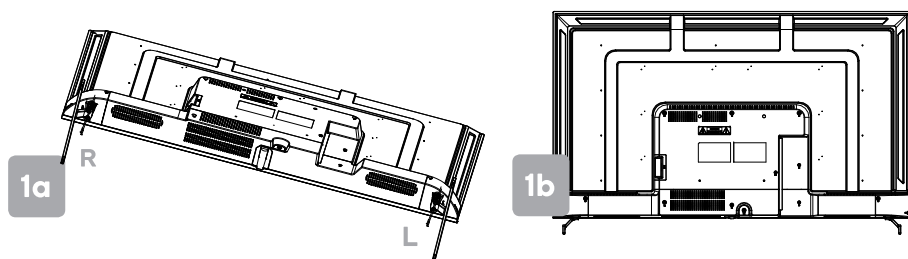


- Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

 Please use Lithium AAA Batteries for the Remote

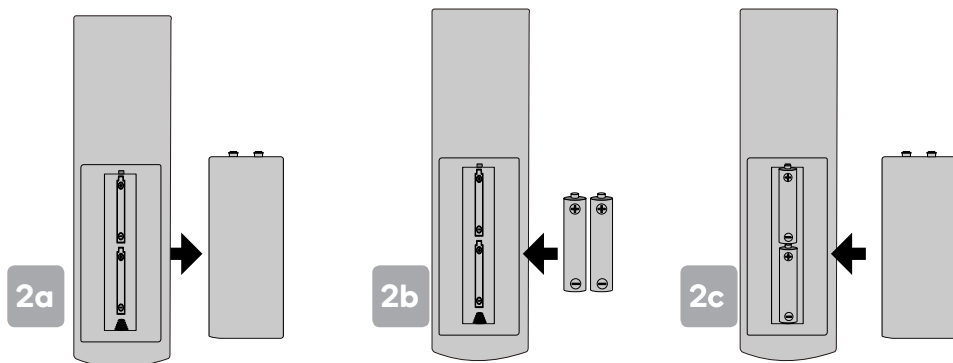

3. Connect to antenna

 - a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

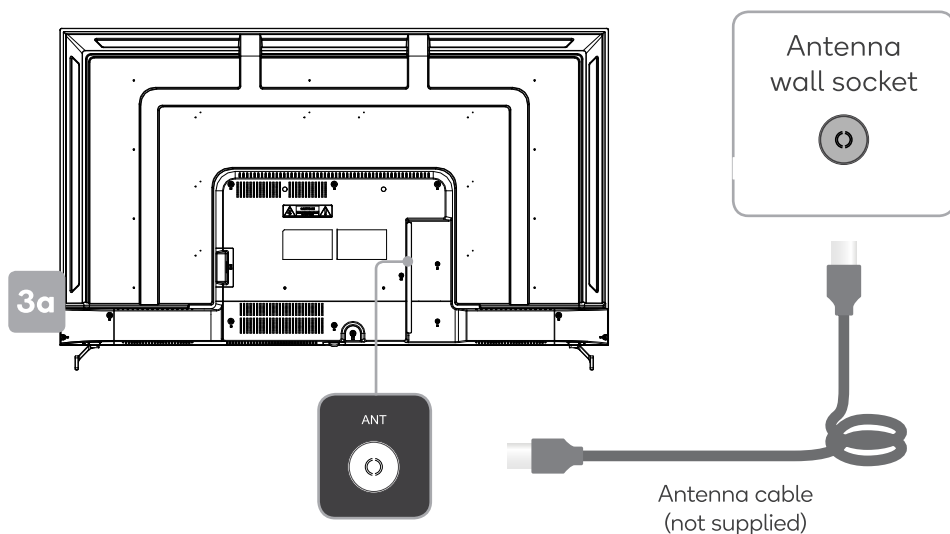

4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (⏻) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

FIRST TIME SETUP

When turning the TV on for the first time, the **Welcome** screen will appear. Use the **▲**, **▼** and **OK** buttons to navigate the following options.

Language

Select your menu language.

The entertainment you love

In your Google Account you get. Movies and TV, shows from your favorite Streaming apps. Personalized recommendations, Google Assistant. Search and control your TV with your voice, live tv, External devices, Basic TV can also be set directly.

Select Wi-Fi network

Your Android TV will automatically scan for wireless networks nearby. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.

If you'd prefer to connect an Ethernet cable to connect to the internet, simply insert the cable (not supplied) to the 'LAN' input port at the back of the TV **(4a)**, and ensure that it is correctly connected to the internet.

Select terms

This page will allow you to read each of the Google Terms of Service, Privacy Policy, and Google Play Terms of Service in full, and to accept.

y C C C C

0ss -p- v'-ogzl - v z-zl y l' '- po- v z-SU' -gww' -V pov - op--
wl zt p' pu -9 vvnd -0'' p gu -t g -uv -hl -ghd - vnpk-gs ol -i vu l u -
mvt - v z-SU' -gww' --

 
V C C

Xv z' h'i zhl k-gww- pshl -p' gsk-vu- v zkl pl -0kkppugs - ol -
gww' -og -igt l- po- v zkl pl - psgs v-hl -p' gsk-k zpn-p' gsg pu --

Remote & accessories

Your Android TV remote control has bluetooth capabilities. Follow the onscreen prompts to pair the remote with the TV. This will allow you to use voice commands with your remote via the Google Assistant button.



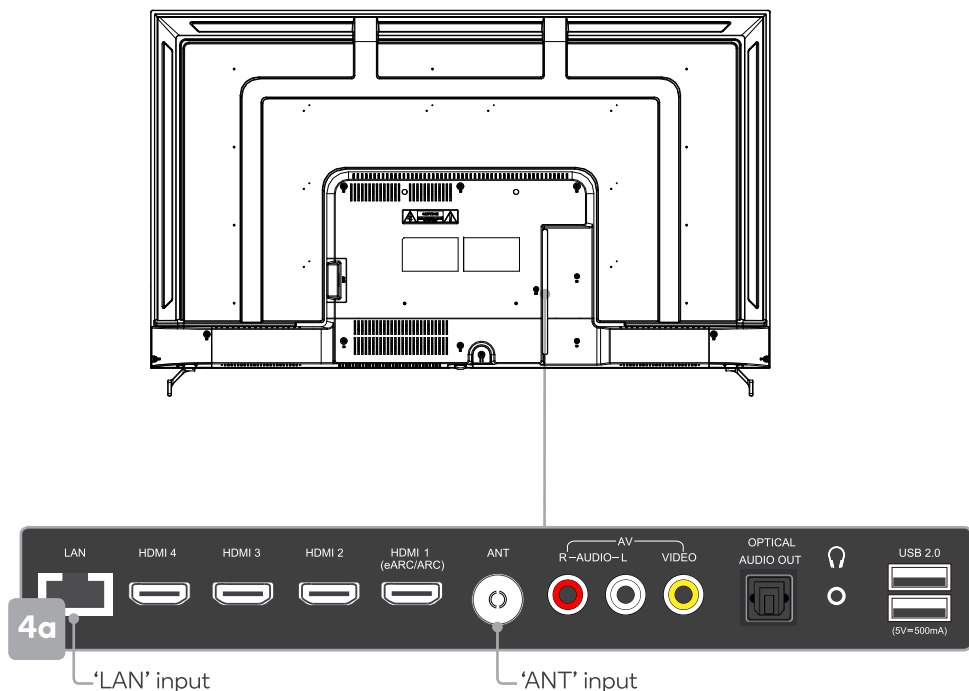

Following these options, the **Auto Tuning** screen will appear. Ensure you have an antenna cable connected to the 'ANT' input port at the back of the TV **(4a)**.

 
The auto tuning function will search for and save all available free-to-air TV channels. After confirming your settings, the process will automatically begin. The number of searched channels will be displayed on the screen.

When setup is complete, you will be able to access the **Home** page.

eARC Enhanced Audio Return Channel.

If you want to use eARC function, Please set EDID version to EDID version 2.1 (Settings-> Channels & Inputs-> Input-HDMI EDID Version). In addition, the eARC switch needs to be turned on. Settings-> Display & Sound -> Sound->eARC.

HOME PAGE

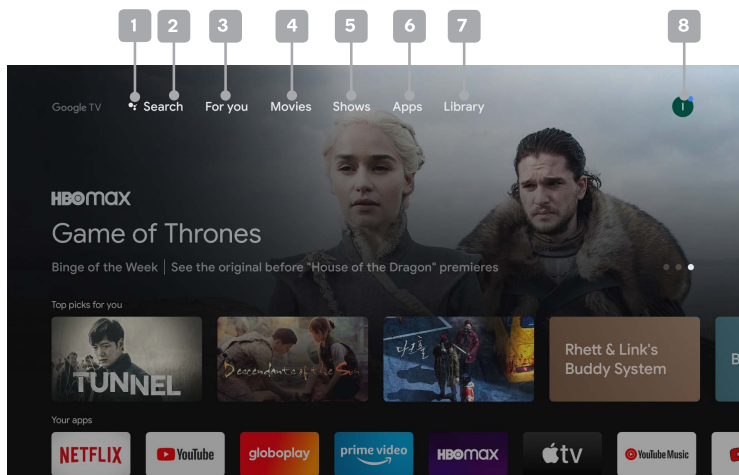

1 Google Assistant

Click to launch the built-in virtual assistant, which will begin listening for voice commands. Give it a try, ask "What's the weather today?"

2 Text search

Enter text manually to search TV apps.

3 For you

5 p w s g ' - 0 w w p g p u - d i v t t l u k g p u u l - l w p v k l ' - v m o l - k g s - i v z z v t - - ' w p u v m a l ' t l S v w - w p r ' - m z - v - - X v z g w w -

4 Movies

Xv i g u - g i o - w w s g z t v p ' - u l - t v p ' - g u k - t v z

5 Shows

Xv i g u - g i o - w w s g z w v n z g t ' - u l w v n z g t ' - l i

6 Apps

Access the App Centre to display all installed apps. Free-to-air channels can be accessed under the 'Live TV' option.

7 Library

View records, manage watch list.

8 Dashboard

 
Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.

SETTING

Global settings

To access the global settings menu (5a), Tu kl z ol -Avt l -p l zgi l M l '' - ol C -rl - u s ol G t l u -gwwl gz' - ol u-wz '' - ol gzzv rl ' - v-t v l - v- ol -Q p n' -p v u Here you will find all of the adjustable options for -9 vvnd SU's interface, connectivity, and apps.

In live tv mode you can also press the ≡ **Quick Menu** button on your remote control and use the < / > buttons to navigate to the Settings option.

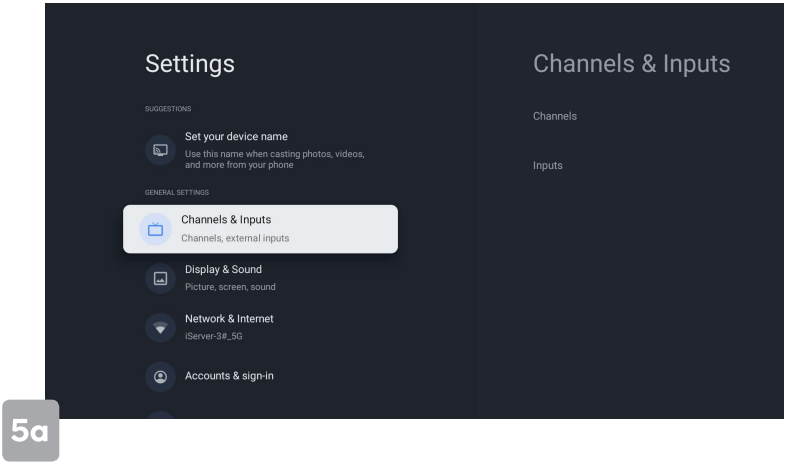

Quick Menu

Options for your Live TV (Input,picture, sound,Power,Advanced Options) can be accessed by pressing the ≡ **Quick Menu** button on your remote control. Use < / > buttons to navigate through the submenus, and ^ / v buttons to access Channel and Recording/Time Shift options.

BASIC TROUBLESHOOTING

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the HUE and Color Tuner

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

“No Signal” on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.


Confidential unpublished works. Copyright © 2012–2021 Dolby Laboratories. All rights reserved.

NOTES

[illegible]

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

 

Need more information?

This is a **Quick Start Guide**, and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **help.kogan.com**

kogan.com