


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-1P-277V-3KVA-120V-N3R

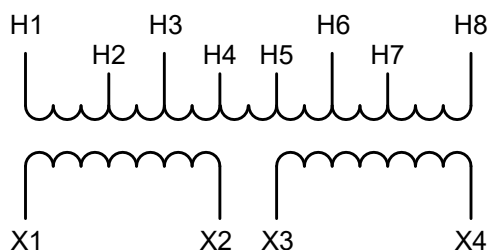

Primary Volts	Connect Lines To
120	H4-H5
208	H3-H6
240	H2-H7
277	H1-H8

Secondary Volts	Connect Lines To	Inter-connect
240	X1-X4	X2-X3
120/240	X1-X2-X4	X2-X3
120	X1-X4	X1-X3, X2-X4

