



*1.Remove the old filter by twisting anit-clockwise, and gently pullout of the houseing bracket.*

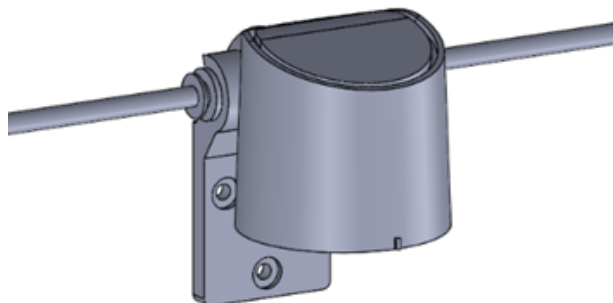

*2.Insert the new filter into the housing bracket and twist clockwise until the marks align on the front.*

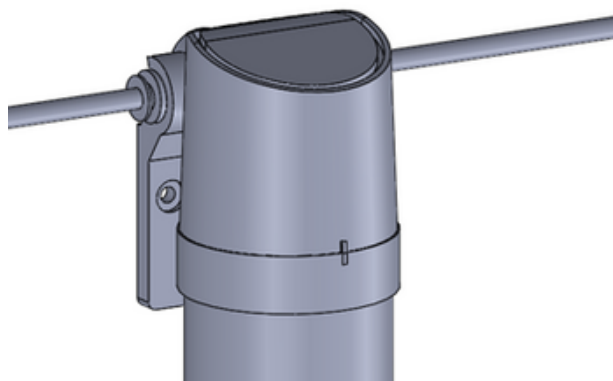

*Please keep in mind that when you first use the boiler tap after installing a new filter, water will fill the filter, making it take longer for water to dispense from the tap. We advise to keep the water flowing for 30 seconds to prime the new filter before first use.*

