

COMPAQ

USER MANUAL



E-WASTE DISPOSAL

Environmental compliances:

As per the rules laid down by the Government for environmental concern & safety, your product has been made to comply and conform to the respective regulation as listed below. This product falls under the E-WASTE (MANAGEMENT) RULES, 2016 with all amendments of Ministry of Environment, Forests & Climate Change.

RoHS declaration:

This Product is in conformity with the requirements of Rule 16 of the E-WASTE (MANAGEMENT) RULES, 2016 with all amendments. The content of hazardous substances with the exemption of the applications listed in SCHEDULE II of the E-waste (Management) Rules, 2016 is as follows:

1. Lead (Pb): not over 0.1% by weight;
2. Mercury (Hg): not over 0.1% by weight;
3. Cadmium (Cd): not over 0.01% by weight;
4. Hexavalent Chromium: (Cr6+): not over 0.1% by weight;
5. Polybrominated Biphenyls (PBBs): not over 0.1% by weight;
6. Polybrominated Diphenyl Ethers (PBDEs): not over 0.1% by weight.

Information under E-Waste (Management) Rules, 2016

For disposal of E-waste, please call our helpline no.

Do's and Don'ts for disposal of product:

1) Do's :

- a. Always drop your used electrical/electronic products, batteries, cables, adapters and packaging materials after the end of their life at the nearest authorized collection point/center.
- b. Separate the packaging material according to their respective waste disposal options and sorting for recycling.
- c. The batteries can be easily removed from the product for recycling.

2) Don'ts :

- a. Never dump E-waste in Garbage bins or Municipal solid waste stream.
- b. Do not dispose your product as unsorted municipal waste.
- c. Do not throw or dispose used, damaged and leaking batteries & products into household waste.



Safety Instructions

 
1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.



5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - The appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - Unplug the TV from the power outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners. Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.**


No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.

Safety Instructions



Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

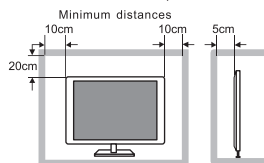


Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained. Heat built up can reduce the service life of your television, and can also be dangerous.




Caution

 Never stand on, lean on, push suddenly the product or its stand. You should pay special attention to children.

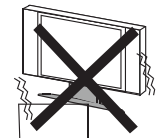


Caution

 Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.



Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

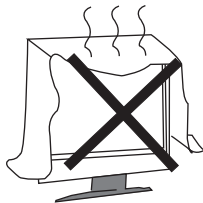

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass.



Installation

 
Installing the Stand

⚠ CAUTION

- Be sure to disconnect the A/C power cord before installing a stand or Wall-Mount brackets.
- The LED display is very fragile, and must be protected at all times when installing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LED display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

Follow the illustrations and instructions below to complete the installation steps:

1. Carefully place your TV facedown on a soft, flat surface to prevent damage to the TV or scratching to the screen.
2. Remove the 2 stands from the accessory bag and then insert the stands into the bottom slots of the TV.
3. Secure the BASE STAND to the TV with the 4 screws in accessory tightly.

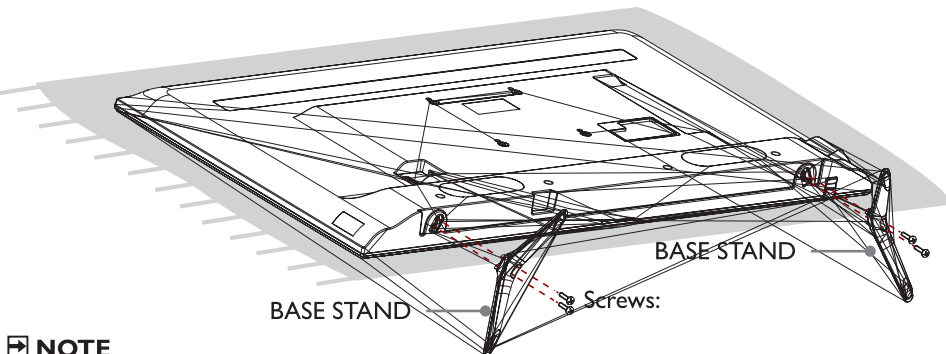


📌 NOTE

Pictures are only for reference, actual product may vary in appearance.


► WALL-MOUNT BRACKET SPECIFICATIONS

TV	80cm	102cm	109cm
Wall-Mount hole pattern (mm)	200 x 100	200 x 200	200 x 200
Wall-Mount screw size	M4 x 6	M6 x 10	M6 x 10

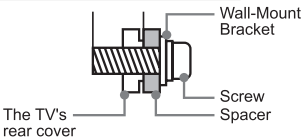 

Control Keys and Connectors

 32 HD & 40,43 FHD



Side Connectivity

RJ 45 LAN: Plug in network RJ 45 plug to connect to an external modem or network access equipment.

AV Input: The AV IN sockets can be used to connect a range of equipment, including AV IN AUDIO video recorders, camcorders, decoders, satellite receivers, DVD players, or gaming consoles. The VIDEO IN socket provides composite video connection.

HDMI 1 / HDMI 2 Socket (Input): The HDMI (High-Definition Multimedia Interface) socket can be used to connect with a HDMI-PC with a compatible video card, certain DVD players or an HD compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. ARC (Audio Return Channel) function is only supported on HDMI 2 (ARC) port for this model.

Digital Audio Out: Use a digital optical cable to connect your TV to a compatible audio receiver

RF/ANTENNA IN Socket (Input): Lets you connect a coaxial cable to receive the signal from your antenna, cable or cable box.

USB Interface: Insert a compatible thumb drive for image, audio & video playback.



Remote Control



No.	Buttons	Function
1	Power 	Turn ON / OFF TV
2	Rebon Keys 	Opens the option of app in homepage
3	Voice 	Activates voice command function
4	Setting 	Displays system setting menu
5	Navigation/Ok	Press the direction buttons to select menu options or settings. Press OK to select or confirm a menu item
6	Back 	Returns to previous menu or setting
7	Home 	Opens the Android TV homepage
8	TV Keys 	Opens the TV source
9	Volume 	Adjusts the volume
10	Mute 	Mutes or restores sound
11	Source 	Selects a signal source
12	NETFLIX	Opens the Netflix app
13	prime video	Opens the Prime Video app
14	YouTube	Opens the YouTube app
15	Google Play	Opens the Google app

* You can pair remote while setup your device, if you did not pair it while setup, then follow the instruction written in remote & accessories to pair your remote .

 
Operating your TV

To Setup TV


1. Plug the TV ON.
2. Press power key on R/C.
3. Press 'Home Key' & 'Left Navigation Key' simultaneous until green is not start bilging on R/C key. Now your TV is paired with TV



4. Select your language from various options available.

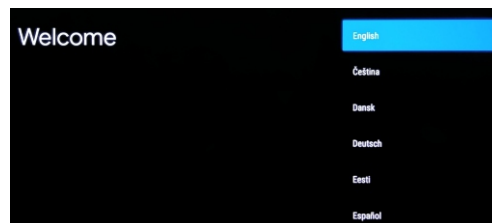

 5. Now to quickly set up your TV with your android phone select "Continue" otherwise select 'Skip'.

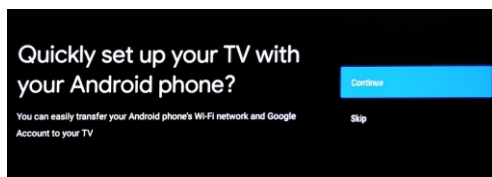


6. After selecting "Continue" follow the instruction on TV screen.


7. If you skip that option then select your Wi-Fi network. Enter password if needed then wait for few seconds.



 
8. Now you can "Sign in" to your google account & make the most of your TV you can also "Skip" this Option and "Sign in" later.

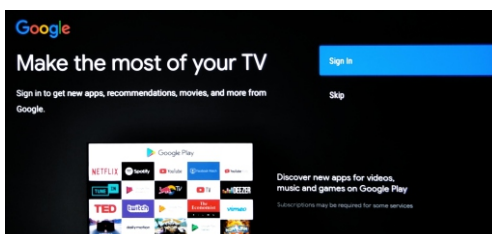

 
9. Now TV shows you terms of service privacy policy & play terms of service. So you can read these & please "accept" this after reading.

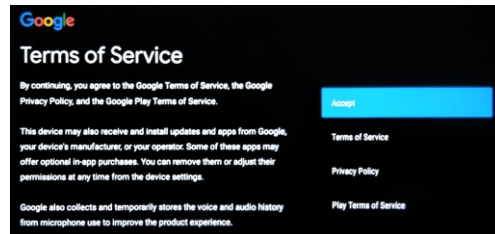

 
10. Now TV shows you google services please select check box according to your need & accept this.

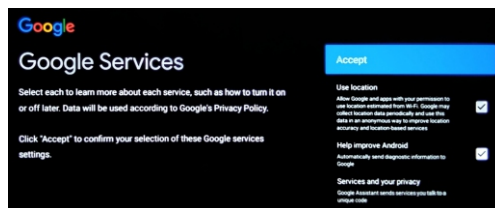

 
11. Now your TV shows it features. Lets walk through it by pressing right navigation key.

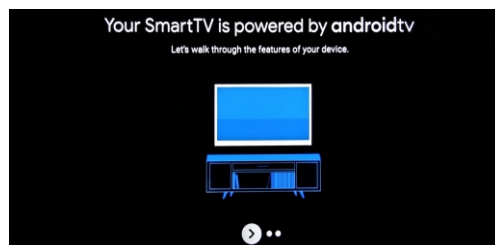

 
12. Now end user licence agreement is displayed on device, please check after reading it then press next.

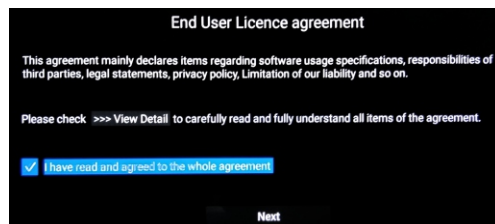

 
13. Now choose "Home" if you are using it in your home.

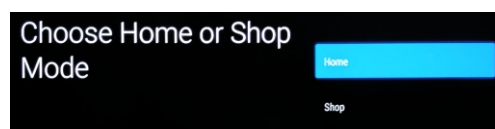

 14. Now select your contry then select LCN at "Off" or "On" then select TV source from ATV, DVB-T/T2, DVB-C.

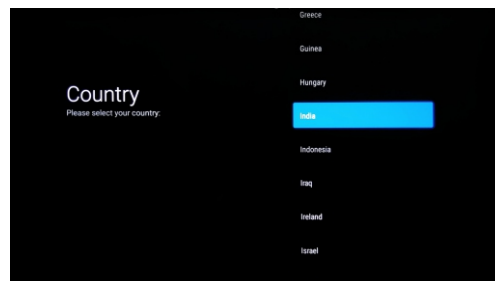

 15. To scan RC channel select scan option or 'Skip Scan'.

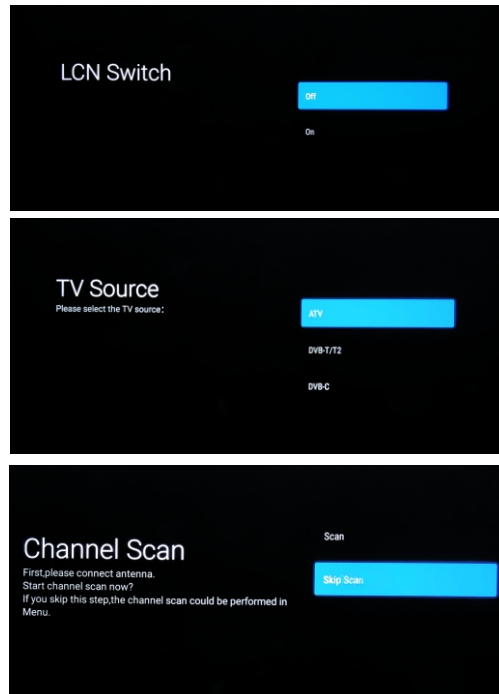

TV Function instructions

Powering the TV set On and Off

Powering On: Check if the TV is in standby mode. This means the mains cable is connected to a working mains socket. Then press the power button on the device or the  button on the remote control to turn On the TV.

 
Powering Off: To switch the TV Off, either press the Power button on the device or press the  button on the remote control.

Installing Channels (RF Signal)

This section describes how to search and store channels automatically. This may be done in any of the cases below:

- You have skipped the channel installation step in the initial setup;
 - You are prompted that there are no channels in TV mode;
 - You want to update channels list;
1. In TV mode, press Menu button on the remote control and select Settings > Channel.
 2. Make sure Channel Installation Mode is set to Antenna.
 3. Go into Channels and select Channel Scan, press OK button to start.
 4. The channel scan may take a few minutes. After the automatic search, channels are arranged in a preset order. You can also skip, move or edit channels in the Channels menu.



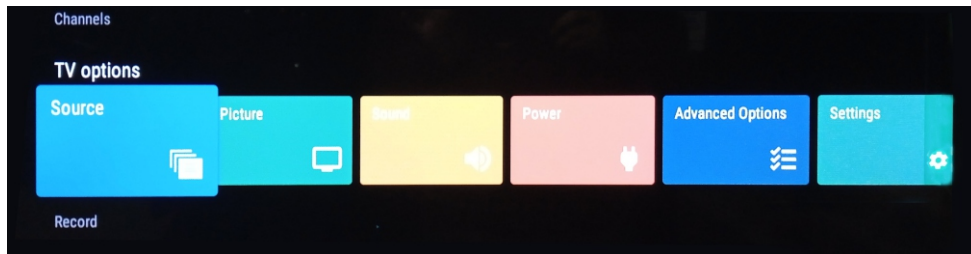

USB function (Media Player)

- You can enjoy photos/ music/ movies stored on a USB device on the TV screen.
- Select device on the media player main menu.
- Select folder from the menu that is displayed, browse the files and select the desired files to playback. While playing the file, press OK button to check the file information and other functions. You can press menu button to set up play mode and other settings. The media control buttons can be found on the bottom of remote.

Google Assistant

- Quickly find and play your favourite shows, get answers and control your home. Your Assistant is now ready to help.
- Press the Google assistant button on your remote to get started.
- An introduction will appear on your TV screen, follow the steps to get started.
- While giving a command or asking a question, please bring the top of the remote control close to your mouth for better reception.

 
Note: The remote has a Bluetooth function. Please pair the remote to the TV if you skip it on initial setup. Google sign-in is required for the service.

Chromecast Built-in

Chromecast built-in delivers multi-screen TV and audio experiences with speakers. Casting is as simple as pressing a button from your favourite app. Watch your favourites on the TV while switching to another app. Listen to your top tunes while taking a phone call or sending a text, all without interrupting what's playing on the speakers. With Chromecast built-in, your phone is your personalized remote control that you can use to browse, play, pause, and even make playlists.

How To Cast

To set up your Chromecast built-in, visit chromecast.com/built-in/setup

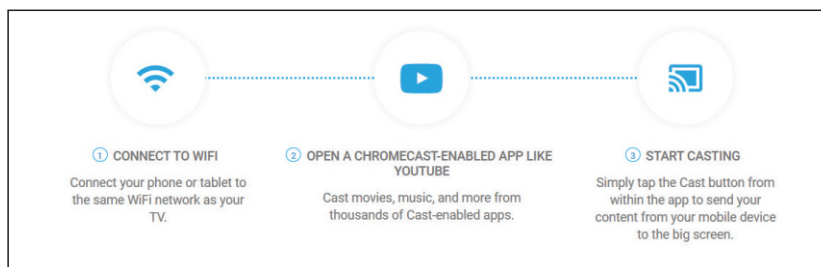

Screen Cast

To cast your TV mobile phone to your TV first you have to connect both your mobile phone & TV at some network, now go to your phone setting > connected device > cast then select your TV name. You can also change TV name through setting > device preference > about > device name > change.

Accessing Smart TV Homepage

- Press home button on the remote control to display the homepage.
- To quit homepage, press input source button to access TV and other input mode. The homepage allows you to enjoy Internet Applications (apps) and specially adapted Internet websites, and perform system settings for your TV. You can control all that with the TV remote control.
- Press ▲/▼/◀/▶ and OK to enter the desired apps, functions or settings.
- To change the Favorites apps order, select an app, press OK button and hold, a menu will appear and you can press ◀/▶ to change.
- Press ⬅ button to return to the homepage.

Indicators and Icons on the top of the Home screen

Google Assistant: You can search movies, TV, and more by speaking.

Google Search: You can search movies, TV, and more by typing.

Home: You can see all content of home page like favourite apps & your selected channels of various apps installed.

Discover: You can see & choose services of various apps installed.

 
Apps: You can see all installed apps & installed game .

Inputs Source: Select the Input source depending on the device you have connected to your TV.

Network & Internet: You can set up the Network & Internet.

Settings: Settings let you configure TV, the set app options, add accounts, and change other preferences.

Time: You can always view the current time at the top right corner of the Home screen.

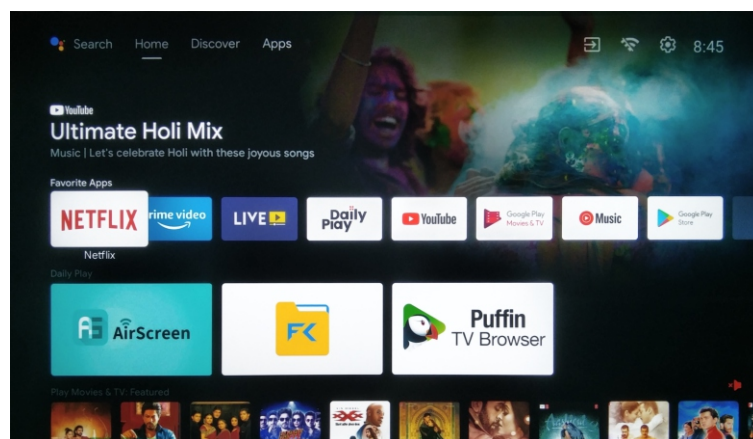

Names of sections that appear on the Home screen

The Home screen displays the following section names:

Apps

Trending

Top Selling Movies

Featured

Note: Name of sections will change according to the Google's software.

 
Settings

You can press the settings button on home screen to access the **Settings menu**. Also, The Menu consists of the following settings:

- **Network & Internet**
- **Channel**
- **Accounts & Sign In**
- **Apps**
- **Device Preferences**
- **Remotes & accessories**

In each menu, you can:

- Press the [UP/Down] buttons to select an item.
- Press the [OK] button to enter the sub-menu.
- Press the ← button to return to the previous menu.

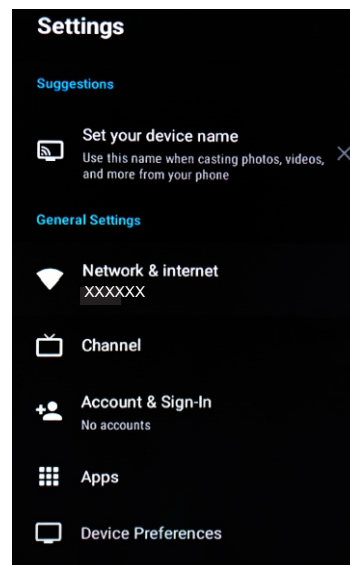

Network & Internet

- **Wi-Fi:** Turn on the Wi-Fi to access the Internet via a wireless network connection. Select an available network, press [OK] to confirm. A screen will appear prompting you to enter the password if necessary.
- **See all/See fewer:** Press [OK] to view all available network or fewer.
- **Add new network:** You can add a new wireless network.
- **Scanning always available:** Check to scan for networks even when Wi-Fi is turned off.
- **WOW:** Wake on wireless network.
- **WOL:** Wake on LAN.
- **Connected / Not connected:** Show whether the Ethernet is connected.
- **Proxy settings:** You can set the proxy server.
Note: HTTP proxy is used by the browser but may not be used by other apps.
- **IP settings:** Configure the IP settings for your network connection.



Channel

- **Channel:** Set up your channels. Get started by setting up the channel sources already installed.
- **Channel Installation Mode:** Choose channel installation mode for Antenna or Cable.
- **Auto Channel Update:** Automatically update channels
- **Parental Controls:** The Parental Controls setting allows you to block content that is not appropriate for children to watch.
- **Audio Channel:** You can choose the audio language in DTV mode.
- **Open Source Licenses:** Click to read the licenses details.

Accounts & Sign In

Make the most of your TV. Choose account type and sign in to get new apps, movie recommendations and more.

Apps

You can view details about an app or other item listed. The information and controls available vary among different types of apps.

Device Preferences

See other chapters for more information about these settings.

About:

System update: We will provide software updates to continuously enhance your TV and fix any issues that may impact your user experience; therefore, we recommend that you keep your TV connected to the Internet to automatically receive updates when they are available.

 
Device name: Change the name of your TV, also you can choose "Don't change". The name will be shown to devices that are available for sharing data.

Factory Reset: It reset the device.

Status: View system messages, including IP address, MAC address, Bluetooth address, Serial number, etc.

Legal information: Click to read the legal information.

Model version / Software version / Android security patch level / Kernel version / Build: View related menu information.

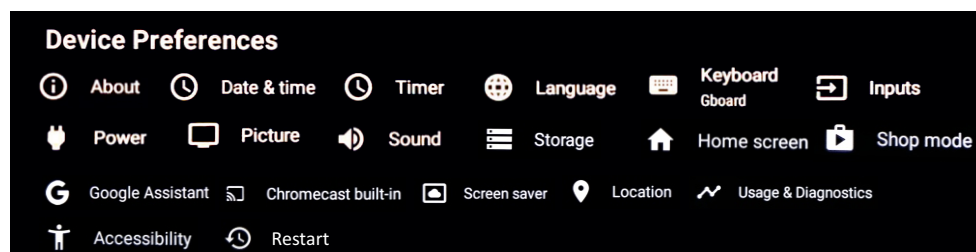

Date & Time

Automatic date & time: Use the time provided by the network. You can also set the current time manually by turning it Off.

Set date: Set the date.

Set time: Set the time.

Set time zone: Select your time zone.

Use 24-hour format: Set the time to display in a 12 or 24-hour format.

Timer

Power On Time Type: Set the type Off, On or Once.

Auto Power On Time: Set the clock for the time you want the TV to turn on automatically.

Power Off Time Type: Set the type Off, On or Once.

Auto Power Off Time: Set the clock for the time you want the TV to turn off automatically.

Language

Adjust the default language settings for the TV.

Keyboard

Adjust the default settings for the keyboard.

Inputs

You can see the status of the devices that are connected with the TV: Connected Input, Standby Inputs and not connected Input etc.

Consumer Electronic Control (CEC)

HDMI control: Allow the TV to control HDMI devices.

Device auto power off: Power off HDMI devices with the TV.

TV auto power on: Power on the TV with HDMI device.

Note:

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The HDMI CEC feature of the connected device must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC Control features do not work.
- Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.

CEC Device List: You will see the CEC device list of the TV accesses the CEC device.



Power

Sleep Timer: Set the sleep timer to automatically turn the TV off within a specified time.

Picture Off: When you select this option, the screen will not display the picture. You can only listen to the audio. Press any button except the power button, Volume [+/-] buttons to restore operation.

Switch Off Timer: Set the timer to automatically turn the TV off within a specified time. You could set fixed time that counts from TV power on to make TV power off.

No Signal Auto Power Off: You can set how long after No Signal, the TV will automatically shut down.

Auto Sleep: You can set how long TV is ON.

Picture

Picture Mode: if you would like to configure the settings for your picture, then there are seven types of picture modes (USER, STANDARD, VIVID, SPORT, MOVIE, GAME, E-SAVING) available.

Backlight: Adjust Local Dimming, Backlight Level, Automatic Light Sensor and Minimum Backlight to change the overall brightness of the screen.

Brightness: Adjust the Brightness level to generate lighter or darker images.

Contrast: Adjust the Contrast level to increase or decrease how bright images appear.

Saturation: Adjust the saturation of colour settings.

HUE: Adjust the hue of colour settings.

Sharpness: Adjust how sharp or soft edges of images appear.

Gamma: Adjust gamma type.

 
 
Colour Temperature: Select a preset colour temperature. Adjust how warm(red) or cool (blue) the white areas of an image appears.

Advanced Video: Advanced settings for video.

Colour Tuner: Adjust the colour tuner settings.

White Balance Correction: Adjust the intensity of red, green and blue lights to view the true colours of all images in the picture.

Reset to Default: Reset current picture settings to factory mode.

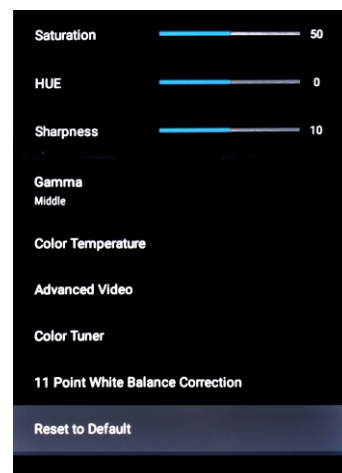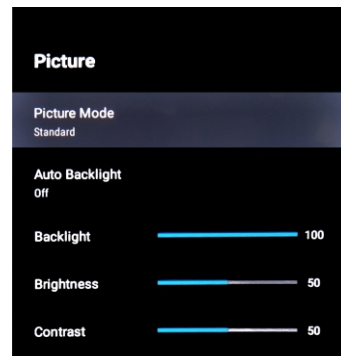

Sound

System Sound: You can ON/OFF system sound which normally comes while using remote.

Sound Style: There are eight style (USER, STANDARD, VIVID, SPORTS, MOVIE, MUSIC, NEWS, AUTO) available to give you the suitable sound experience for various situation.

Balance: Adjust the left and right speaker strength to optimize audio for a specific location.

Bass: Allow you to adjust bass.

Treble: Allow you to adjust treble.

Sound Surround: It improves the directionality of sound effects & helps you feel more of your entertainment.

Equalizer Detail: Boost the volume at different frequencies.

Digital Output: Select the digital audio output format that best suits the audio device type. Choose PCM if you have an amplifier that does not support Dolby Digital technology.

Digital Output Delay: Adjust SPDIF Delay.

Auto Volume Control: This feature keeps the volume of your TV constant by automatically lowering the sound output when the sound modulation signal is high or vise versa.

Downmix Mode: Enable downmix, Convert multi-channel audio into two-channel audio.

Dolby Audio Processing: Set Dolby sound On/Off.

Reset to Default: Reset current audio settings to factory mode.

Storage

See the information of the Internal shared storage.

Home Screen

Customize channels: Add or delete the app icon from Home screen.

Enable video previews: Enables or disables the video previews.

Enable audio previews: Enables or disables the audio previews.

Discover: You can customize services, content preference, view permission & sign out to your chosen service.

Reorder Apps / Reorder games: Rearrange the Apps screen.

 
Android TV Home / Android TV Core Services: See the information of open source software.

Shop Mode

Turn on or off Retail Mode.

Google Assistant

You can view permissions about accounts and limit the search results.

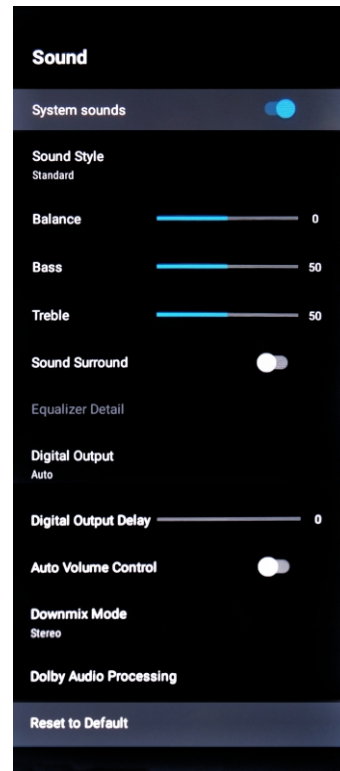

Chromecast Built-in

You can view Open source licenses and Version number.

Screen Saver

Enable and set Screen saver when the TV is idle.

Location

Your TV can use different modes to access location information. Each mode uses different sources to estimate the TV's location.

Usage & Diagnostics

Help improve Android performance by automatically sending diagnostics information.

Accessibility

Audio description: Choose to leave the Audio Description feature On or Off.

Visually impaired: You can set visually impaired option to On or Off. The function can be used to meet the needs of visually impaired people.

Hearing impaired: You can set the hearing impaired option to On or Off. The function can be used to meet the needs of hearing impaired people.

Captions: Display and set the closed caption.

High contrast text: Improves contrast for the visually impaired. The function can be used to meet the needs of visually impaired people.

Reset

 
Reset your TV.

Remotes & Accessories


Here you can pair remote & other accessories & also check which device is paired with your TV.

How To Pair Remote?

Go to ⚙ Setting > 📶 Remote & Accessories then check ✨ TV BLE Remote is showing or not. If it is showing this means a remote is all ready paired. If you want you can unpair it by selecting it.

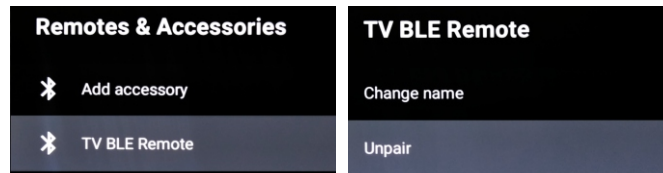

 If not then go to ✨ Add accessory option the press ⏠ "Home" key & "Left arrow" key together until a green light on top is not start blinking. When green light start blinking put remote close to TV and wait for ✨ TV BLE Remote show on TV. When it shows select it now your remote is paired with TV.

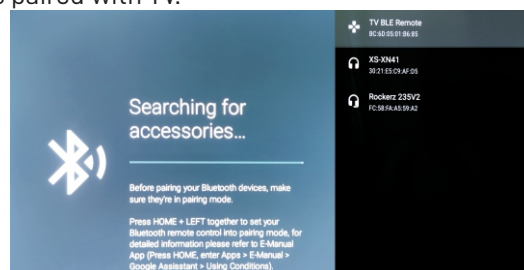

Specifications

Specifications			
Model	32	40	43
Screen Size	80	102	109
Aspect Ratio	16:9	16:9	16:9
Native Resolution	1366x768	1920x1080	1920x1080
Terminals	Lan x1 AV IN x1 HDMI x2 Digital Audio x1 RF/ANT x1 USB x2	Lan x1 AV IN x1 HDMI x2 Digital Audio x1 RF/ANT x1 USB x2	Lan x1 AV IN x1 HDMI x2 Digital Audio x1 RF/ANT x1 USB x2
Speaker Output	10 W x 2	10 W x 2	10 W x 2
Power Consumption	60 W	74 W	75 W
Power Supply	100-240v~50/60Hz		
Video Systems	PAL, SECAM, NTSC, Auto		





www.compaq.com.in



+91 78760 88088



sales@compaq.tv



[tv_compaq](https://twitter.com/tv_compaq)



[compaqtv](https://www.youtube.com/compaqtv)



[compaqtv](https://www.facebook.com/compaqtv)



[compaqtv](https://www.instagram.com/compaqtv)

