


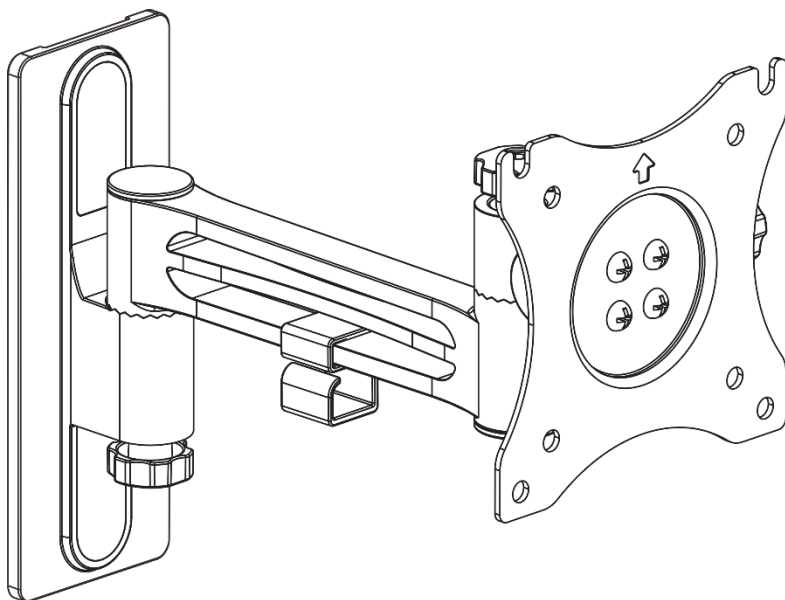

KOGAN LOCKABLE FULL MOTION CARAVAN TV MOUNT

(SUITABLE FOR 13" – 32" TVS)

KAWLMCRVLA

SAFETY & WARNINGS

Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, contact your local distributor for assistance.

CAUTION: Use with products heavier than the rated weights indicated may result in instability causing possible injury.


- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- Never exceed the maximum load capacity of 15kg or it may result in product failure or personal injury.

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.


MAINTENANCE: Check that the product is secure and safe to use at regular intervals (at least every three months).




75x75
100x100

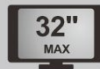

COMPONENTS

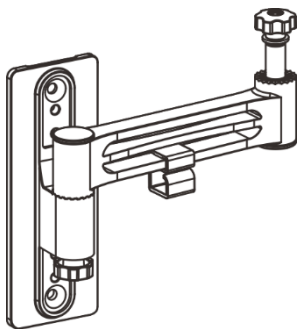

A Mount
(x1)

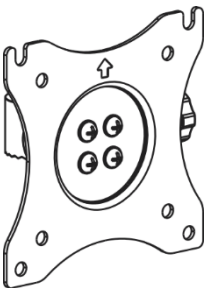

B Wall plate
(x1)



 
C Screw covers
(x2)




D Spirit level
(x1)



E Allen Key
(x1)



M-A (x4)
M4x14

 

M-B (x4)
M5x14



M-C (x4)
D5



W-A (x2)



W-B (x2)


Tools required for installation (not supplied)

Phillips head screwdriver	Stud finder	Pencil	Drill

INSTALLING MOUNT TO WALL

Step 1




Unscrew the adjustment knobs on the mount (A).

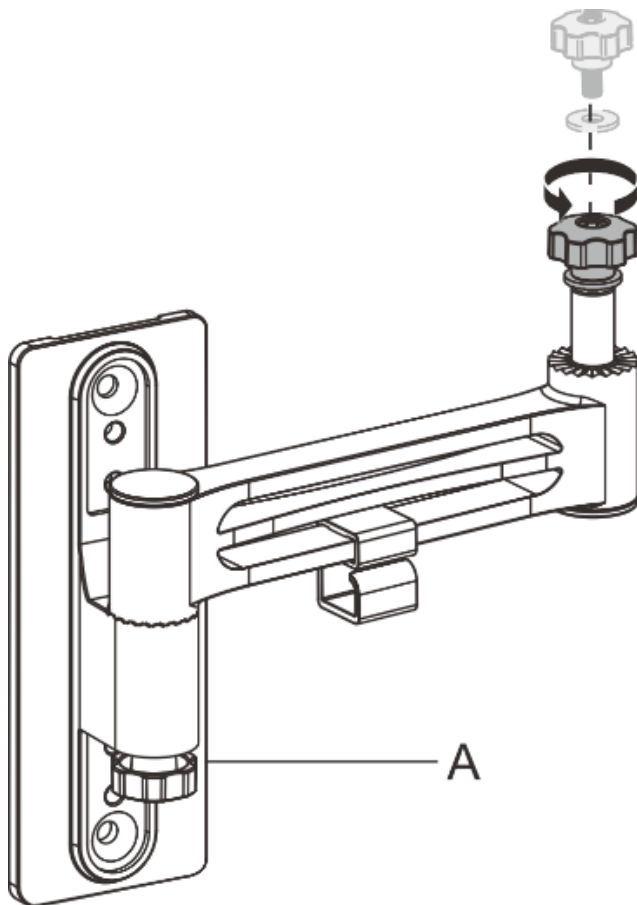

Step 2




Drywall / plaster: Using a pencil and spirit level, mark the desired position for the mount on your wall, using the wall mount to serve as a stencil for the hole positions. Use a stud finder first to check positions of wall studs and ensure the position is free from electrical wiring. Using a drill, create the pilot holes. For drywall, use a $\varnothing 4.5\text{mm}$ or $3/16''$ drill bit, drilling 55mm deep. Position the wall mount in line with the pilot holes and secure to the wall using screws (W-A). Do not use the wall anchors.

Place screw covers (C) after securing.

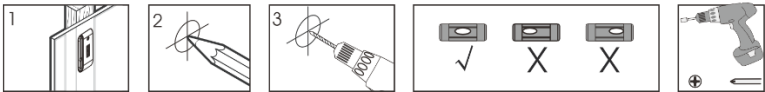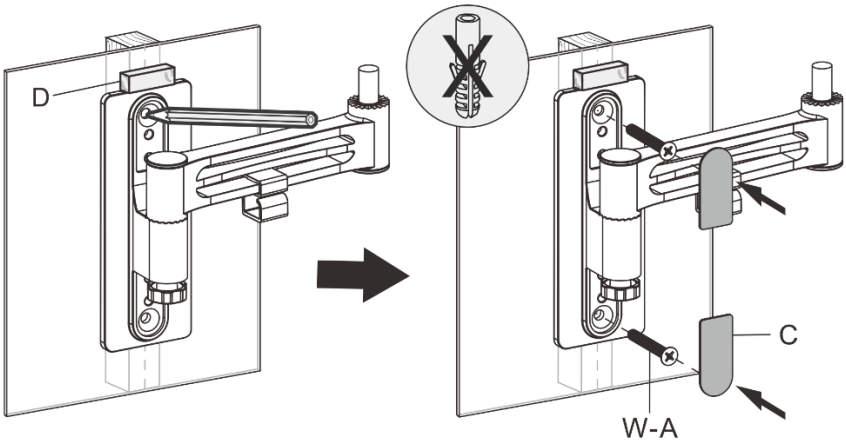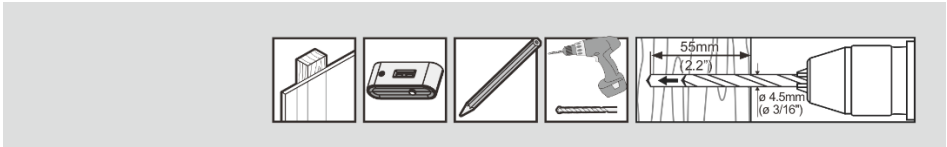


Masonry / concrete:

Using a pencil and spirit level, mark the desired position for the mount on your wall, using the wall mount to serve as a stencil for the hole positions. Using a drill, create the pilot holes. Use a $\varnothing 10\text{mm}$ or $3/8''$ drill bit, drilling 55mm deep. Insert wall anchors (W-B) into the drilled holes. Position the wall mount in line with the holes and secure to the wall using screws (W-A). Place screw covers (C) after securing.

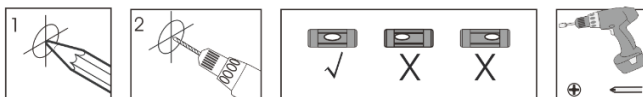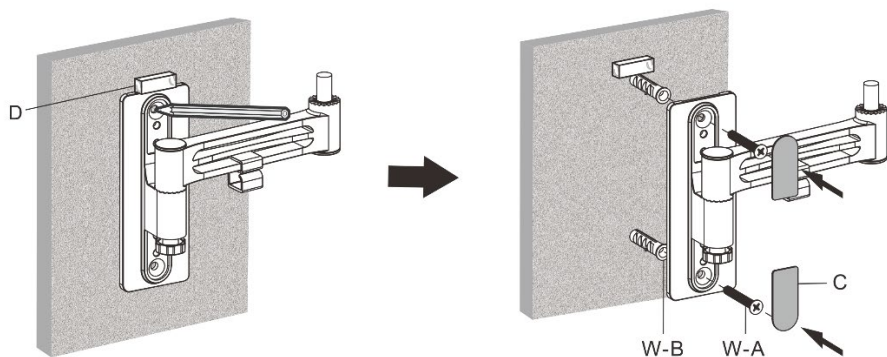
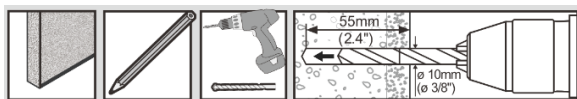


INSTALLING BRACKET TO TV


Prepare the bracket (B) by unscrewing the adjustment knob and positioning as shown below.

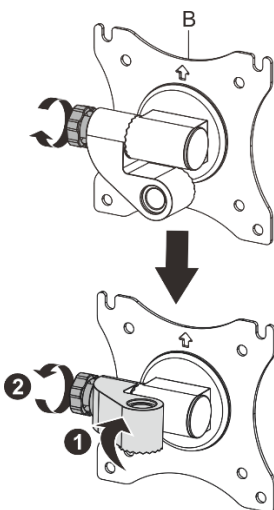

Align the bracket with your TV's VESA holes and secure using supplied screws (M-A or M-B, depending on required length) and washers (M-C).

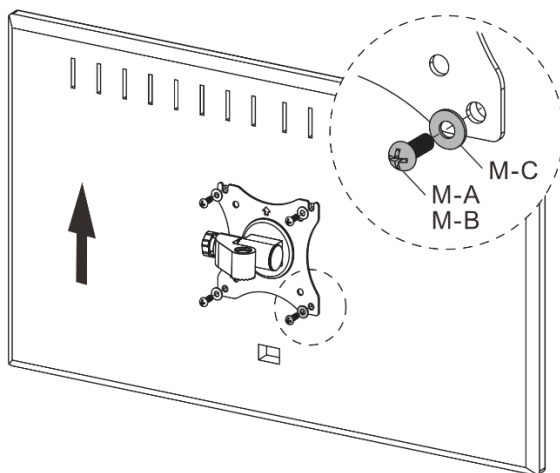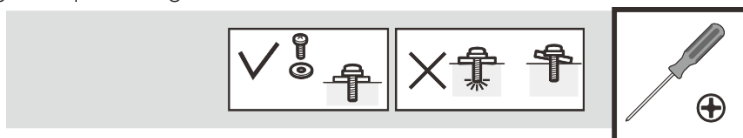



Loosen the mount arm via the adjustment knob and position as shown below.

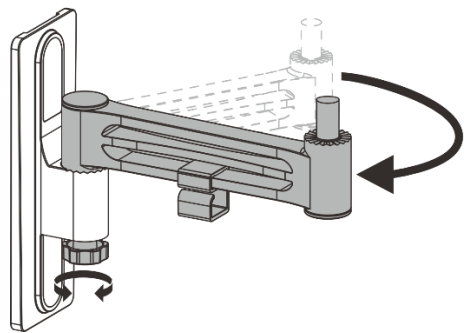

Lift and place the TV with bracket installed onto the wall mount arm and secure with adjustment knobs (1). Two people should carry the TV to prevent damage.

Once in place, use the cable clips for cable management (2), then when all cables are in place and mount position is ready to be “locked in”, use the Allen key (E) to tighten adjustment knobs (3).

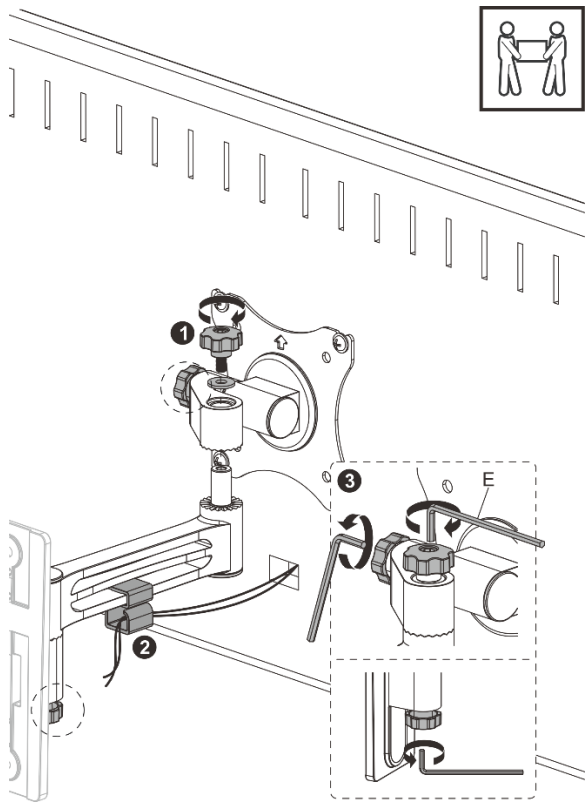

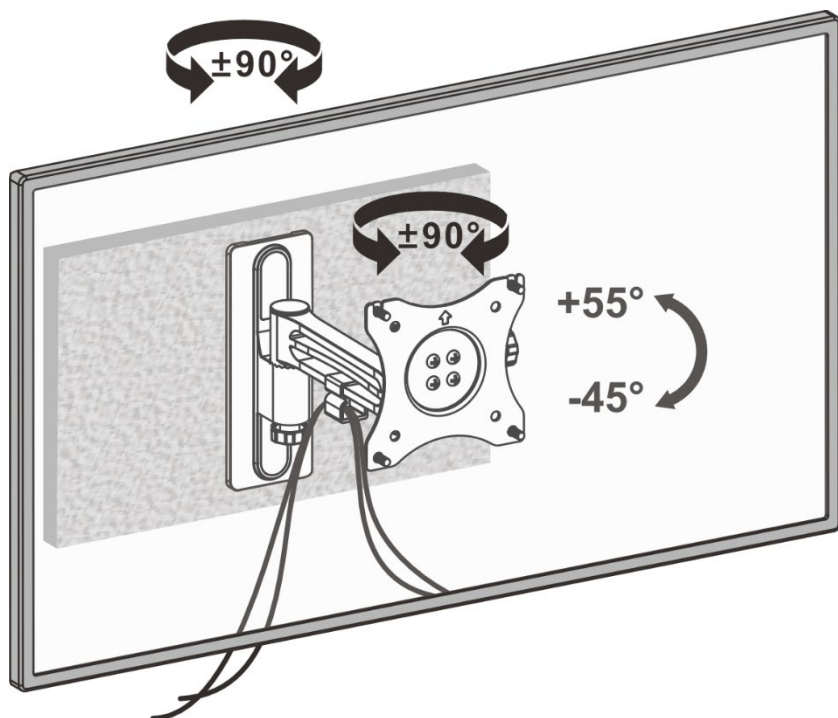

See above for angle limits

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com