

NAUTICA

ELECTRIC TOOTHBRUSH

TB80



NTTB01

Thank you for purchasing an original Nautica Electric Toothbrush - TB80

 
You are getting a high-quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

This guide is ENGLISH only. For other languages and more detailed info on care, use and warranty, please visit technofashion.com




WHAT'S IN THE BOX

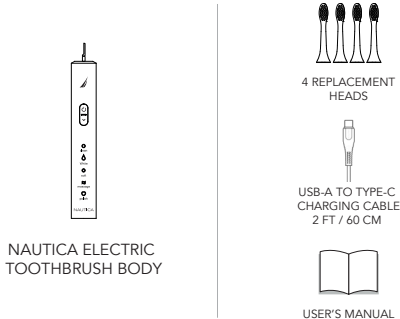

3



 
HOW TO USE ?

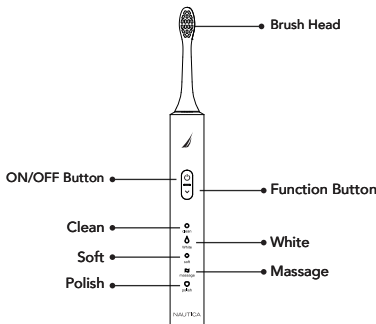

4

- Press the ON/OFF button to start the brush, press it again to stop the operation. The product has five operating modes: clean, white, soft, massage, polish. You can press the corresponding function button to select the desired operating mode.
- Before using the Electric Toothbrush, wet the toothbrush head and spray the appropriate toothpaste on it.
- Place the bristles of the toothbrush on the teeth at a 45° angle, in line with the teeth gum line.
- Gently move the bristles to the area you need to clean, applying approximately 150g of pressure (Nautica Electric Toothbrush uses the high-frequency vibration of the bristles to clean the teeth). The force applied to the tooth surface when brushing with the Nautica Electric Toothbrush is much less than standard brushing (approximately 1/8).

 5

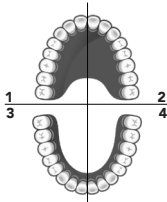

- The brushing method recommended by dentists is as follows: Consider that the oral cavity is divided into 4 zones as shown above (as shown in the picture). Make sure each area is brushed for about 30 seconds by moving the toothbrush slowly during the brushing process. After every 30 seconds, the Nautica Electric toothbrush will suspend the brushing process for 0.5 seconds to ensure each area is properly brushed and remind you to change the area to be brushed.

6

SMART TIMING

The toothbrush will automatically turn OFF after 2 minutes of use

MEMORY FUNCTION

When the toothbrush is turned on, it automatically returns to the action mode before it was last turned off.

FUNCTION KEYS

Press the function button to change the working mode each time. While the toothbrush is running, press the ON/OFF button once to turn it off.

 
REPLACING BRUSH HEAD

Pull out the brush head upward; It is recommended to replace the brush head every three months.

7

TOOTHBRUSH CHARGING

Remove the waterproof plug at the bottom of the toothbrush. Plug the Type-C end of the charging cable into the Type-C port of the device. Plug the other end of the charging cable (USB-A) into a computer or an adapter with 5V USB-A input. When the power is full, the mode light will turn ON.

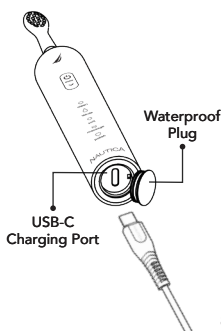

8



TECHNICAL SPECIFICATIONS

Rated Voltage	3.7 V
Rated Power	2 W
Waterproof	IPX7 Certificated
USB-A Output	5V/1A
Charging Time	6 hours
Working Time	24 hours
Charging Port	USB-C
Product Dimensions	9.6*1*1 in / 244*25*25 mm
Product Weight	4.2 oz / 118.9 g

9



WARNING

- If you have the following diagnoses, always consult a dentist before using the device.
 - Those who have had or are undergoing oral/periodontal surgery within 2 months;
 - Other oral symptoms (including unstable dentures or persistent gingival bleeding);
 - People with sensitive teeth and sensitive oral cavity, etc.
- Teeth may feel irritated or numb when using this product for the first time, which is normal. If the above conditions still persist after two weeks of continuous use, please stop using the product and seek medical attention in time.

10



SAFETY AND MAINTENANCE

Please clean the bristles and brush head after each use and dry them naturally. Do not pull on the bristles, which will cause them to easily deform and fall off.

Clean with water and dry naturally, do not use acidic cleaners or hot water.

Do not put the charging cord in water or liquid or store it where it can fall or be pulled into a tub or sink.

Do not touch the device when it is dropped into water. Just pull the plug.

This device contains non-replaceable batteries. Do not open or disassemble the device. For battery recycling, please dispose of the entire device according to local environmental regulations. Opening the handle will destroy the device and void the warranty.

11

When unplugging, always hold the power plug instead of the cord. Do not touch the power plug with wet hands. This may cause an electric shock.

This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution. To avoid brush head breakage which may generate a small part choking hazard or damage teeth:

Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush if brush head no longer fits properly. Never use without a brush head.

If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.

Replace brush head every 3 months or sooner if brush head becomes worn.

Clean brush head properly after each use. Proper cleaning ensures the safe use and functional life of the toothbrush.

12



WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

13

Within 12 months after the purchase, in case the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair or exchange of goods.

The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

14

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

15



SUPPORT

For any questions, email us at support@technofashion.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found complying with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

16

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 7.87 in / 20 cm

17

NAUTICA

designed, manufactured, distributed by
TECHNOFASHION

© 2021 Technofashion, Inc. All Rights Reserved.
Designed in USA. Made in China.
May be patented. See technofashion.com/patents

