 
 




Shoe Storage

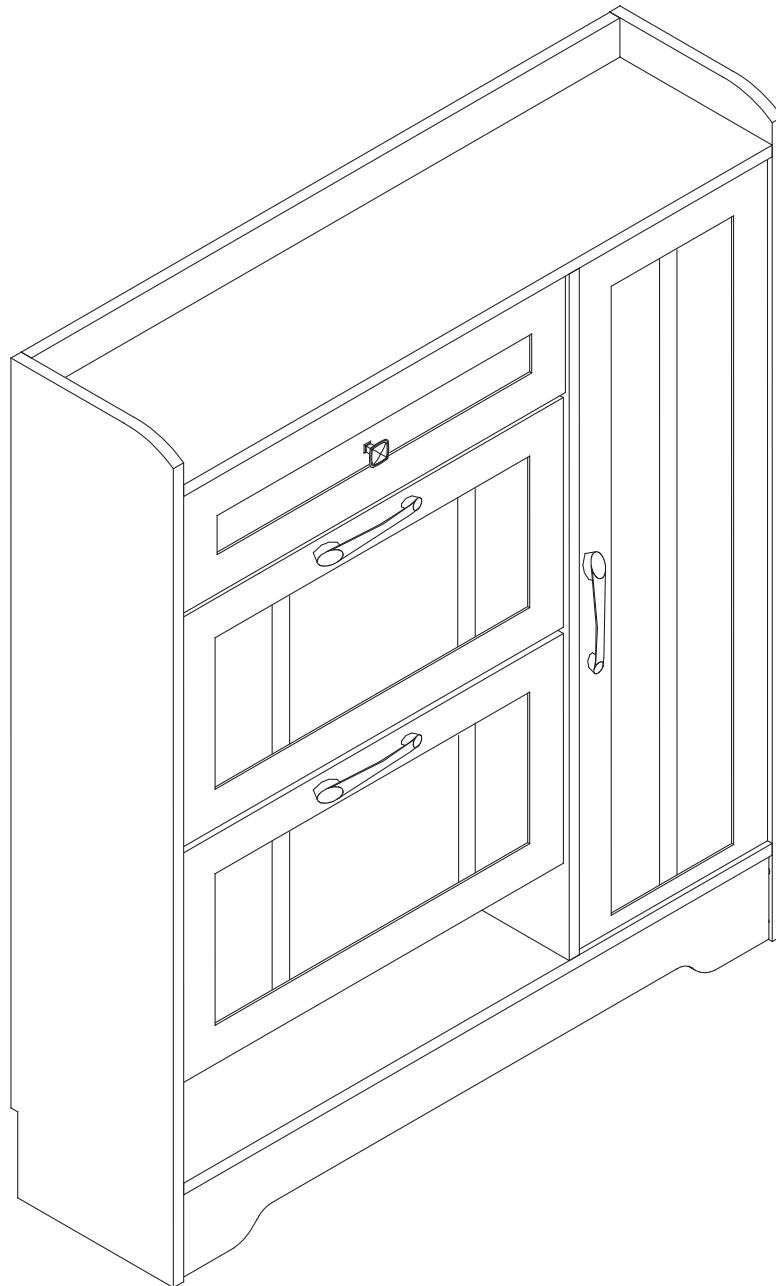

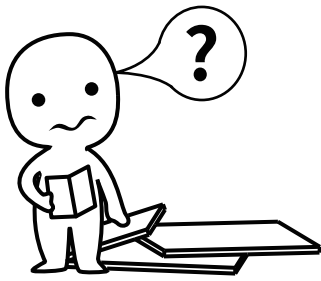


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

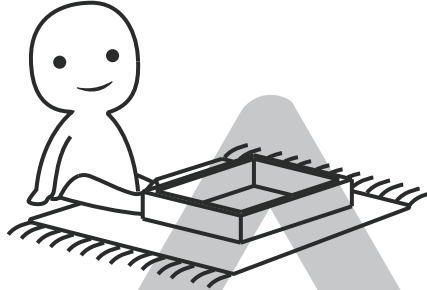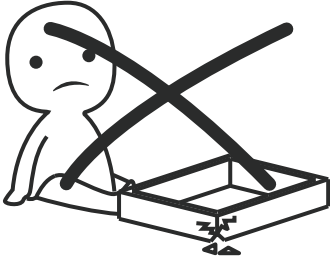



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

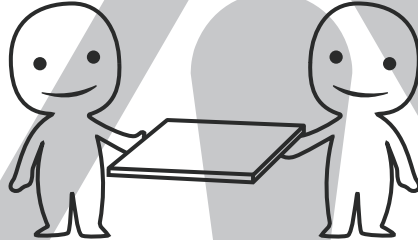

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

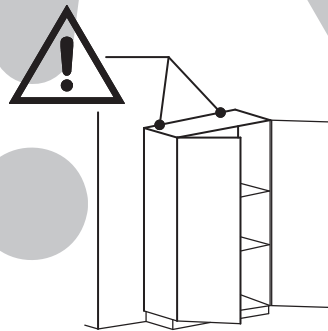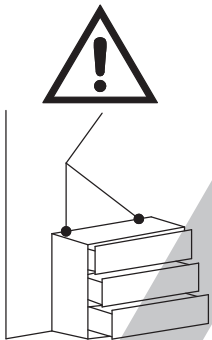

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.
















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

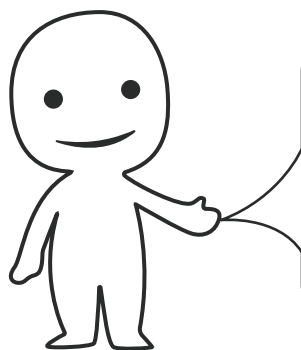


Please prepare the following tools




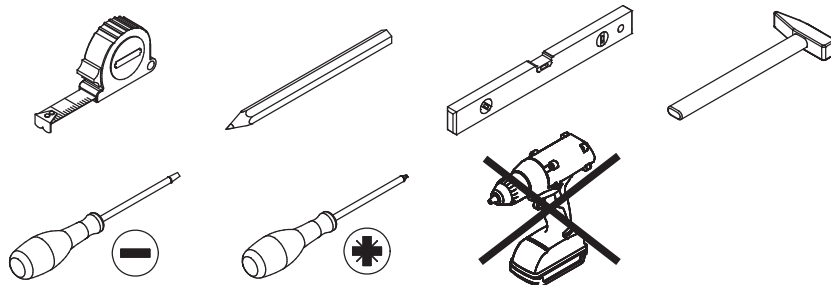 


               When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

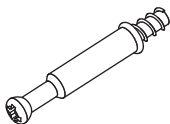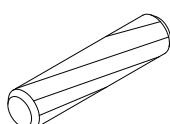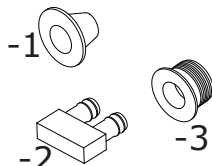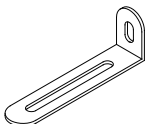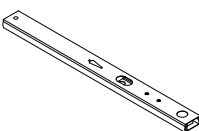
A x 32  Ø 6 x 35 mm	B x 32  Ø 15 x 10mm	C x 26  Ø 6 x 30 mm	D x 3 	E x 4  Ø 3 x 12 mm
F x 7  Ø 4x16 mm	G x 2  Ø 4x10 mm	H x 4  Ø 4x30 mm	I x 2 	J x 28  Ø 4 x 14 mm
K x 4  Ø 4x35 mm	L x 4 	M x 2 	N x 2 	O x 1  Ø 4x12 mm
P x 1 	Q x 1  Ø 4x40 mm	R x 1 	S x 12 	T x 12  Ø 3x16 mm
U x 1 	V x 2 	W x 12  Ø 4x25 mm		

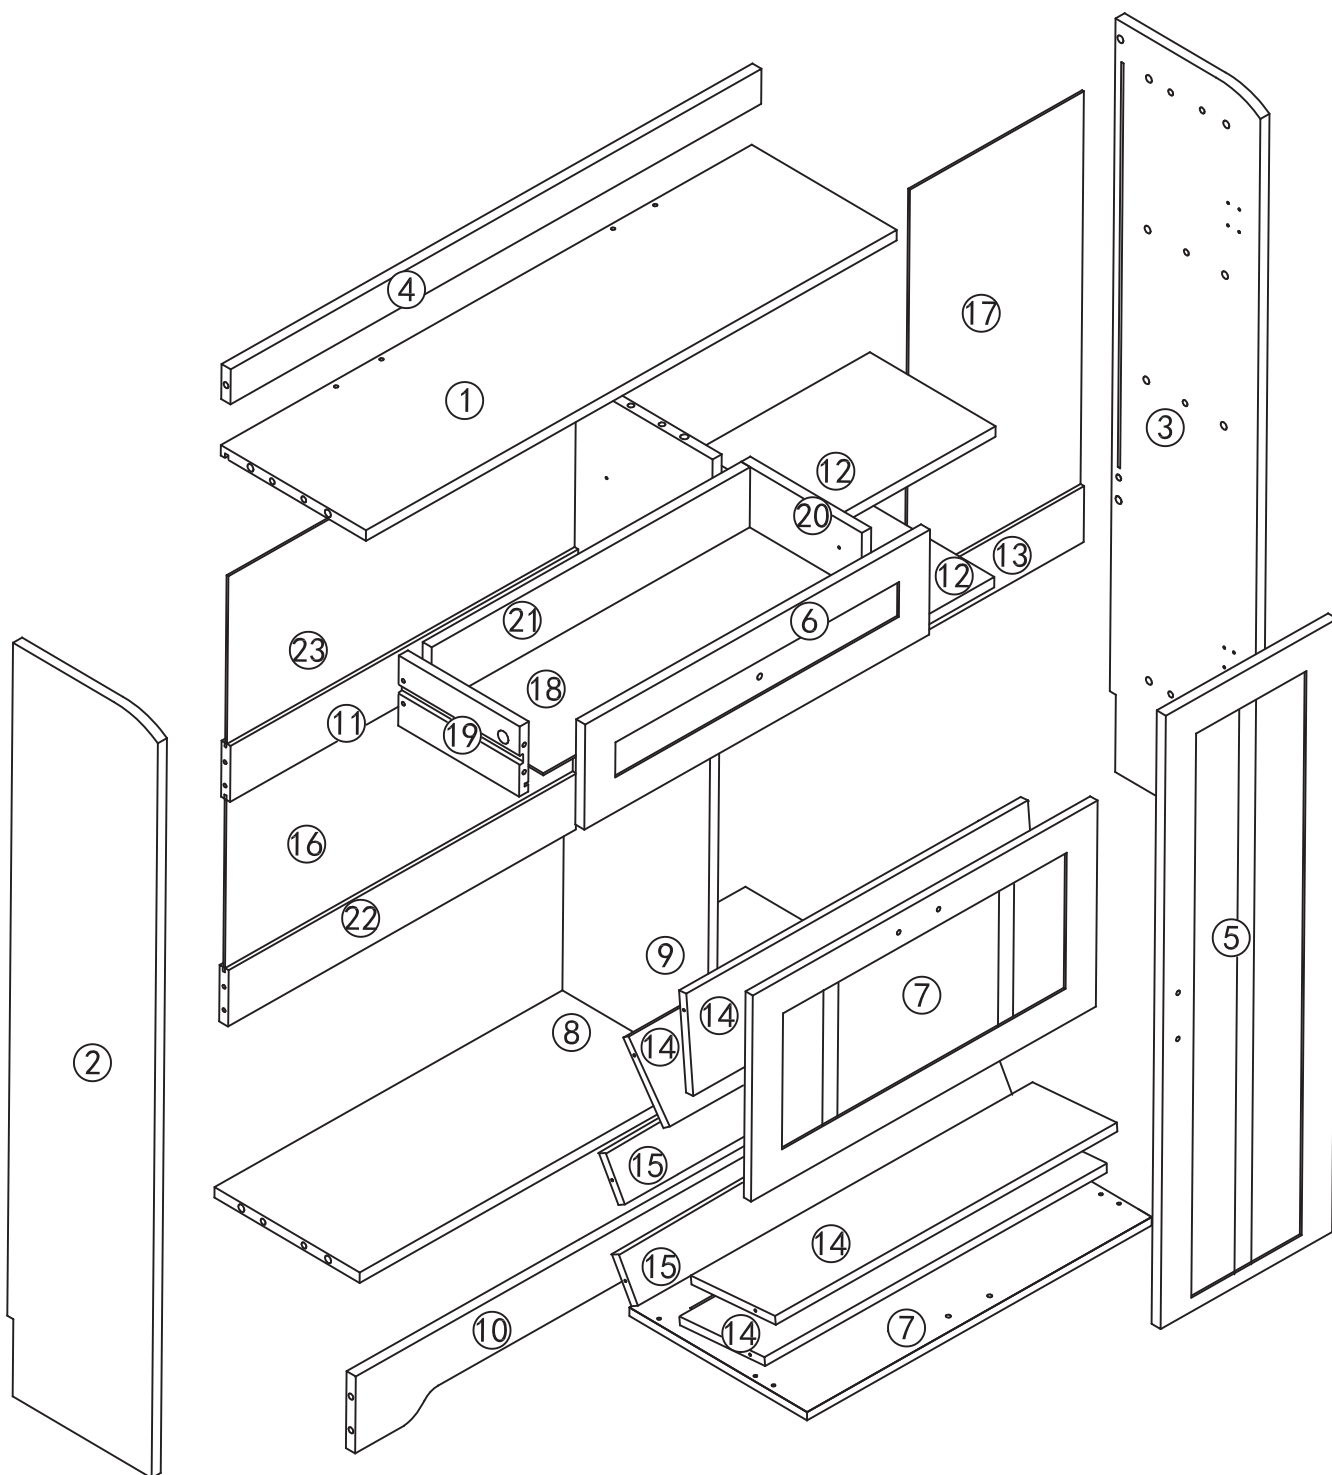 


1

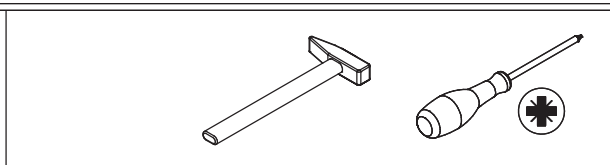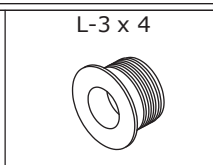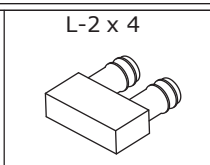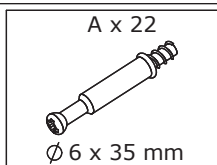    




 
Insert quickfit screw(A) into corresponding holes in plate 2,3 and 9 with a screwdriver as shown.

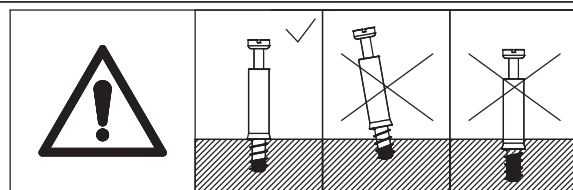

 Knock part(L-2,L-3) into plate 2 and 9 slightly as shown.

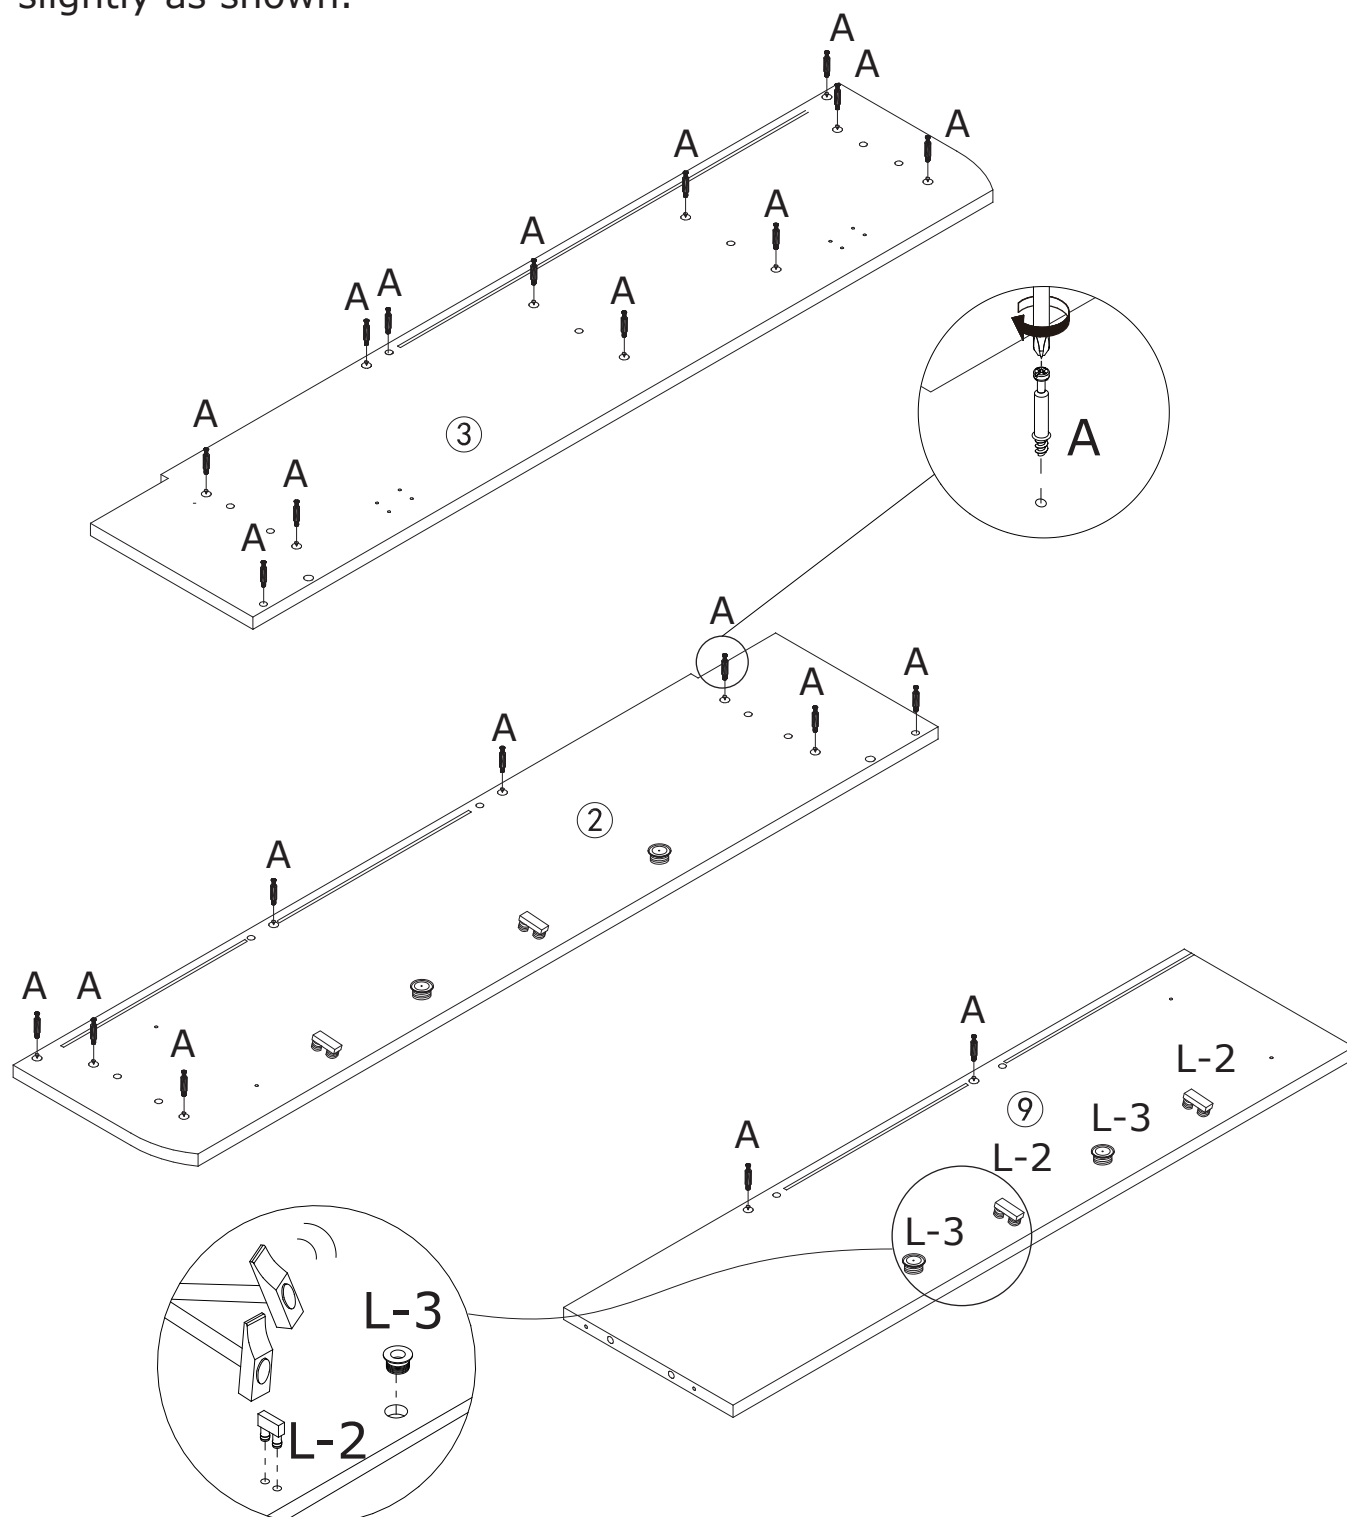



2

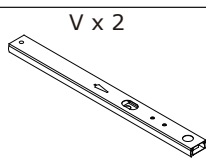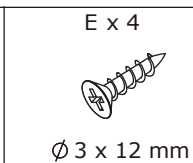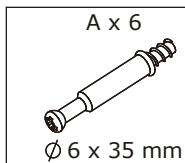    





Fix slide rail(V) to plate 2 and 9 using screw(E) as shown.

Please pay attention to the holes where the accessories are inserted.

  Flip plate 9, insert quickfit screw(A) into corresponding holes as shown.


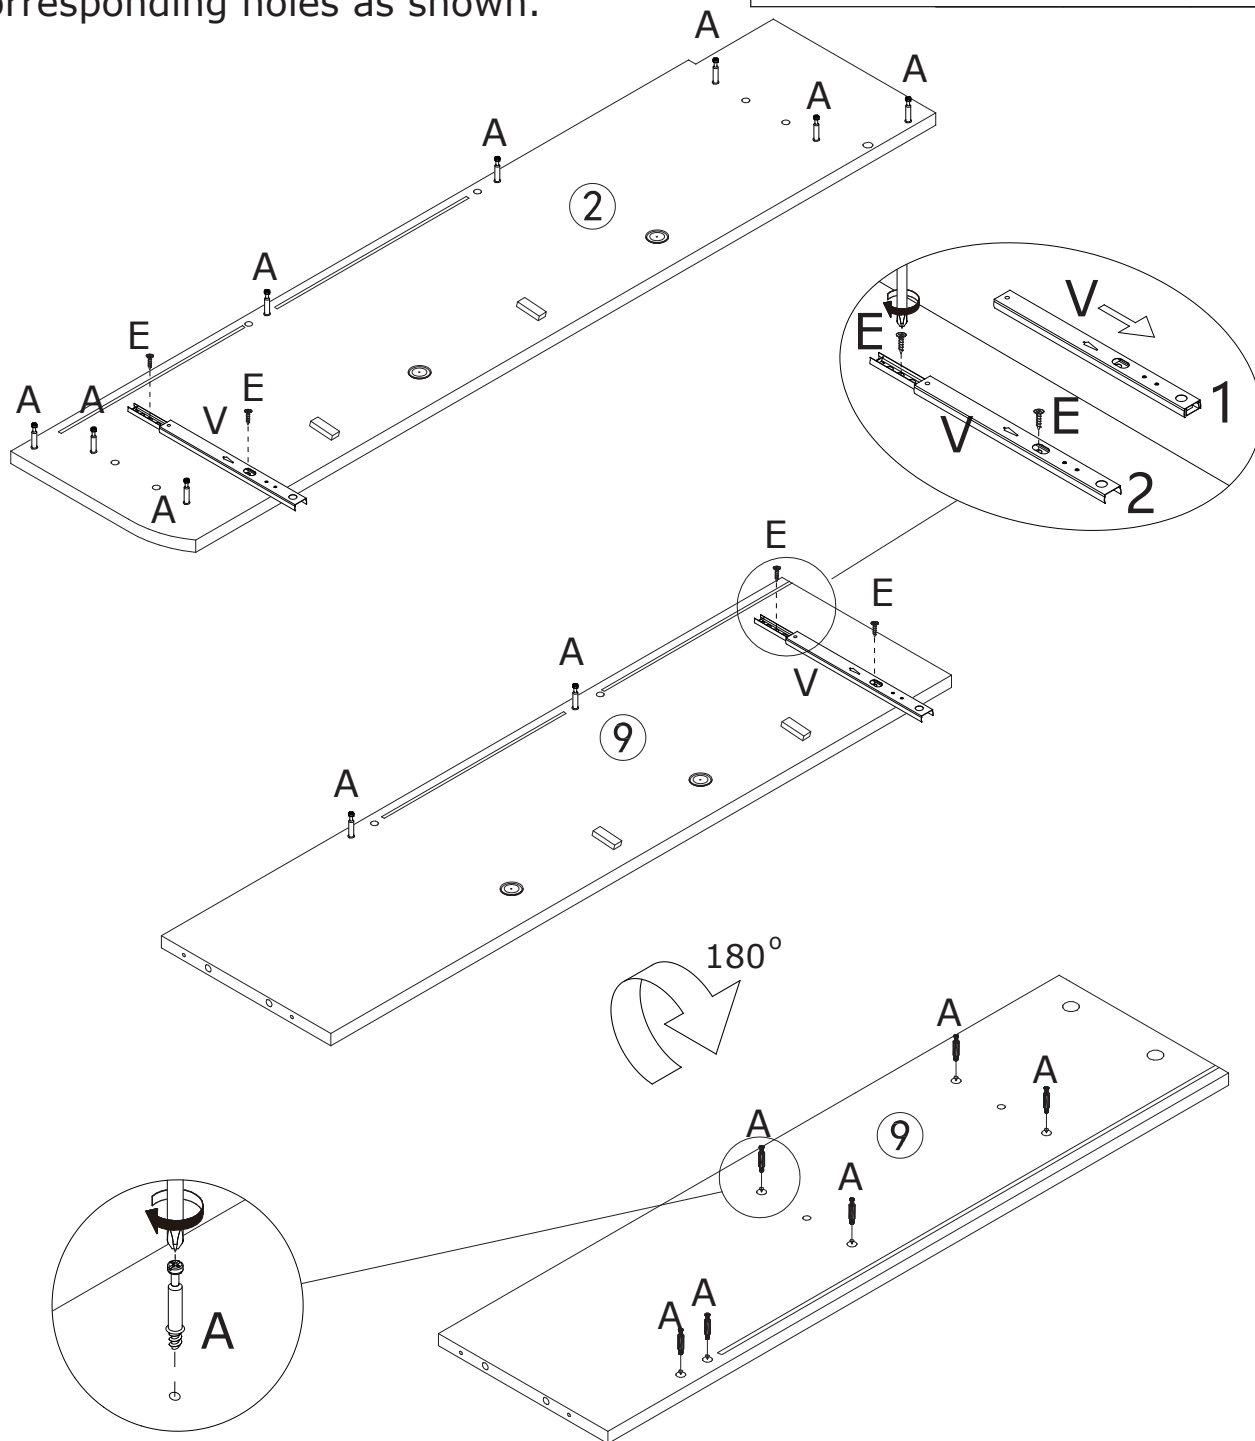
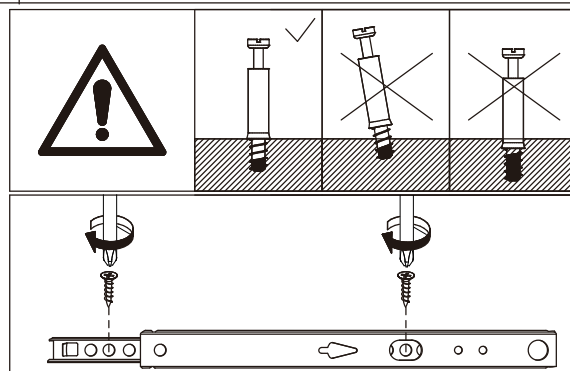


3

    A x 2  Ø 6 x 35 mm	B x 6  Ø 15 x 10 mm	C x 4  Ø 6 x 30 mm	K x 2  Ø 4 x 35 mm	
---	--	---	--	---

Attach plate 12 to plate 9 with wooden dowel(C) at first; attach plate 13 to plate 9, turn cam lock(B) in plate 12,13 clockwise to tighten as shown.

   Connect plate 1 with plate 4 using wooden dowel(C) at first, then fix using screw(K). Insert quickfit screw(A) into corresponding holes in plate 1 as shown.

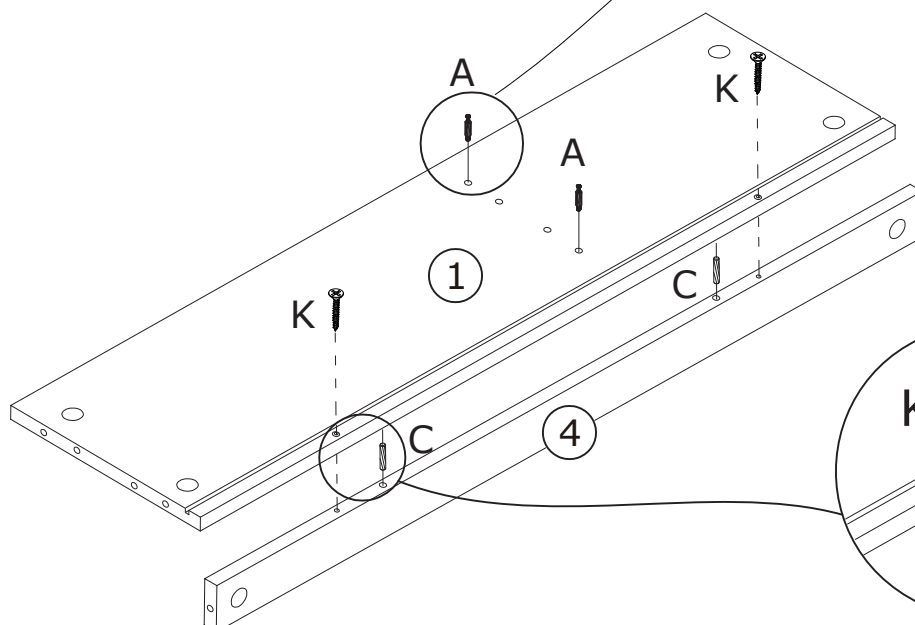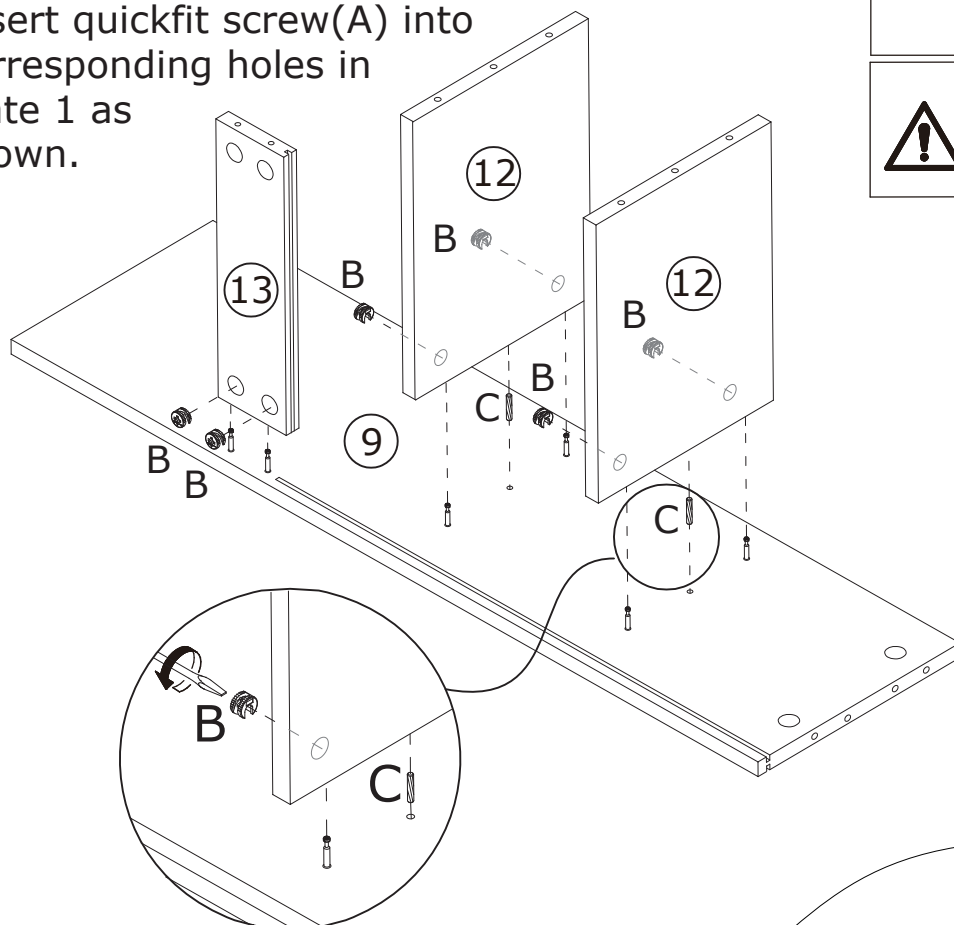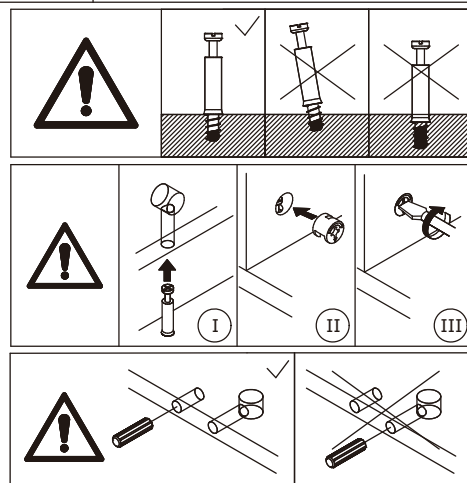

4

B x 2



 
Ø 15 x 10 mm

C x 4




Ø 6 x 30 mm

K x 2





Ø 4 x 35 mm

 

Connect plate 1 with plate 9 using wooden dowel(C) at first, turn cam lock(B) in plate 9 clockwise to tighten as shown.

  Connect plate 8 with plate 9 using wooden dowel(C) at first, then fix using screw(K) as shown.

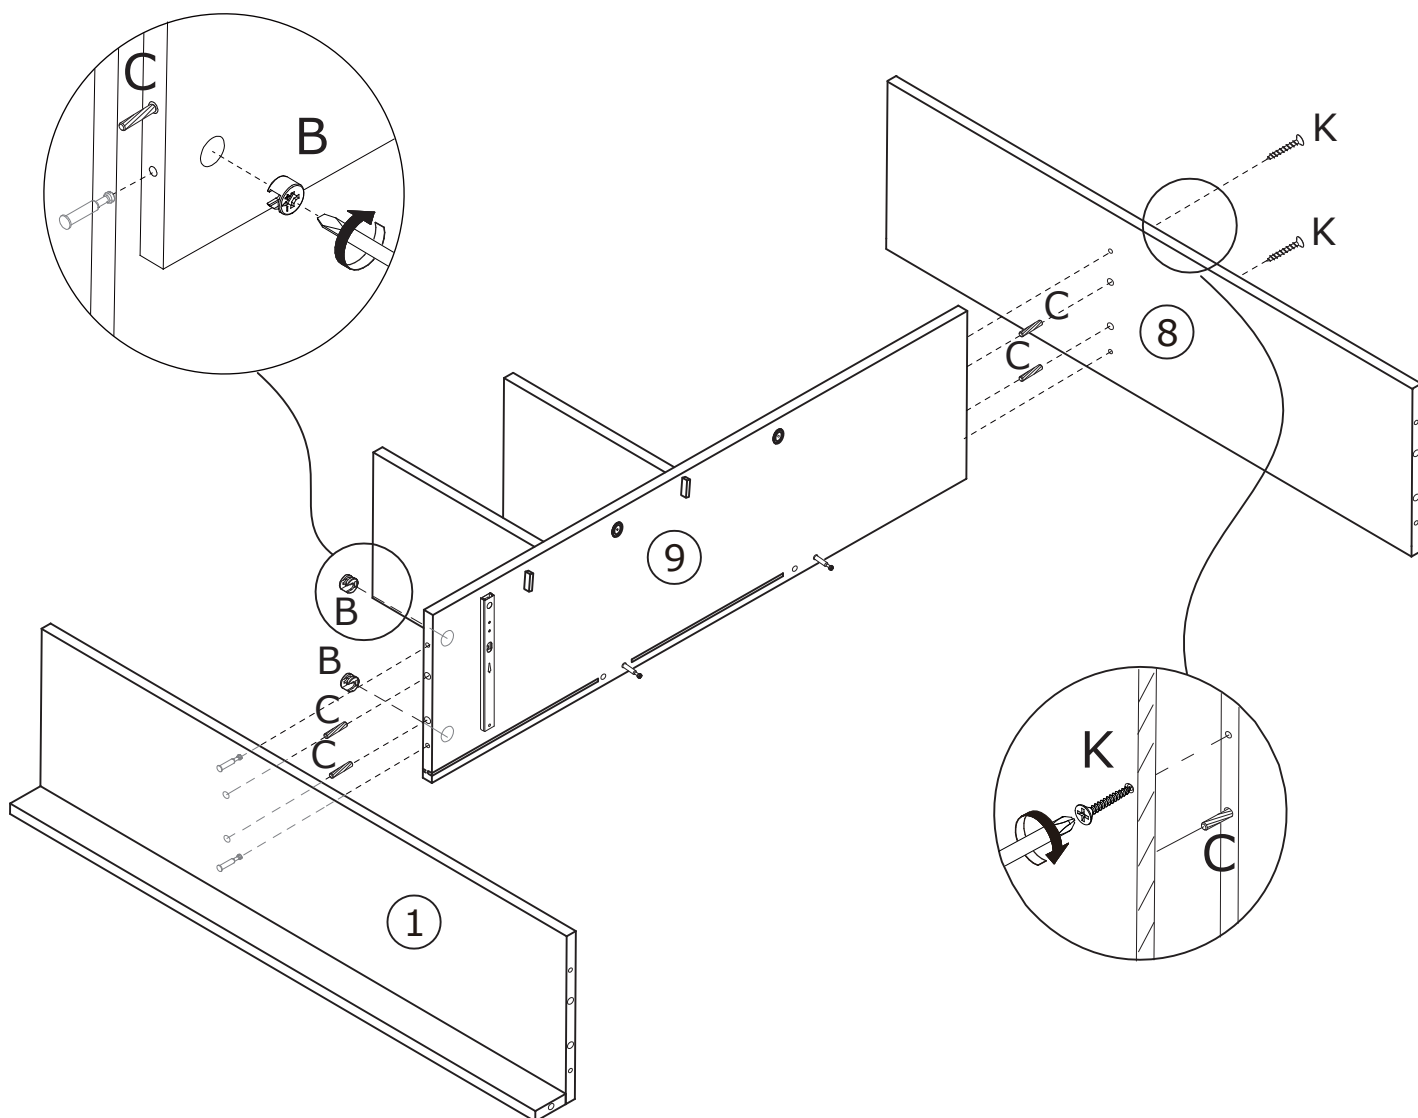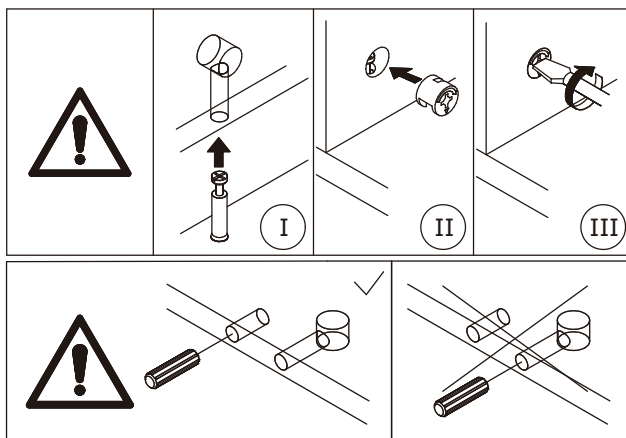

5

B x 12

 


Ø 15x10 mm

C x 7





Ø 6 x 30 mm



Slide plate 17 along the grooves in plate 1 and 13 at first.

Insert wooden dowel(C) into corresponding holes in plate 1,12,8 and 10.

  Attach plate 3 to plate 4,1,12,13,8 and 10, turn cam lock(B) clockwise to tighten as shown.


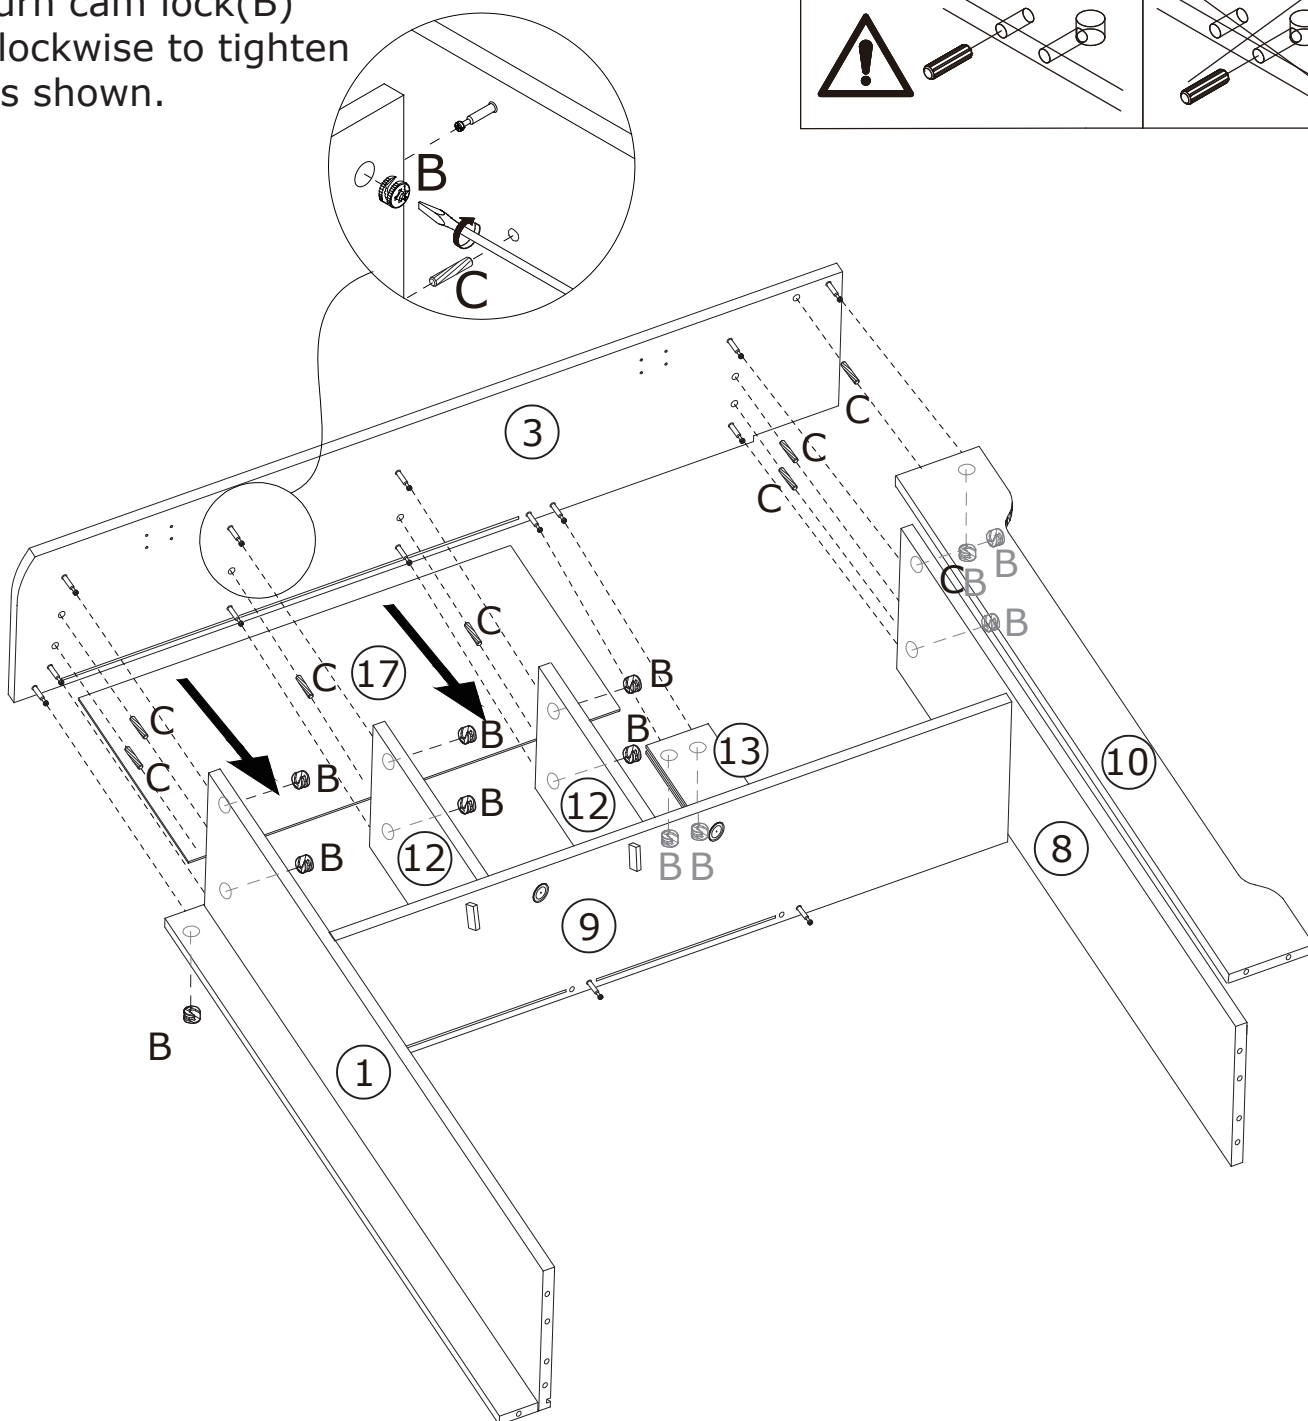
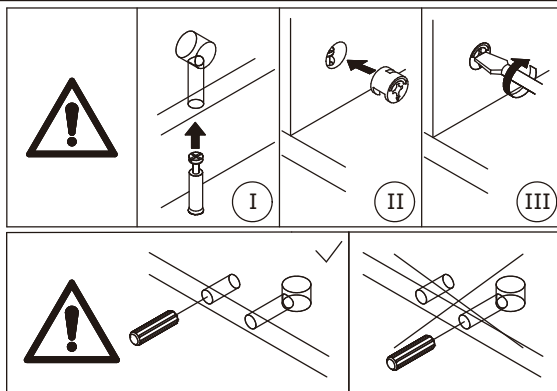


6

B x 2



 $\varnothing 15 \times 10 \text{ mm}$

   C x 2

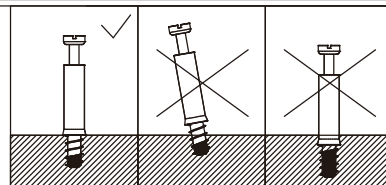
 $\varnothing 6 \times 30 \text{ mm}$


Attach plate 11 and 22 to plate 9 with wooden dowel(C), turn cam lock(B) clockwise to tighten as shown.

 Slide plate 16 and 23 along the grooves as shown.

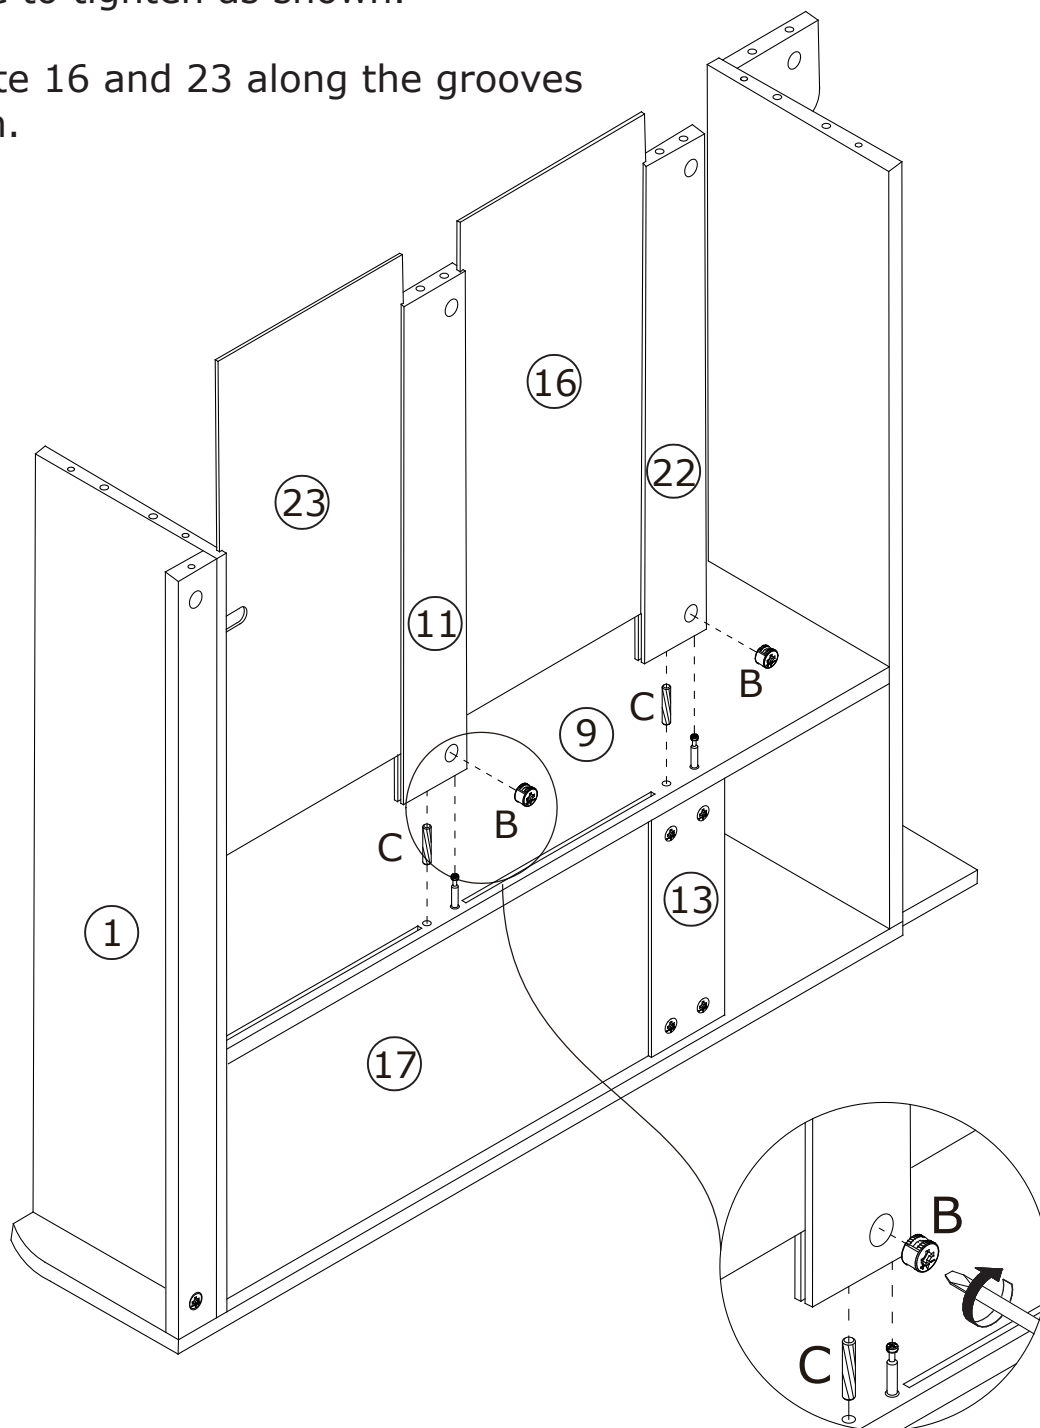


7

B x 8




Ø15 x 10 mm

 C x 7





Ø6 x 30 mm



 


Insert wooden dowel(C) into corresponding holes in plate 1,11,22,8 and 10 at first.

  
Attach plate 2 to plate 4,1,11,22,8 and 10, turn cam lock(B) clockwise to tighten as shown.

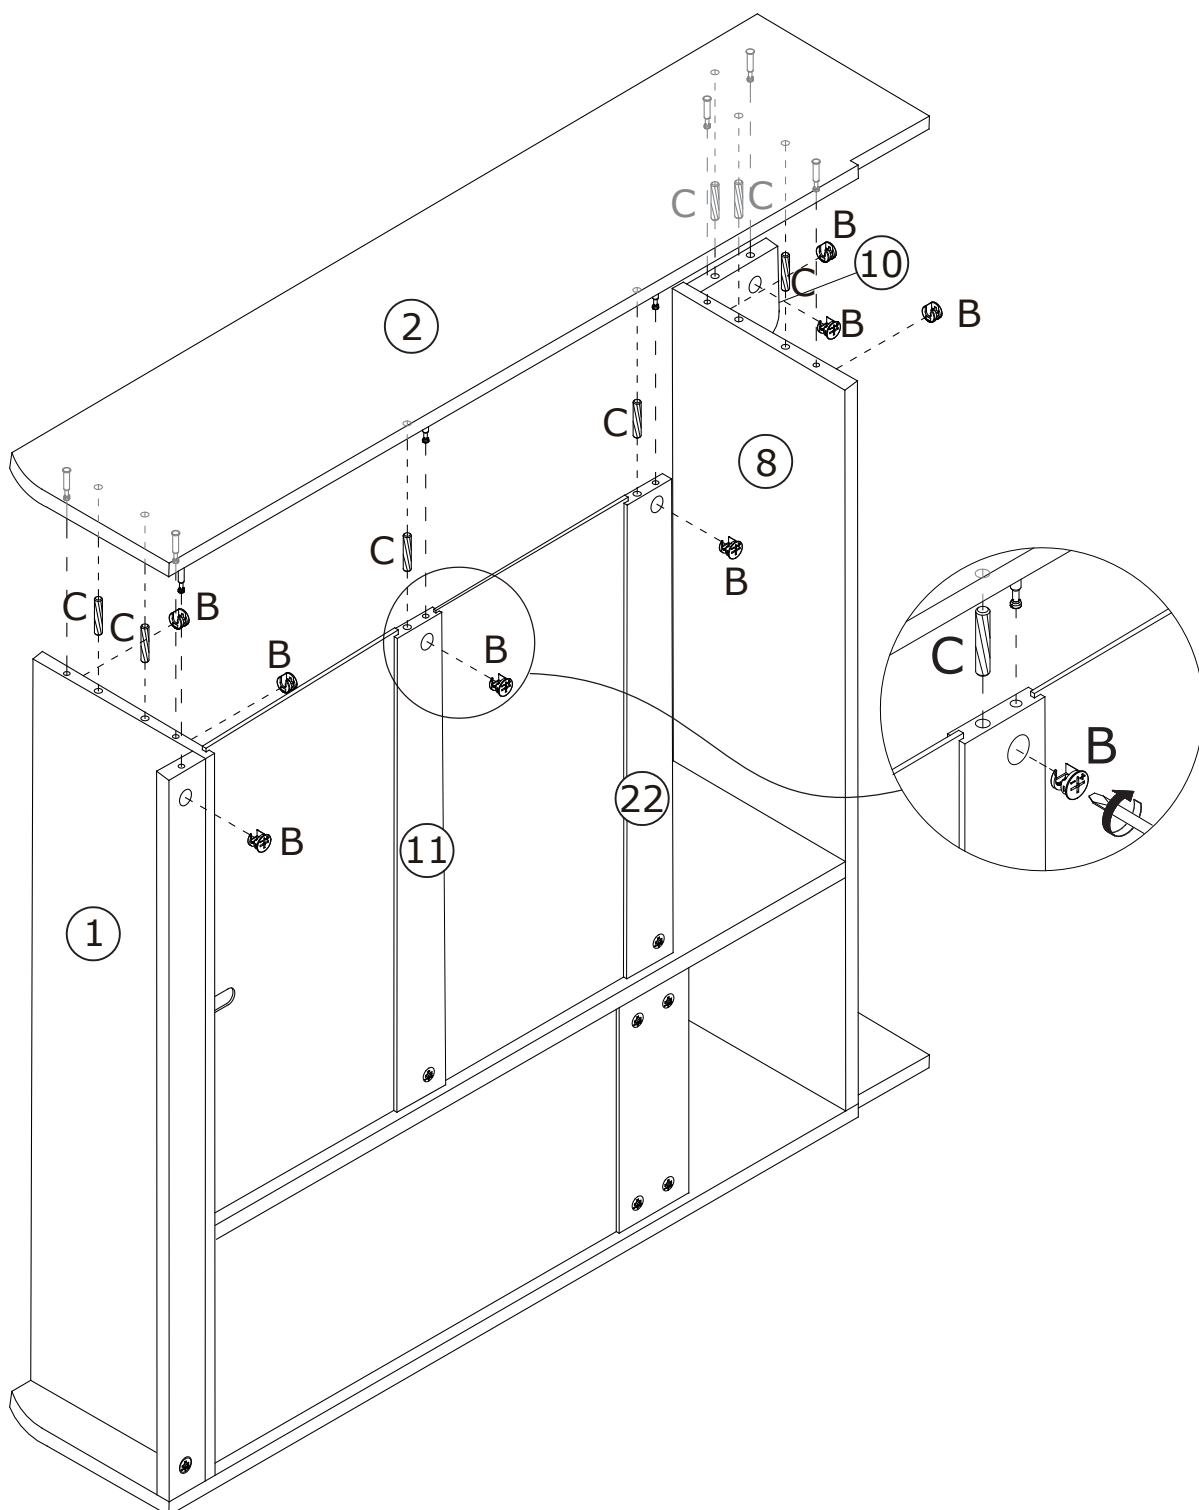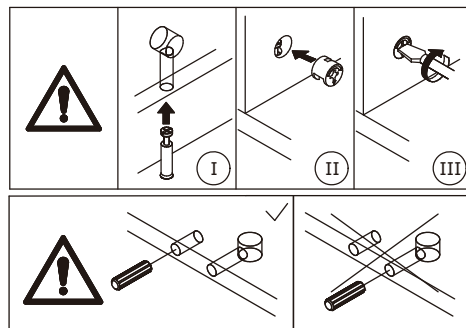

8

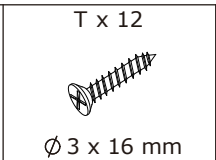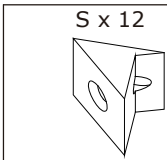   

 Reinforce back plate using part(S)
with screw(T) as shown.


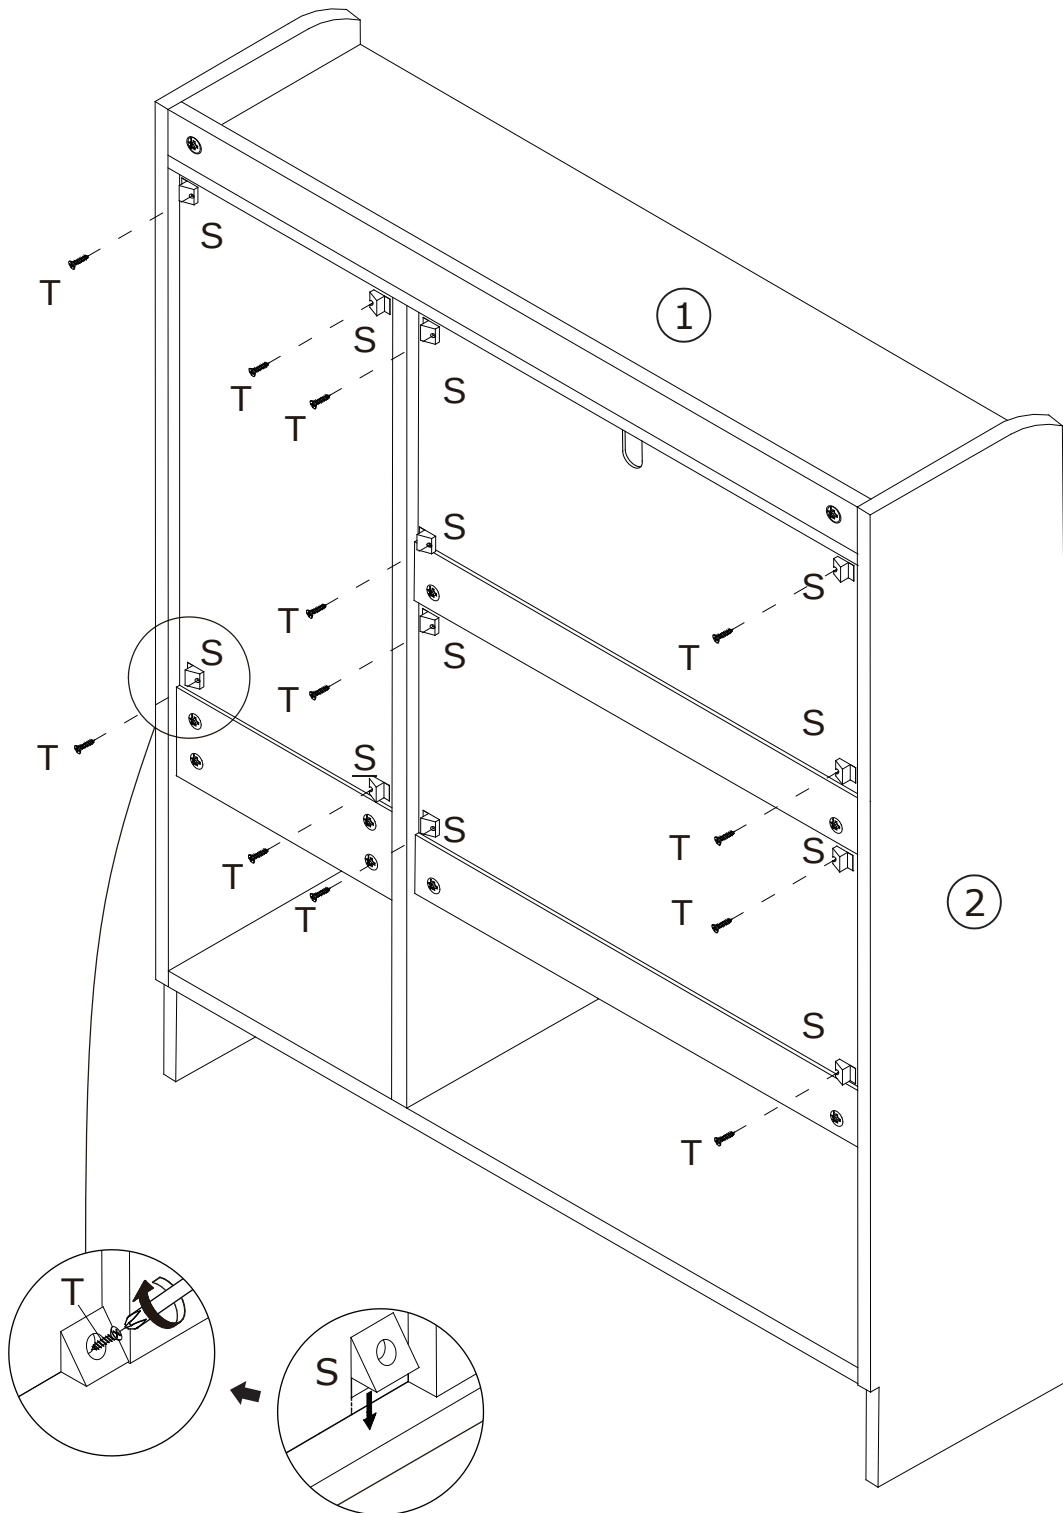


9

O x 1




 
 
R x 1

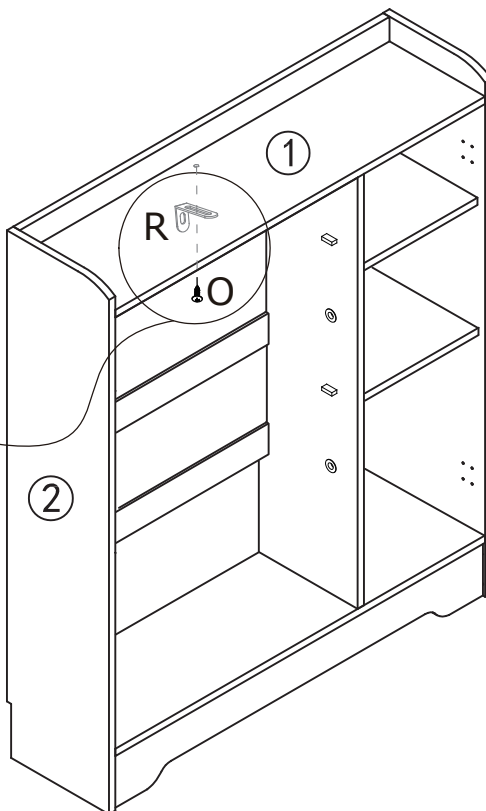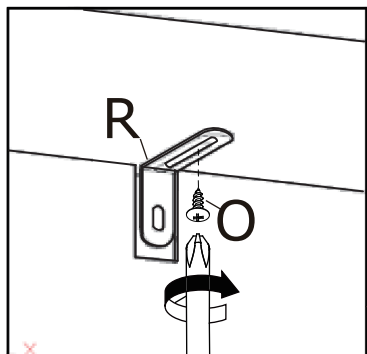


Fix part(R) to plate 1
using screw(O) as shown.

10

  
 
P x 1

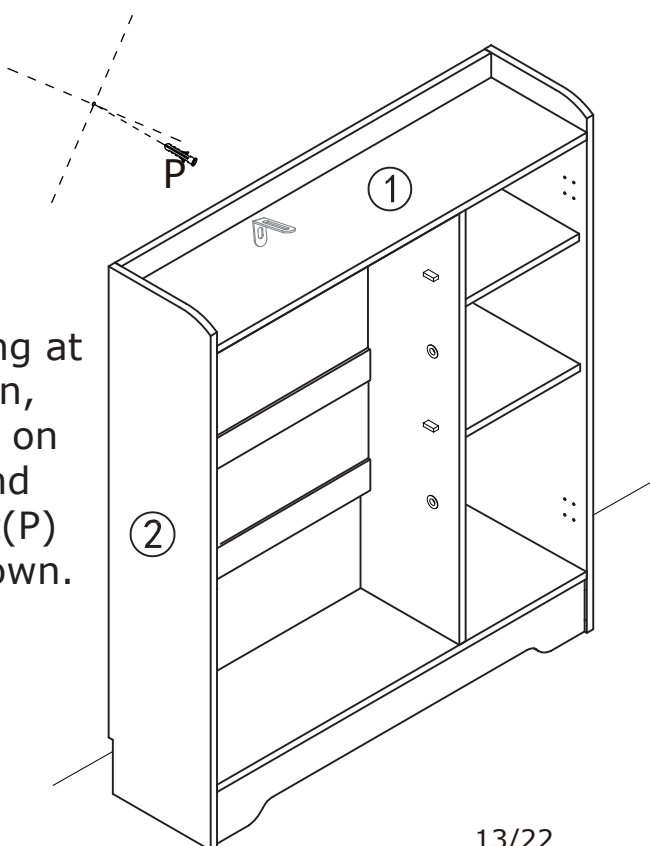

 
After aiming at
the position,
drill a hole on
the wall and
knock part(P)
into as shown.

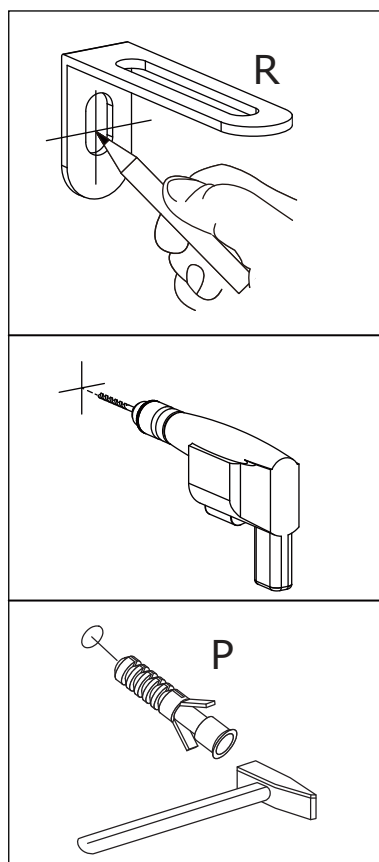


11

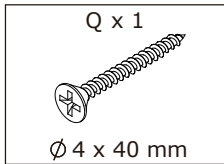  

 Fix the unit to wall using screw(Q) as shown.

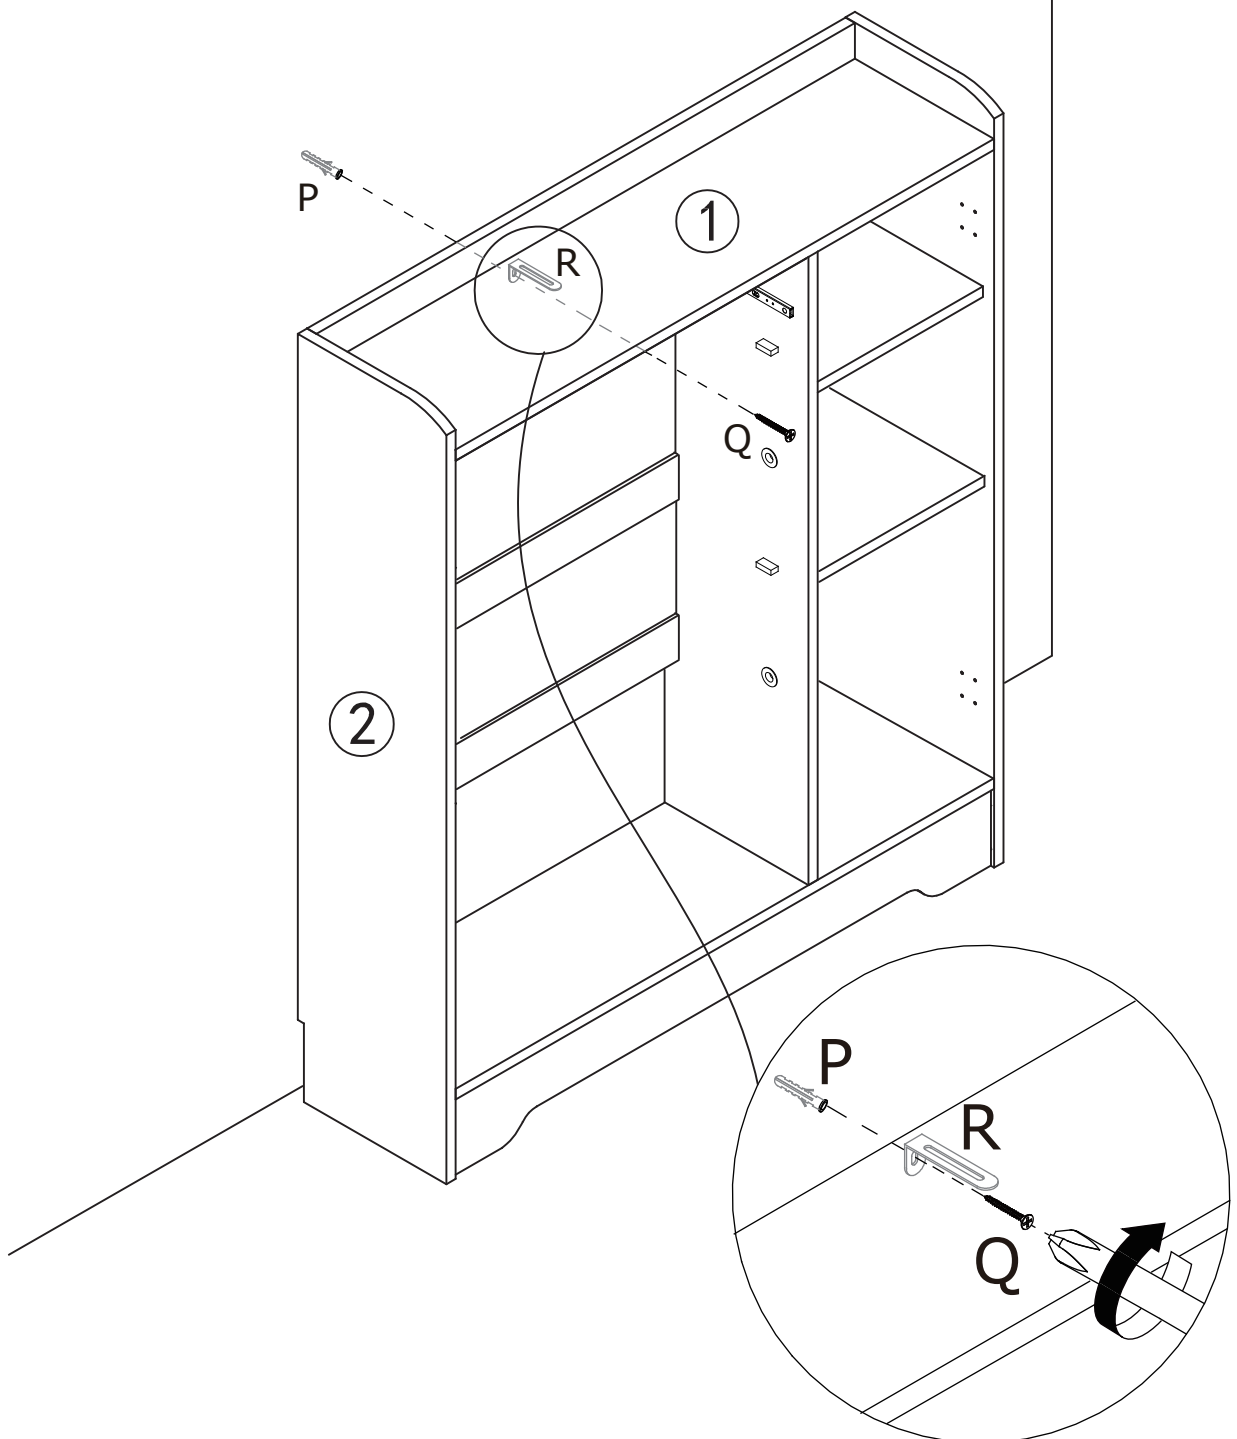

12


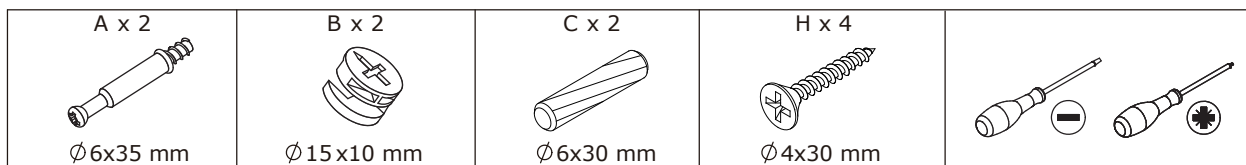 


Insert quickfit screw(A) into corresponding holes in plate 6 as shown.

Attach plate 19 and 20 to plate 6, turn cam lock(B) clockwise to tighten as shown.


Slide plate 18 along the grooves.

  Cover plate 21, and fix with plate 19,20 and 21 using screw(H) as shown.

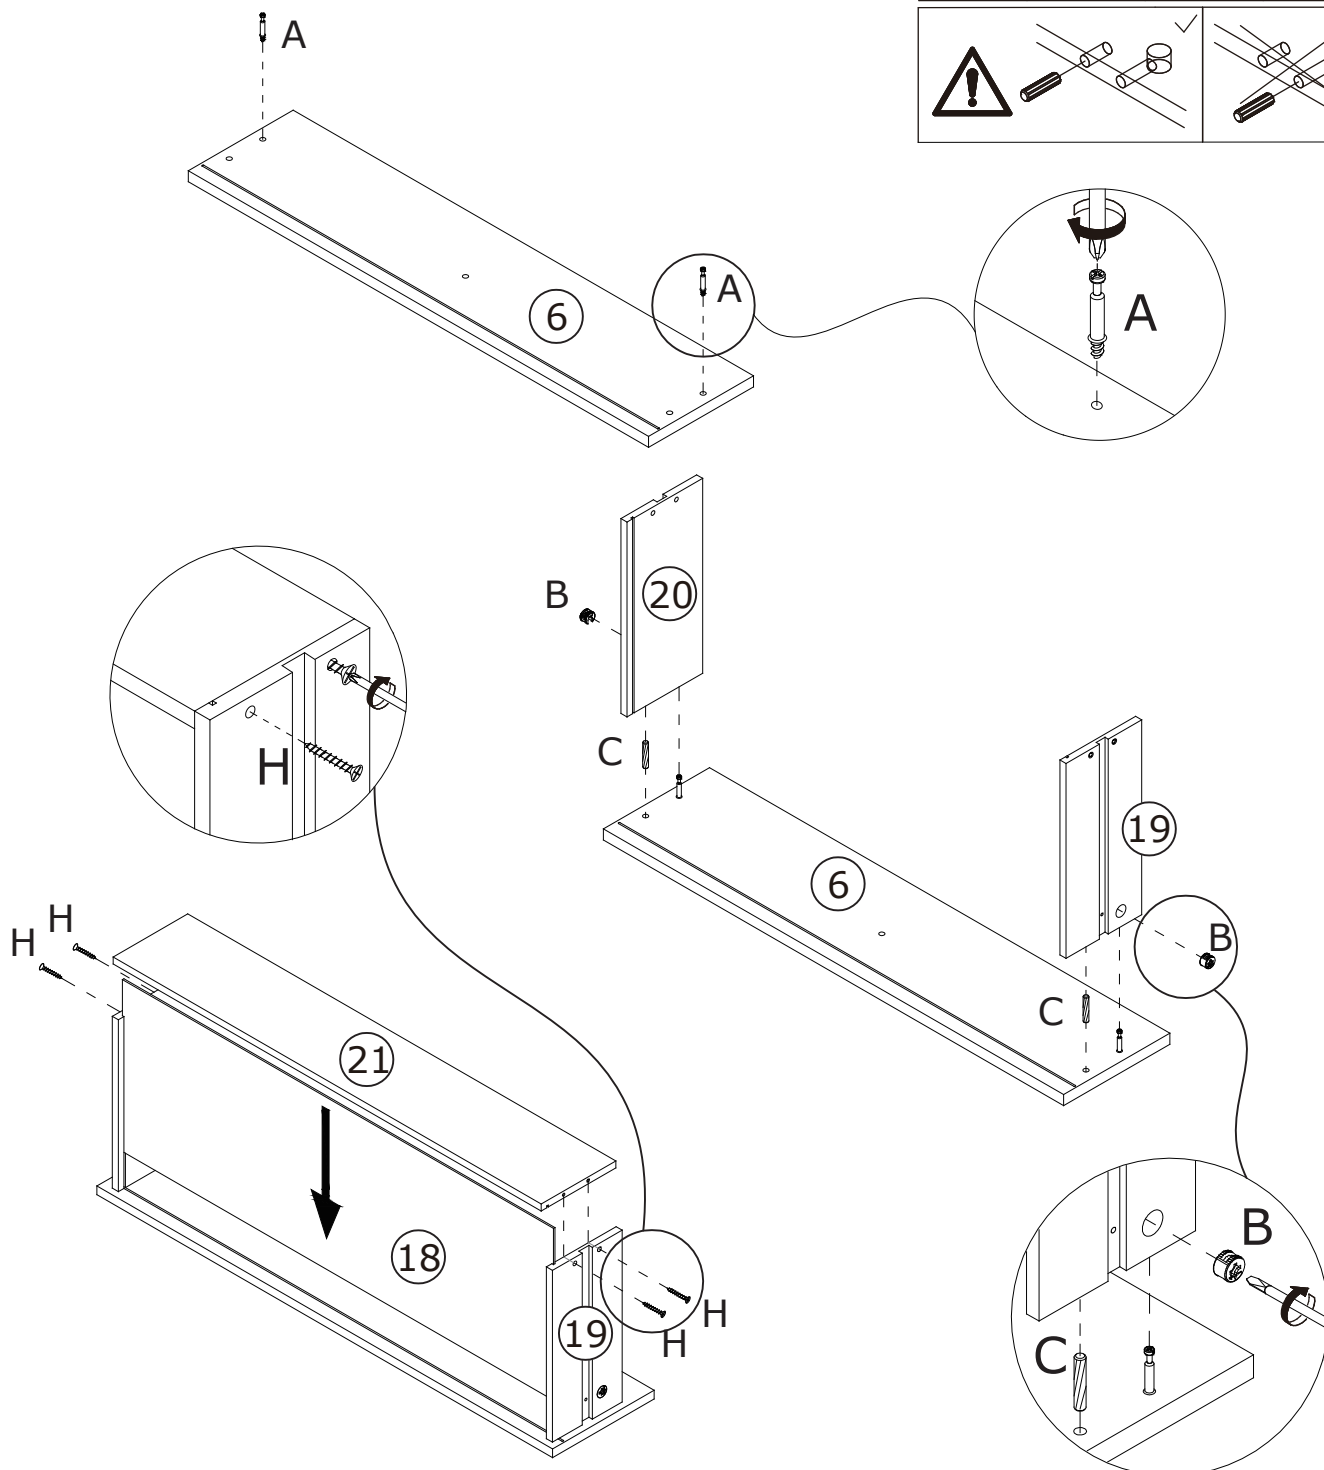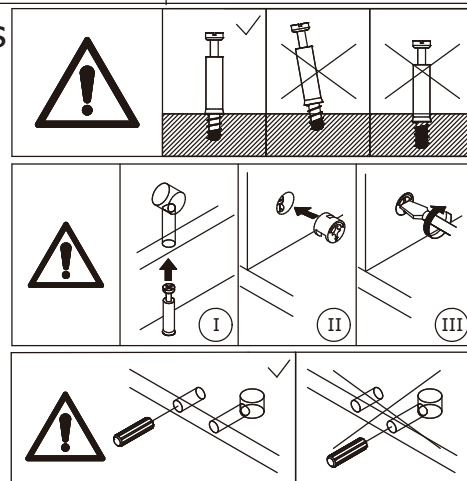


13

 F x 1



Ø4x16 mm

 G x 2







Ø4x10 mm

U x 1










Align and clip the assembled slide rail into the slots of the drawer side plate and fix with screw(G) as shown.

    Fix knob(U) to drawer face plate using screw(F) as shown.

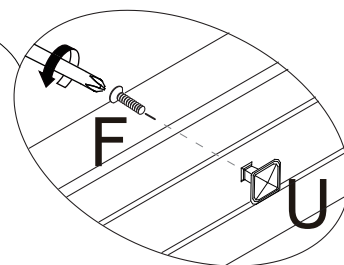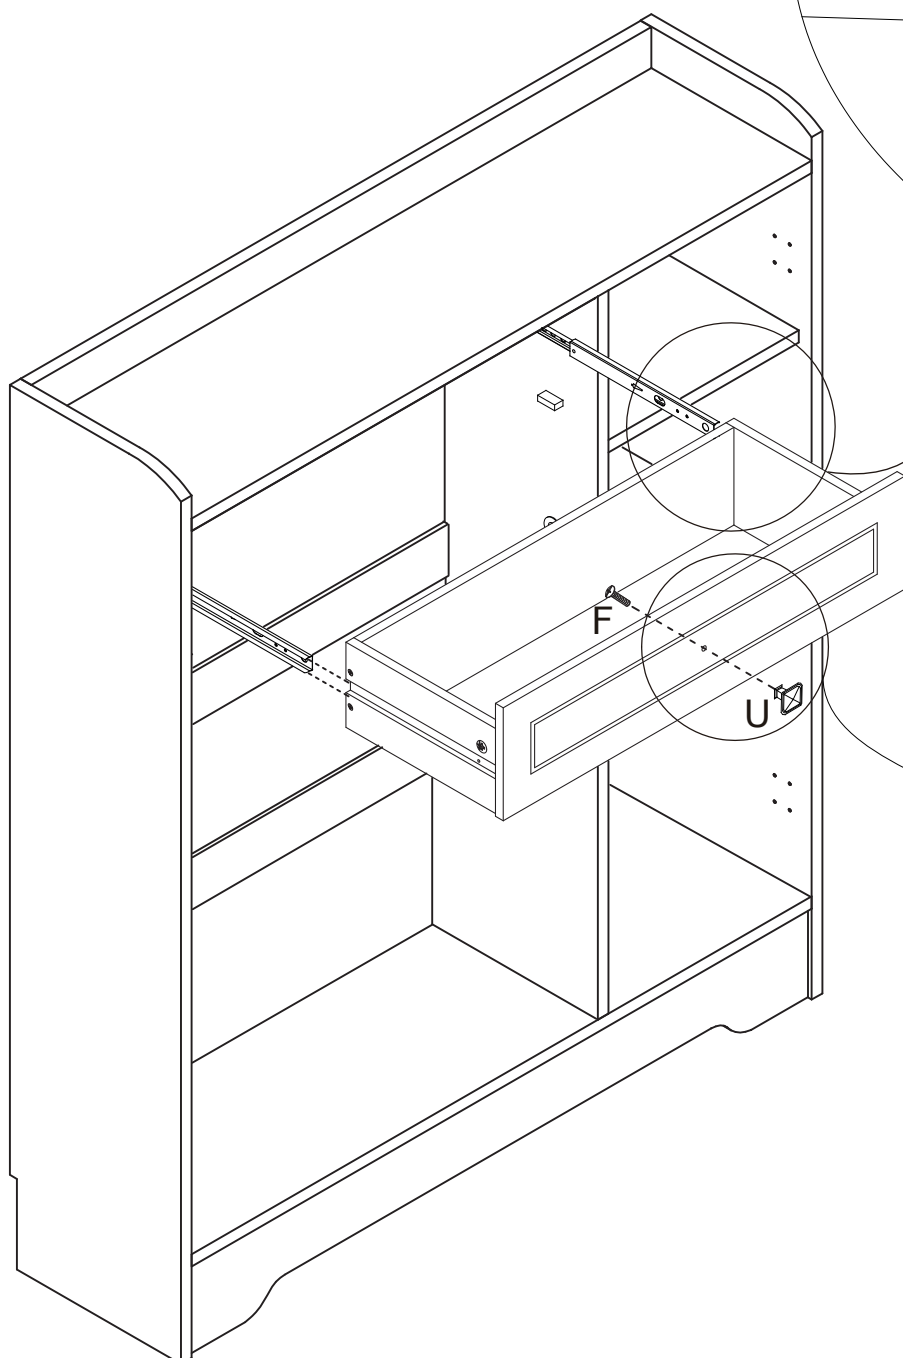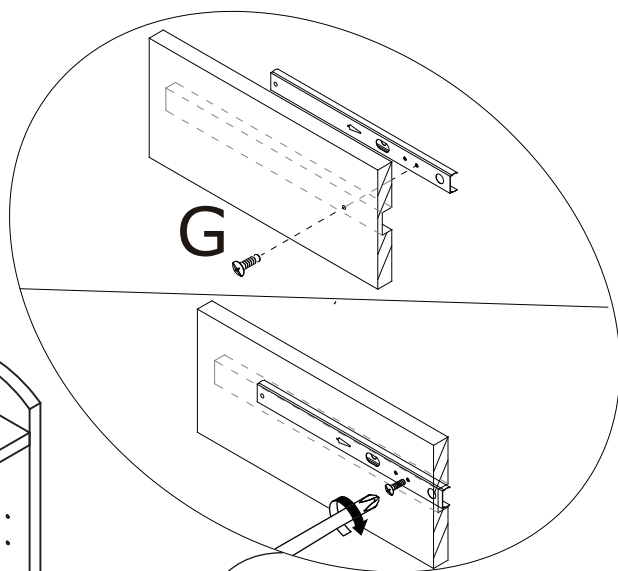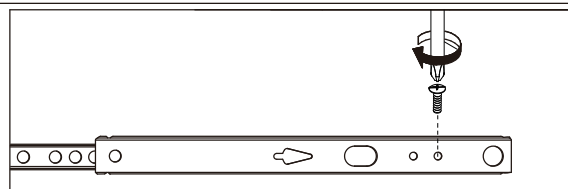


14

      F x 6  Ø4x16 mm	D x 3 	M x 2  L	N x 2  R	J x 16  Ø4x14 mm	
I x 2 	Fix plastic hinge(M,N) to plate 7 using screw(J) as shown.				


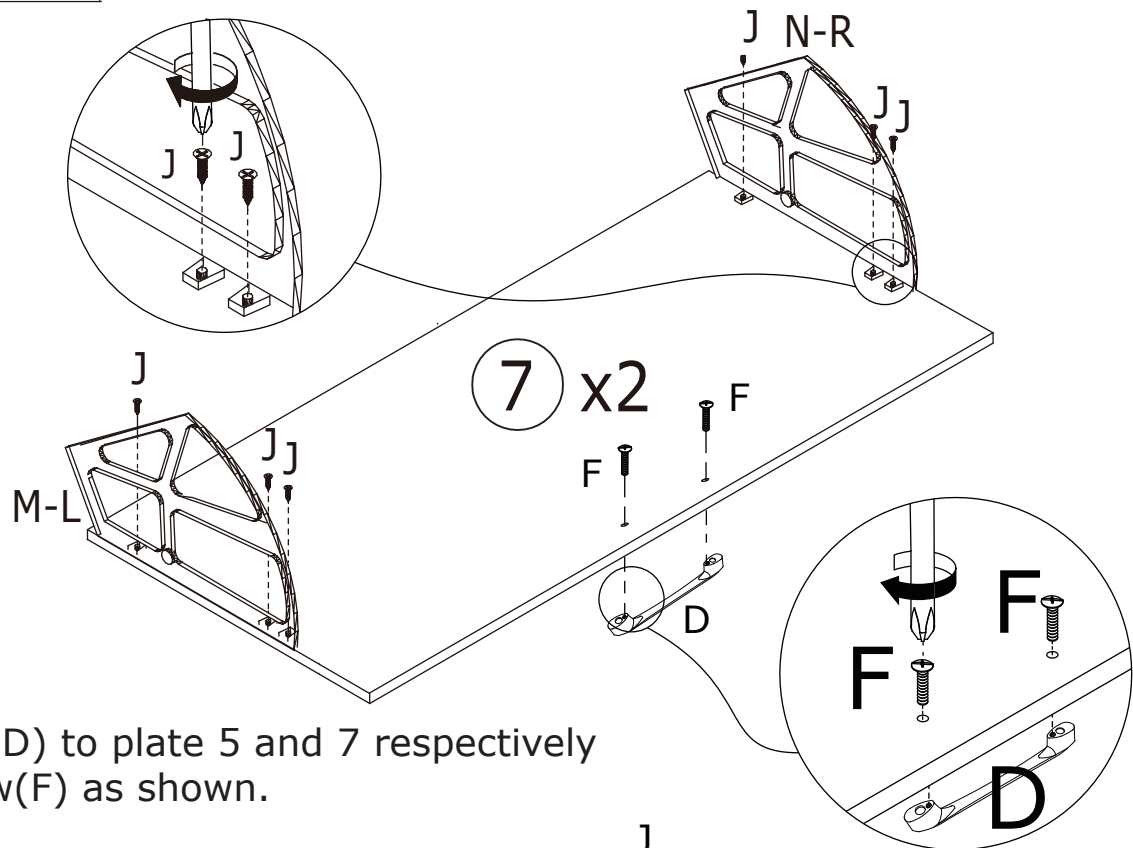 


 Fix handle(D) to plate 5 and 7 respectively using screw(F) as shown.

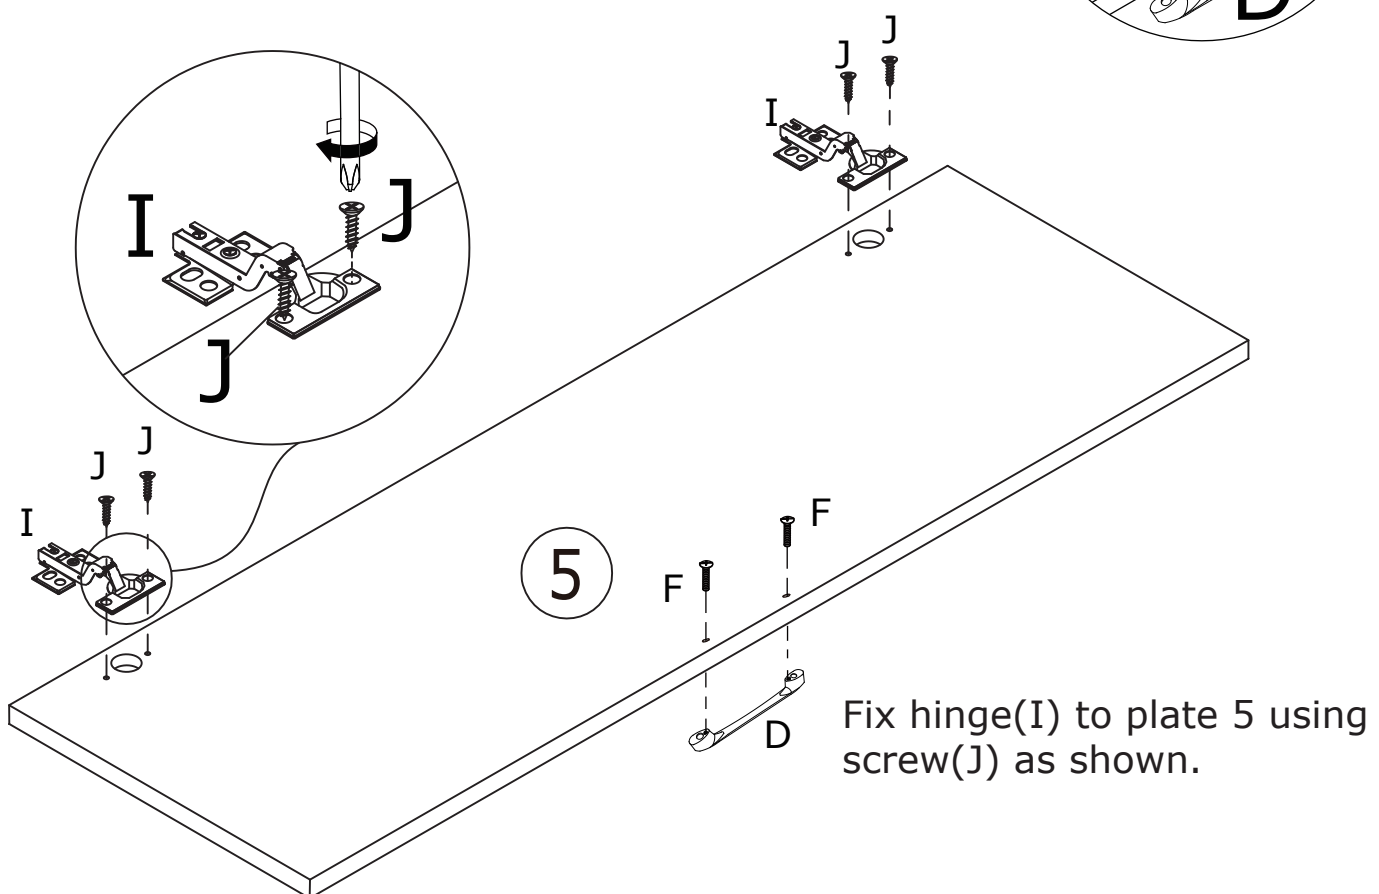


Fix hinge(I) to plate 5 using screw(J) as shown.

  15

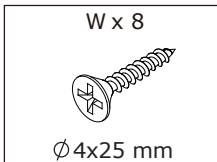

Attach plate 15 to the assembled plastic hinges and fix with screw(W) as shown.

 Attach plate 14 to the assembled plastic hinges and fix with screw(W) as shown.

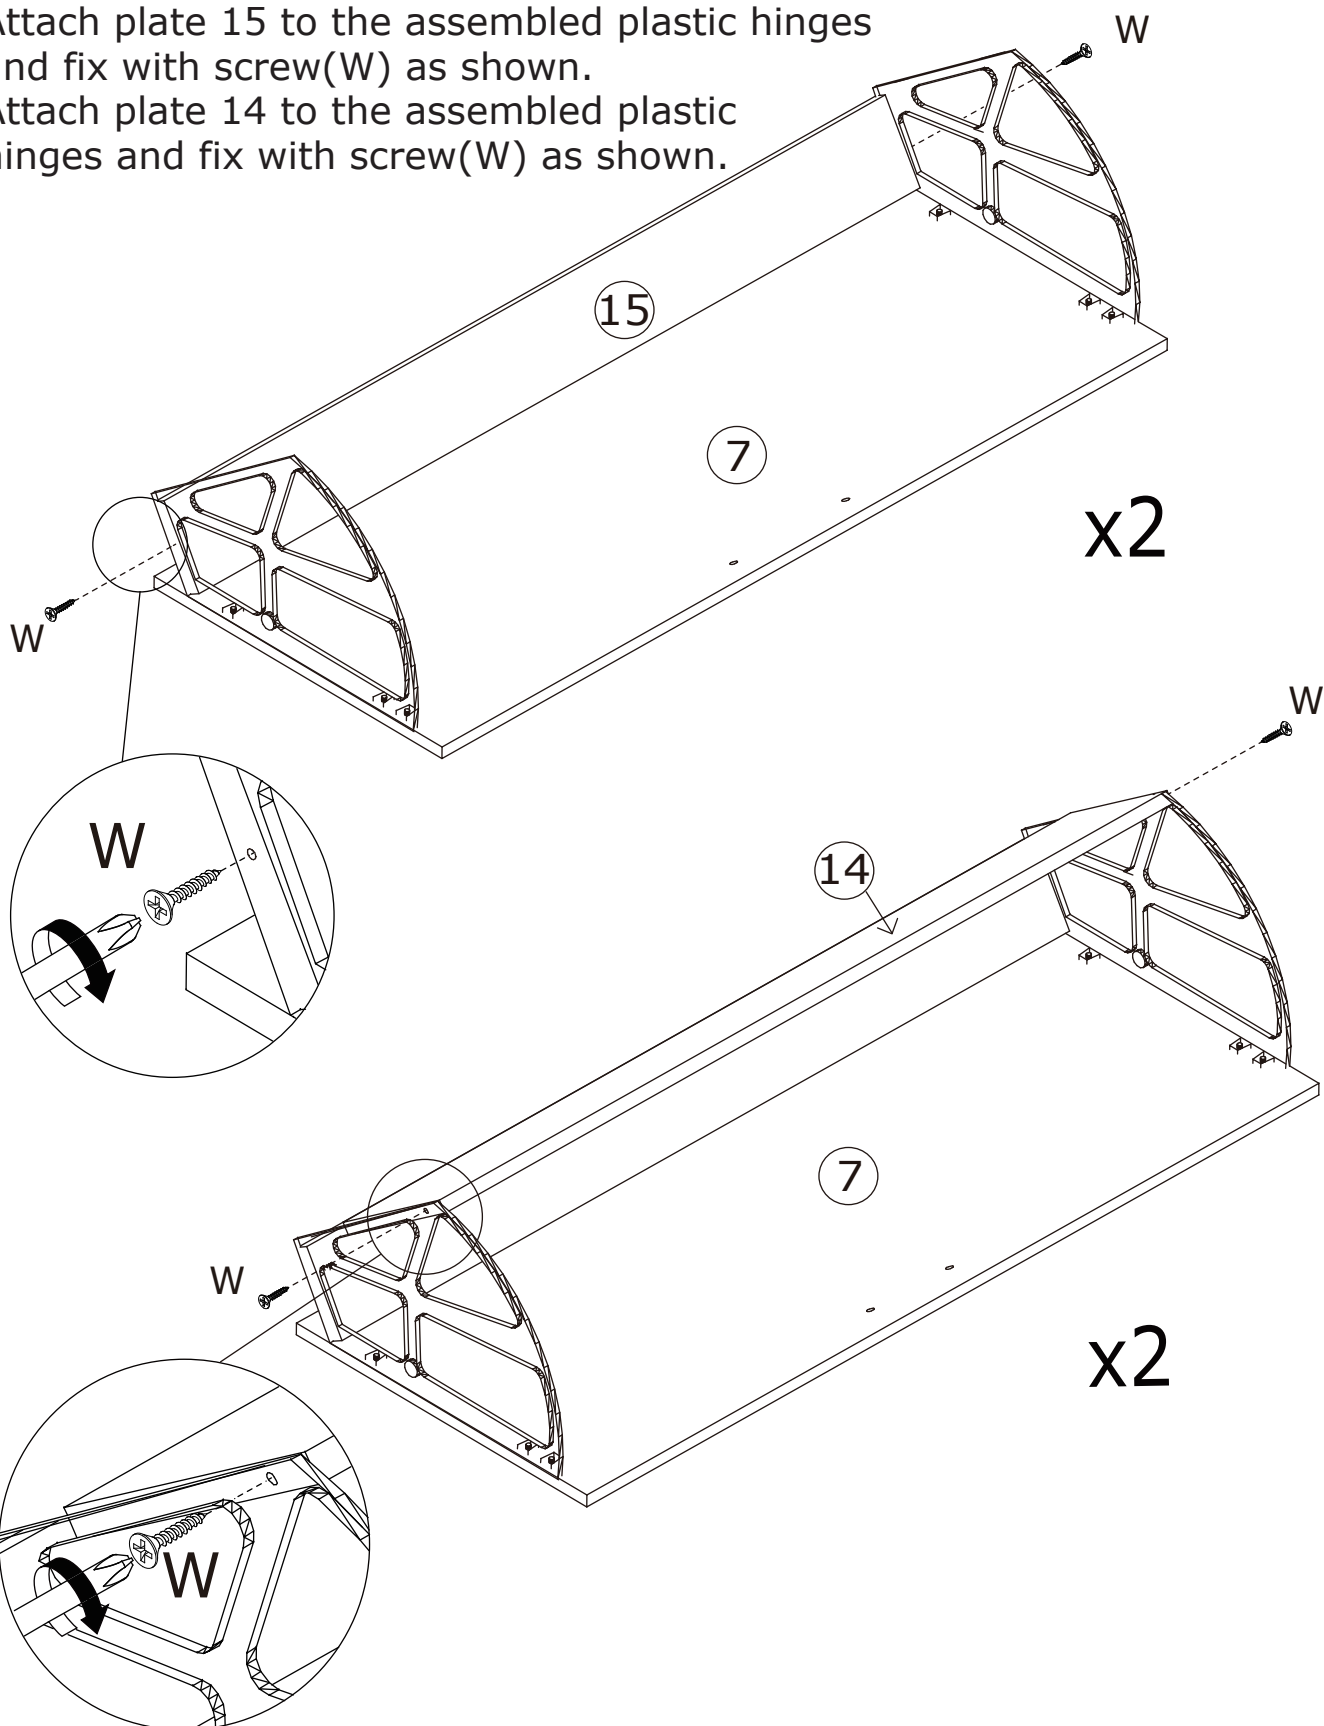

16

L-1 x 4



 
 
J x 4




Ø4 x 14 mm



Fix the drawers to side plates by fixing plastic hinges through part(L-1) with screw(J) as shown.

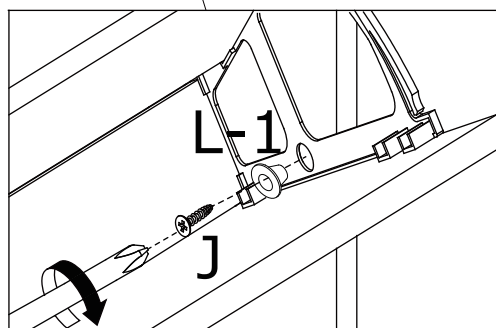
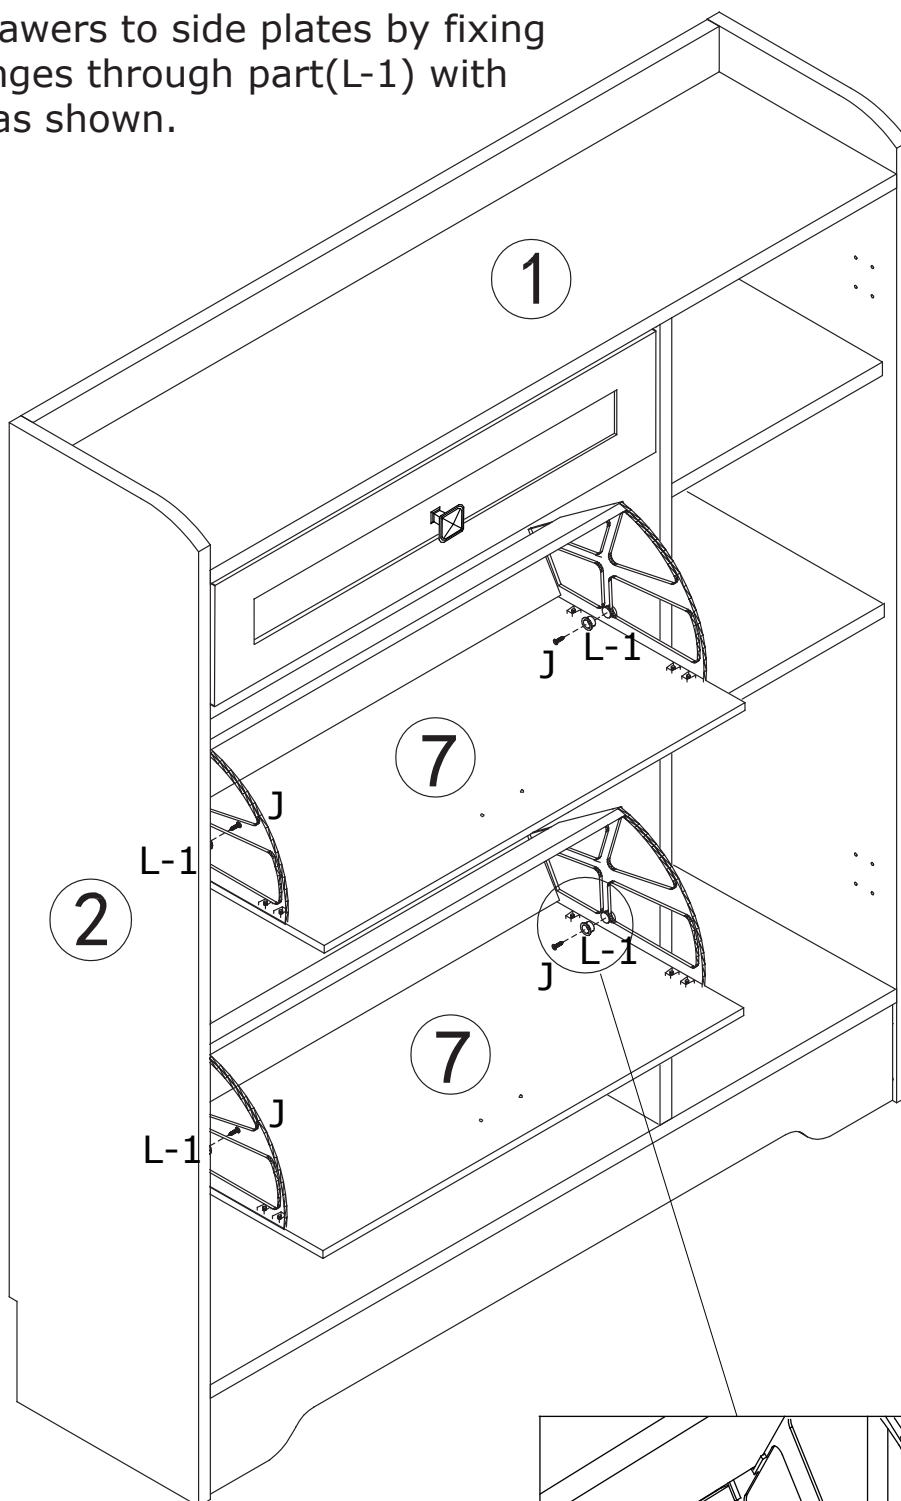


17

 
W x 4

   Ø4 x 25 mm

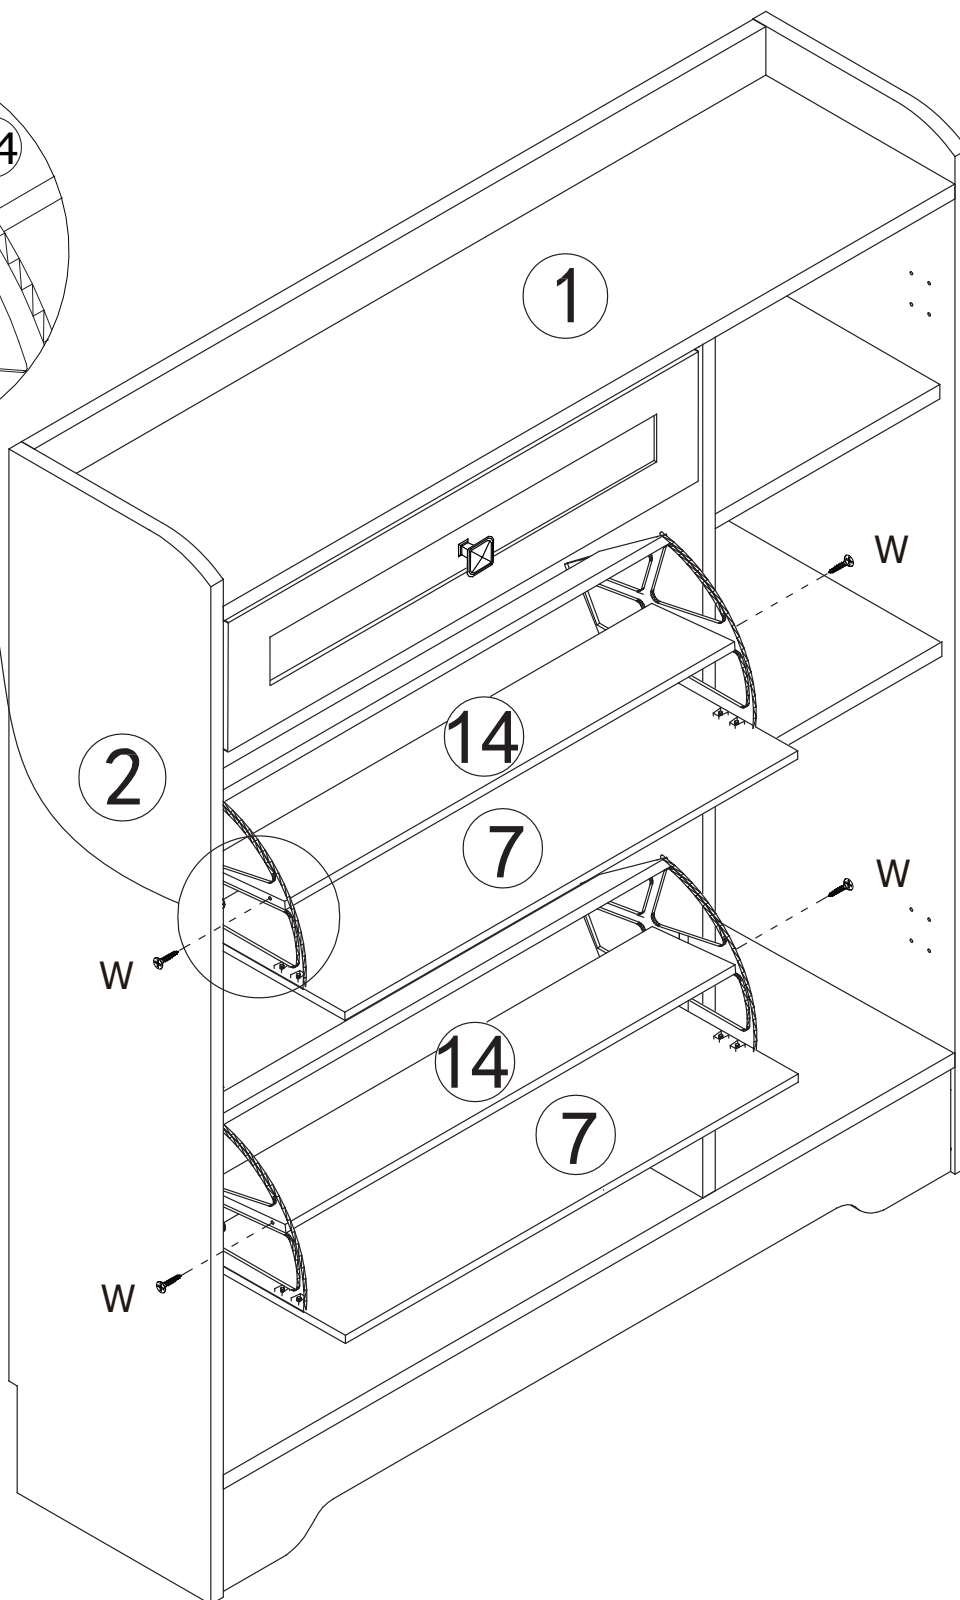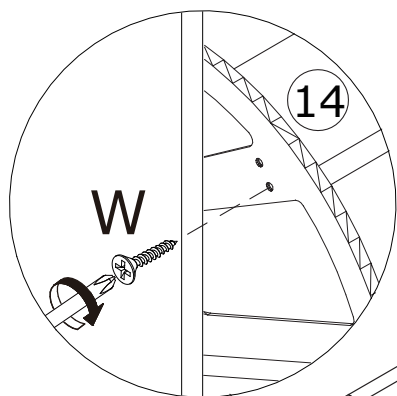

 Fix plate 14 to the plastic hinges with screw(W) as shown.






18

J x 8

  Ø4 x 14 mm











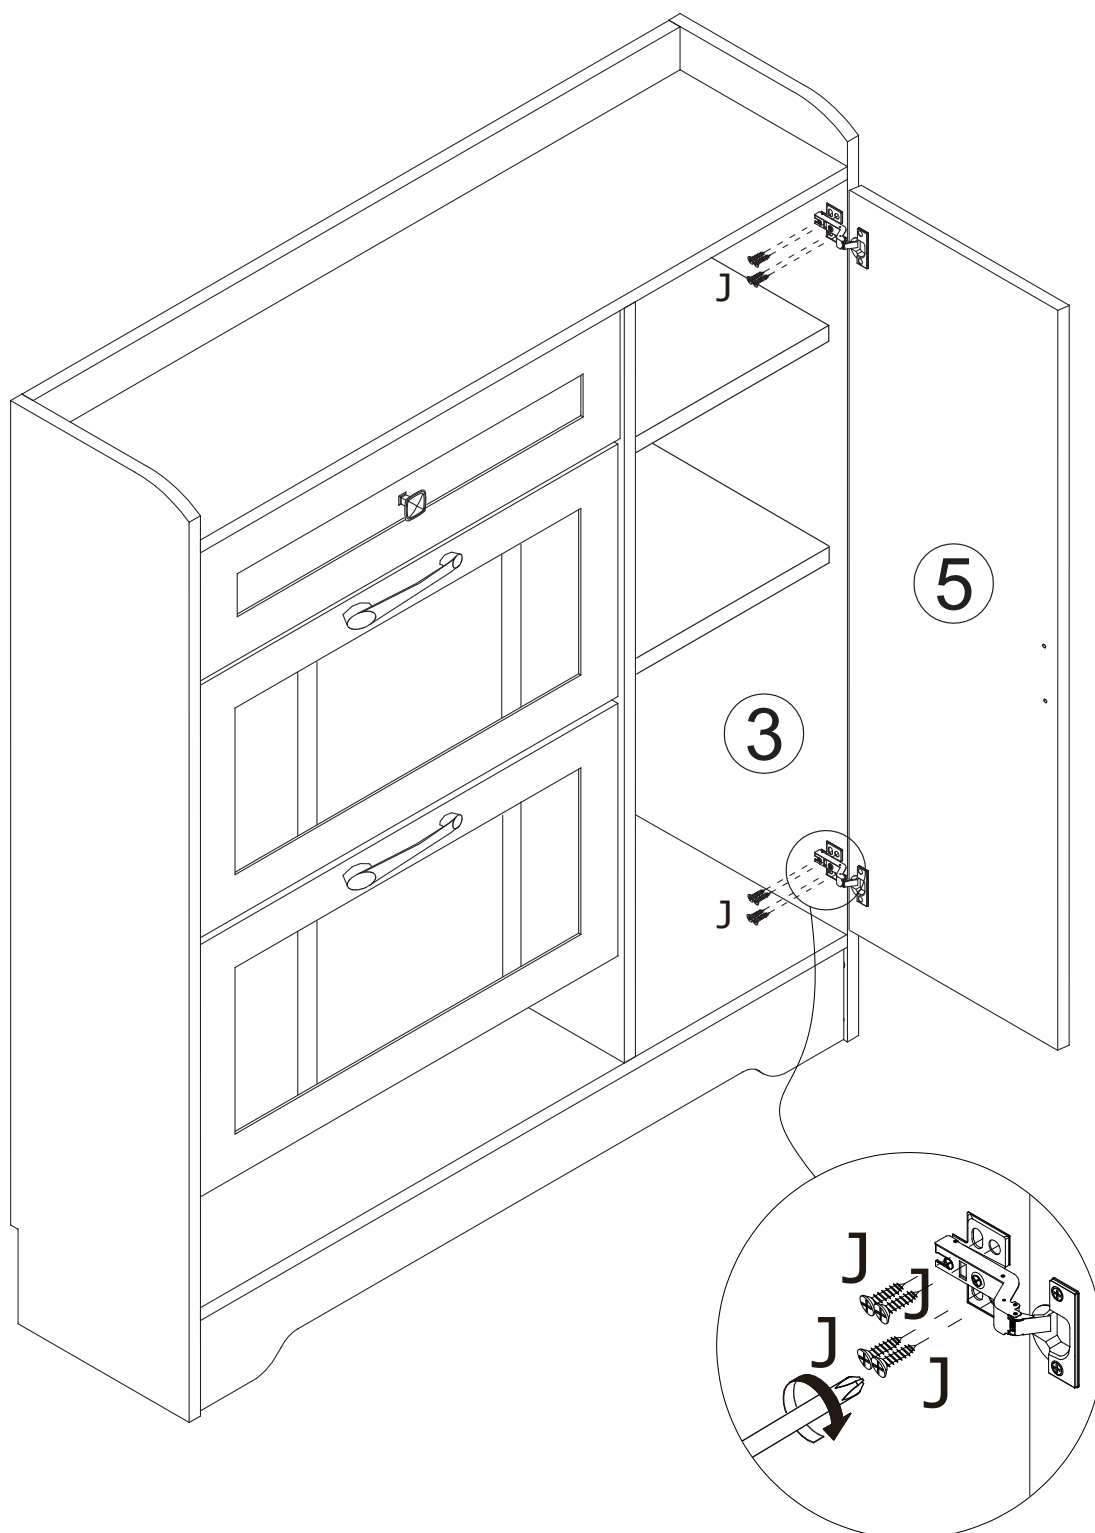


  Attach door plate 5 to plate 3 by fixing hinge with screw(J) as shown.

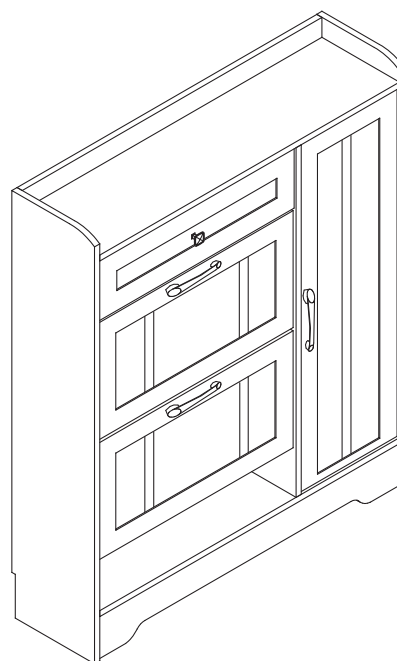



           If there is misalignment after you install,
adjust the screw to the best condition

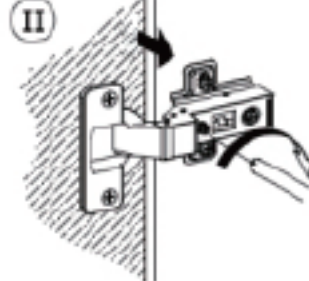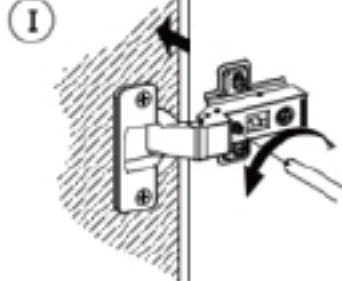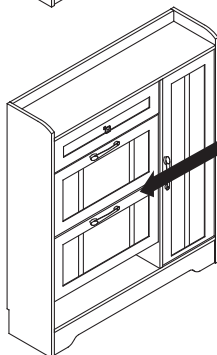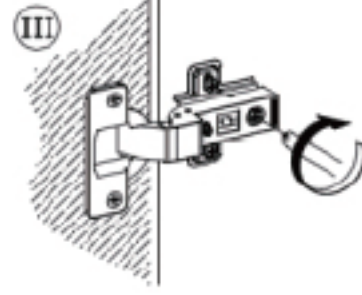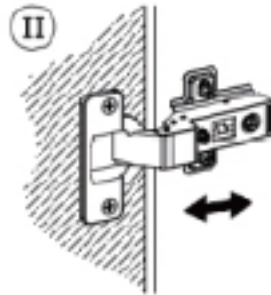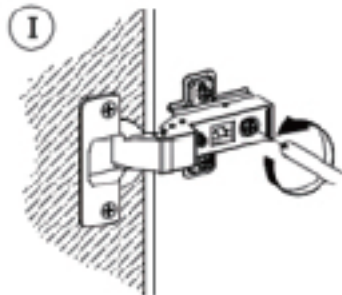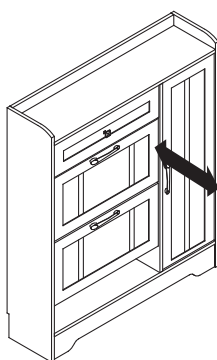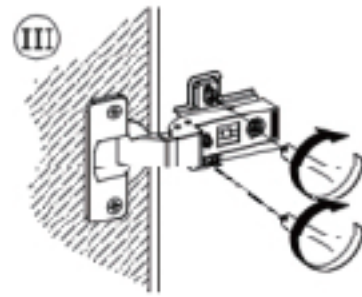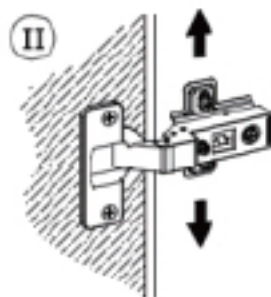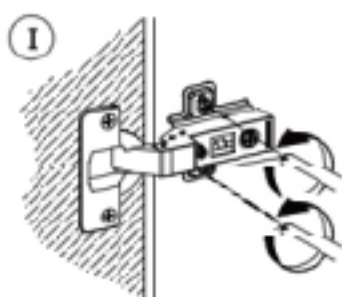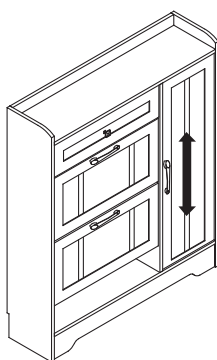

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.