


Powools

CORDLESS VACUUM CLEANER

USER MANUAL

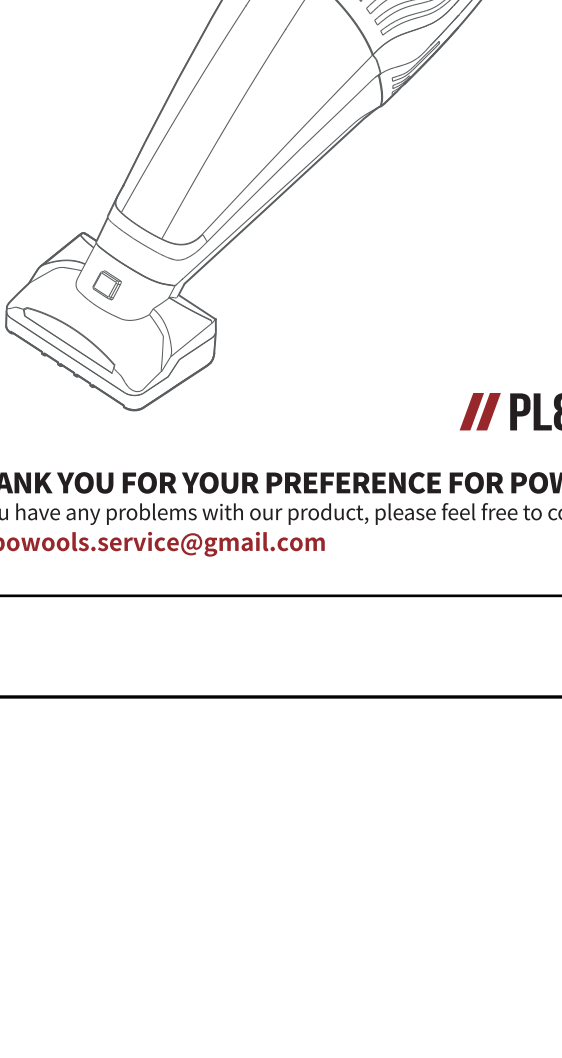

// PL8726

THANK YOU FOR YOUR PREFERENCE FOR POWOOLS
If you have any problems with our product, please feel free to contact us.

✉ powools.service@gmail.com

NOTE

Please check if there are accessories damaged or lost. If there are, please contact our customer service team to get a replacement or a full refund.

✉ powools.service@gmail.com

CONTENTS

IMPORTANT INSTRUCTIONS	1
PRODUCT DESCRIPTION	2
PRODUCT OPERATION	3
How to Charge	3
How to Use	4
PRODUCT CLEANING	6
Cleaning of Filters	6
Cleaning of Motorized Brush	7
TROUBLESHOOTING	8
ABOUT WARRANTY	9

// IMPORTANT INSTRUCTIONS

To prevent any physical injuries and property damages caused by improper operation, please read this manual carefully before using the appliance and keep it for future reference.

- Please keep the product out of the reach of children.
- Keep the product away from fire, heat, or direct sunlight.
- If there is any part found broken, please stop using the product.
- Please fully charge the product before the first use.
- Use the original adapter only.
- Do not touch the adapter or the power cord with wet hands.
- Do not turn on the appliance while charging, assembling, or disassembling.
- Do not use this product to clean wet rubbish, corrosive liquids, flammable items, hard or sharp objects, etc.
- Do not disassemble, soak, or clean the motor by yourself.

DISPOSAL INFORMATION

- Powools products are made from premium recyclable materials. Recycle where possible.
- The battery should be removed from the product before disposal.
- Dispose or recycle the battery in accordance with local ordinances or regulations.
- Dispose of the exhausted filter unit in accordance with local ordinances or regulations.

-1-

// PRODUCT DESCRIPTION




-2-

// PRODUCT OPERATION


How to Charge

NOTICE


- Please fully charge the appliance before the first use, and always remember to use the original adapter only.
- Please keep the appliance well-connected with the adapter before charging.
- Please do not turn on the appliance when charging.
- Please unplug the adapter when fully charged.
- Please keep the battery power higher than 75% when not in use for a long time.

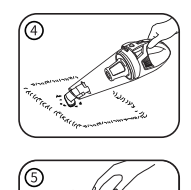

Step 1: When the battery is low, the indicator light will flash for 2 mins before the appliance powers off automatically. Please charge the appliance.

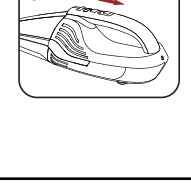

Step 2: Connect the appliance with the adapter and then plug it into the socket until the indicator light on the appliance keeps flashing.

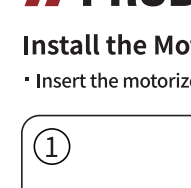


Step 3: When the appliance is fully charged, its indicator light will keep lighting. Please unplug the adapter in time.

-3-

// PRODUCT OPERATION

How to Use

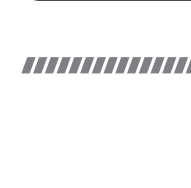

1. Press the power switch forward to turn on the appliance.




2. Keep the nozzle parallel to the surface when operating.




3. Insert the flush end of the crevice nozzle into the dust cup nozzle for cleaning corners and cracks.



4. Insert the dusting brush into the dust cup nozzle for cleaning the carpets and other upholstery.

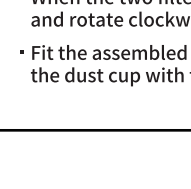

5. Press the LED button to turn on the LED light for cleaning dark areas.

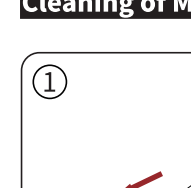

6. Press the power switch back to turn off the appliance.

-4-

// PRODUCT OPERATION



Install the Motorized Brush

- Insert the motorized brush into the appliance until it clicks.



Remove the Motorized Brush

- Press the release button to take off the motorized brush.

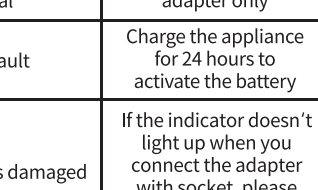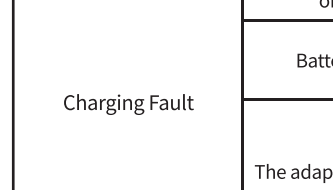

-5-




// PRODUCT CLEANING

Cleaning of Filters

NOTICE

- Please regularly clean the filters to keep the good performance of the appliance.
- If the filters are found broken, please feel free to contact us to get more help.

FILTERS DISASSEMBLY

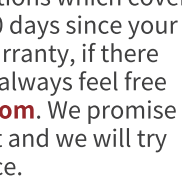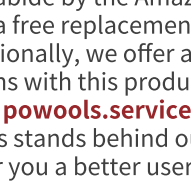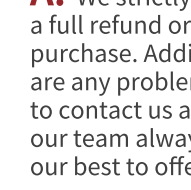

- Press the release button to take off the dust cup.
- Contrarotate the HEPA filter to take it out.

FILTERS CLEANING



- Tap the filters to shake off the dust first and then clear the fine dust on the filters with the cleaning brush.
- Wash the prefilter and HEPA filter with tap water.
- Let the prefilter and HEPA filter air dry.

FILTERS REASSEMBLY

- When the two filters are completely dry, put the HEPA filter into the prefilter and rotate clockwise to screw them together.
- Fit the assembled filters into the dust cup. Press the release button to align the dust cup with the main body and then buckle the two parts up.

-6-

// PRODUCT CLEANING

Cleaning of Motorized Brush

Step 1: Press the release button to take off the motorized brush.

Step 2: Pull out the buckle to take off the roller.

Step 3: Clean the roller.

Step 4: Let the roller air dry completely, then put it back into the motorized brush.

- 7 -

// TROUBLESHOOTING

Malfunction	Possible Cause	Solution
Poor Suction	The filter is clogged	Clean the filter
	The filter is wet	Let the filter air dry completely
	The roller is clogged	Clean the roller
	Low battery	Fully charge the appliance
	The product is damaged	Contact the customer service
Charging Fault	No power supply	Ensure that the socket is available
	The adapter is not original	Use the original adapter only
	Battery fault	Charge the appliance for 24 hours to activate the battery
	The adapter is damaged	If the indicator doesn't light up when you connect the adapter with socket, please contact the customer service directly
	The battery is damaged	Contact the customer service
The appliance can't work	The battery runs out	Fully charge the appliance
	The appliance is damaged	Contact the customer service

If the appliance still doesn't work, please contact the customer service team.
✉ powools.service@gmail.com

- 8 -

ABOUT WARRANTY

Q: Do you have a warranty for this product?

A: We strictly abide by the Amazon regulations which cover a full refund or a free replacement within 30 days since your purchase. Additionally, we offer a 1-year warranty, if there are any problems with this product, please always feel free to contact us at powools.service@gmail.com. We promise our team always stands behind our product and we will try our best to offer you a better user experience.

- 9 -