




MADISON PRE-LIT MAILBOX SWAG 36 INCH
Item # DCSW3601



Instructions:

- 1) Place the mailbox swag on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another. To shape the bow, slip fingers into the loop molding the loop into a rounded shape.
- 2) From back of the mailbox swag, find the battery box and open it, insert 3 AA batteries into the battery box, then close the battery box (see Figure A, B, C, D & E).
- 3) Each battery box is featured with a 3-position switch: On – Off – Timer (see Figure F) . The timer enables the LED lights to remain on for 6 hours, then off for the next 18 hours. This will repeat daily.

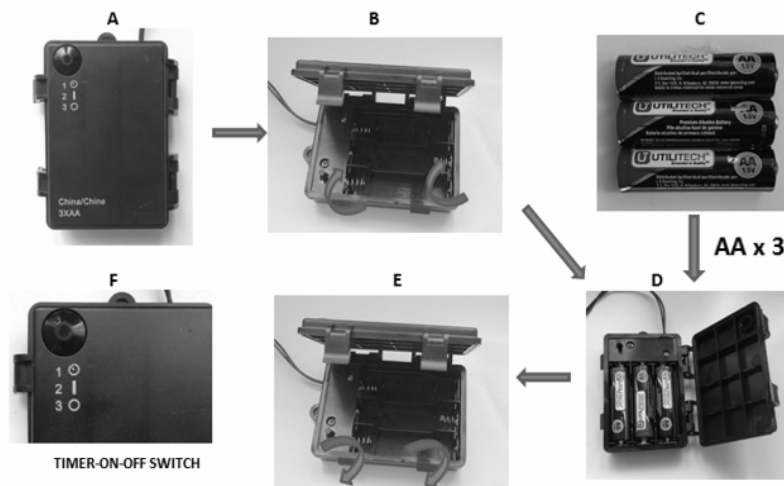

- 4) Put swag on your mailbox and use the strap to secure. Suitable for indoor or outdoor use.



Battery Warning:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries.
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
6. Replace batteries when the light is faint.
7. Replace all batteries at the same time.
8. Remove exhausted/dead batteries from unit.
9. Do not short circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come in contact with heat.
11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

Made in China
0622RevA

THANK YOU FOR YOUR PURCHASE
Comments or questions?
Call us at 1-877-359-0115 or
Contact us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

