



32" CURVED GAMING MONITOR

1920 x 1080, 165Hz

KAMN32F16LC



Safety & Warnings	3
Components	4
Overview	5
Stand Assembly	6
VESA Mount	8
Connectivity	9
Operation	11
Cleaning & Care	17
Specifications	17
Notes	19



SAFETY & WARNINGS


Ensure to read all instructions and warnings in this user guide prior to first use. Retain this user guide for future reference.

- Do not position the monitor on unstable surfaces. If the monitor falls, it may lead to damage and injuries to people around its vicinity.
- Do not place the monitor near heat sources (for example, heaters, stoves, fireplaces).
- Do not use the monitor in areas lacking adequate ventilation.
- Do not open the back panel of the monitor as it contains a high-voltage current even when unplugged.
- Do not place heavy objects on the monitor, its power cord, or any other connected cable.
- The back of this monitor is designed with ventilation holes. Do not cover or block them as this may cause overheating and damage.
- Do not insert or spray anything into the vents of this monitor.
- Unplug the monitor if it will not be used for an extended period.
- Ensure the monitor is unplugged before cleaning.
- Do not use cleaning alcohol, ammonia-based liquids, or other harsh cleaners when cleaning the monitor.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States, and other countries.

COMPONENTS

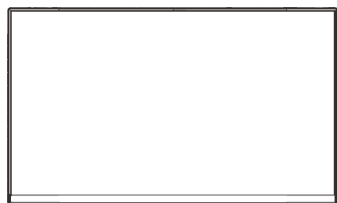

A Monitor (x1)



B Stand stem (x1)



C Stand base (x1)



D Headset hook (x1)




E Cable guide (x1)



F Stand plate (x1)




G Screw (x4)

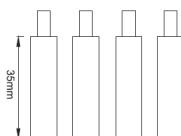

H VESA connector (x1)



I DisplayPort cable (x1)

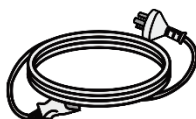


J Power cable (x1)




K User guide (x1)

OVERVIEW

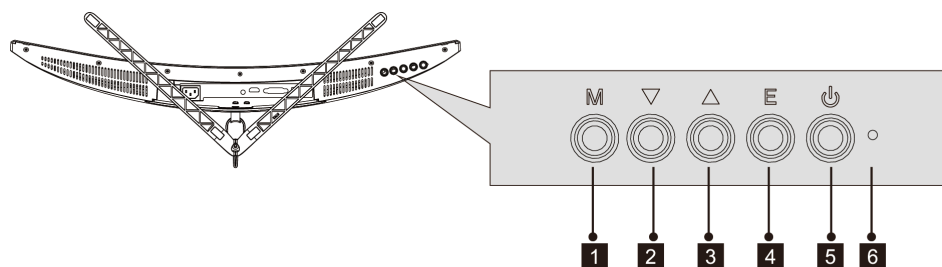

- 1 Menu/enter button
- 2 Down button
- 3 Up button
- 4 Exit button
- 5 Power button
- 6 LED indicator


Ports

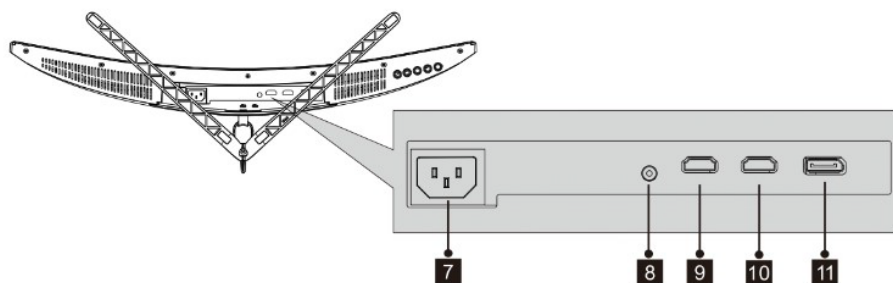


- 7 Power port
- 8 3.5mm headphone jack
- 9 HDMI 1 port
- 10 HDMI 2 port
- 11 DisplayPort port

STAND ASSEMBLY


1. Open the packaging and remove the stand stem **(B)** and stand base **(C)**. Using a screwdriver (not supplied), secure the stand stem **(B)** to the stand base **(C)** with one screw. Ensure all components are present before disposing of any packaging.

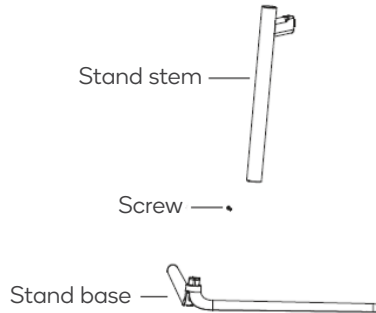


2. Slide and attach the cable guide **(E)** onto the bottom of the stand stem **(B)**. Clip the headset hook **(D)** onto the top of the stand stem **(B)**.

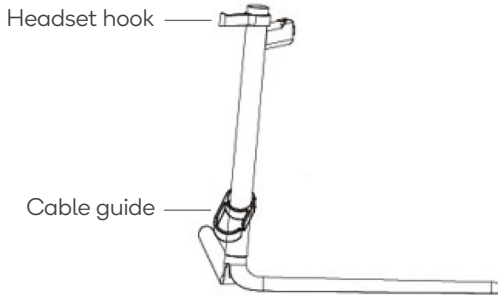

3. Press the release button to remove the stand plate **(F)** from the packaging.

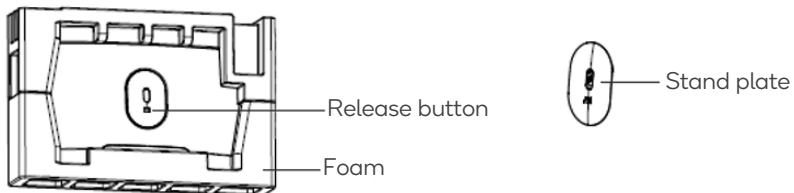


4. Using a screwdriver, secure the stand plate **(F)** onto the stand stem **(B)** with two screws.

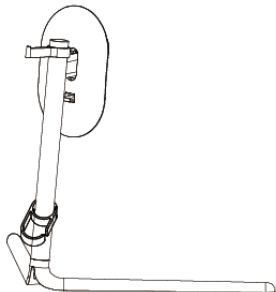

Note:


If this assembly needs to be removed, use a screwdriver to loosen the screws and separate the components.

5. Take out the monitor **(A)** and lay it on a flat surface.
6. Pull the release button on the stand plate **(F)** upwards and clamp the monitor **(A)** onto the stand stem **(B)** and stand plate **(F)**.

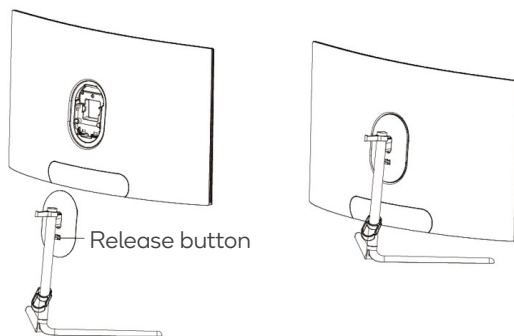


VESA MOUNT


1. Open the packaging, and with the foam attached, take out the monitor **(A)** and place it gently on a flat surface. Remove the foam covering the back of the monitor. If the monitor is attached to the stand stem **(B)** or stand base **(C)**, detach it.
2. Take out the stand stem **(B)** and stand base **(C)** from the packaging. Press the release button to remove the stand plate **(D)**.

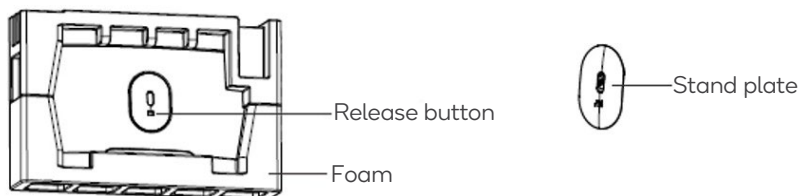

3. Using a screwdriver, loosen the four screws on the back of the monitor.

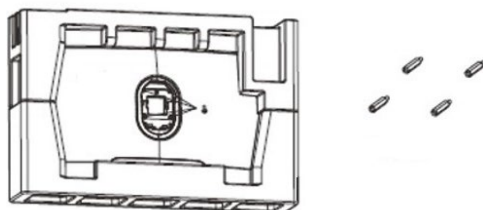

4. Mount the monitor with the steps provided with the VESA mount. Ensure to use the loosened screws from the previous steps to secure the monitor to the mount.

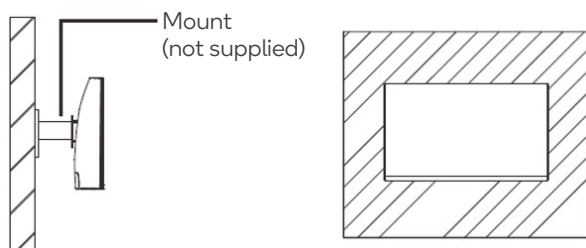


Notes:

- The mounting hole distance for this monitor is 75 x 75mm.
- VESA mount and mounting accessories are not included.

CONNECTIVITY

Power cable


Connect one end of the power cable into the power port on the monitor. Connect the other end into a power socket.

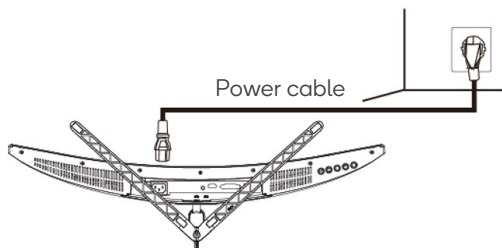

Earphones


Plug in earphones (not supplied) into the 3.5mm headphone jack on the monitor.

Note: If audio devices are plugged into the monitor and computer, there will be no sound.

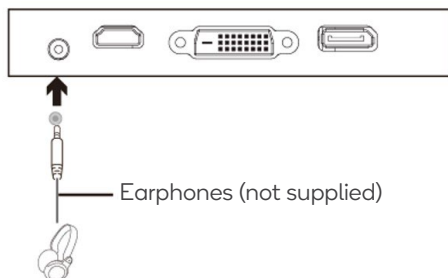


HDMI

To allow the monitor to receive HDMI signals from the computer, plug one end of an HDMI cable (not supplied) into the monitor. Plug the other end of the cable into the HDMI output port on your computer.

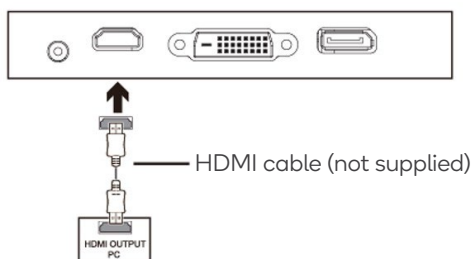

DisplayPort

To allow the monitor to receive DisplayPort signals from your computer, plug in one end of the provided DisplayPort cable into the DisplayPort port on the monitor. Plug the other end of the cable into the DisplayPort output on the computer.

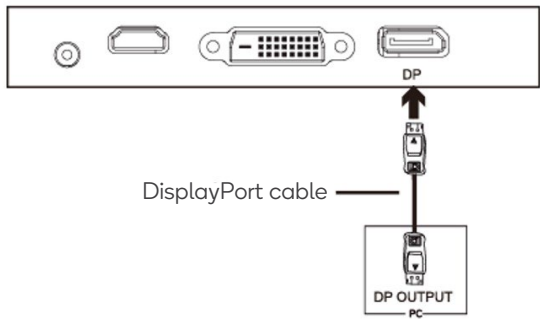


OPERATION

1. Connect the monitor to your computer via HDMI/DisplayPort.
2. Connect one end of the power cable into the power port of the monitor. Plug the other end into a power socket. Switch the socket on.

Note:

It is recommended to use a surge protector with adequate voltage if the power cable is not directly connected to a wall socket.

3. Press the power button on the monitor to turn it on. The LED indicator will turn a solid blue.

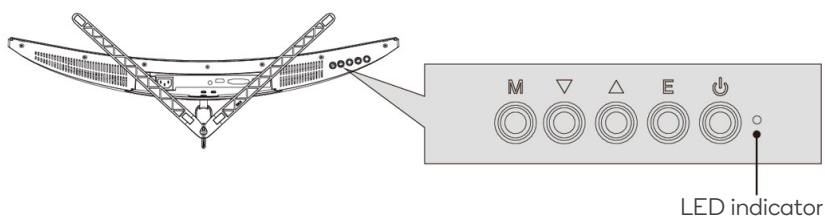


Note:

If the LED indicator is flashing blue, there is no video, horizontal, or vertical signal detected. Ensure the HDMI/DisplayPort cable has been properly connected.

Navigation window

Whilst turned on, press any button (M, ▼, ▲, E, ⏻) located underneath the monitor to bring up the navigation window. These include options to go to the on-screen display menu, as well as shortcuts to sub-menus and functions.

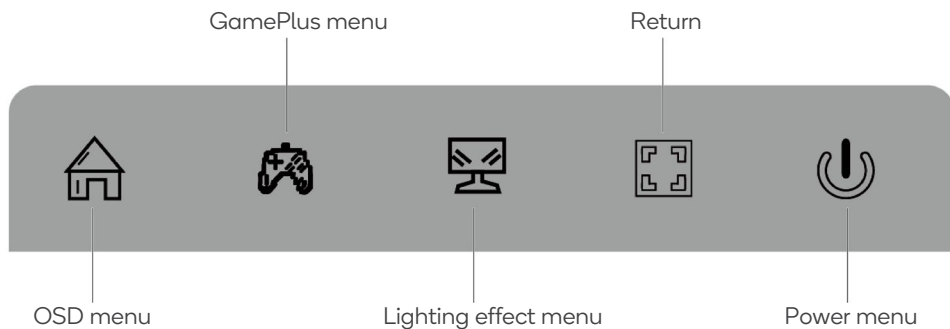


- Press the menu/enter button (M) to access the OSD menu.
- Press the down button (▼) to access the GamePlus menu.
- Press the up button (▲) to access the lighting effect menu.
- Press the exit button (E) to return to the window.
- Press the power button (⏻) to access the power menu.

On-screen display menu

The on-screen display (OSD) menu can be used to adjust the monitor's settings. When the monitor is used for the first time, optimal settings will be set as default.

1. Press any one of the buttons (M/▼/▲/E/⏻) located underneath the monitor to activate the navigation window.
2. Press the menu/enter button (M) to access the OSD menu.

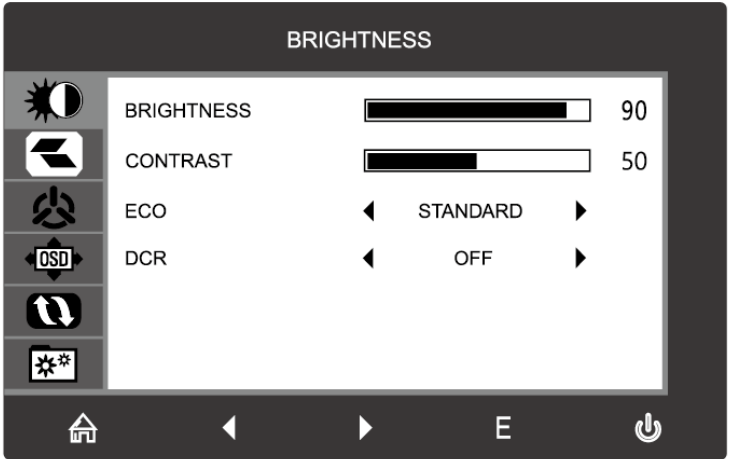

3. Press the up button (▲) and down button (▼) to browse through the categories of settings.
4. Press the menu/enter button (M) to enter the sub-menu of the desired category.
5. Press the up button (▲) and down button (▼) to browse through the sub-menu, then press the menu/enter button (M) on the desired setting you would like to change.
6. Press the up button (▲) and down button (▼) to adjust the settings to your liking. Press the menu/enter button (M) to confirm the change and exit back into the sub-menu. Press the input exit button (E) to exit the OSD menu.



OSD menu options

Below is a list of the various settings that can be adjusted through the OSD menu.

Category	Sub-Menu	Options	Description
BRIGHTNESS	Brightness	0-100	Adjusts the display brightness
	Contrast	0-100	Adjusts the display contrast
	ECO	Standard, Game, RTS, FPS, Movie, Text	Sets the display's colour balance to pre-set levels to suit different uses
	DCR	On	Turns the DCR function on
		Off	Turns the DCR function off
IMAGE	H. POSITION	0-100	Adjusts the horizontal positioning of the display
	V. POSITION	0-100	Adjusts the vertical positioning of the display
	Clock	0-100	Adjusts the clock setting of the display
	Phase	0-100	Adjusts the phase setting of the display
	Aspect	Wide, Auto, 4:3	Sets the display's aspect ratio
COLOUR TEMP.	Color temp.	Warm, Cool, User	Includes pre-set (Warm, Cool) and custom (User) colour temperatures
	Red	0-100	Adjusts the level of red, green, and blue on the display
	Green	0-100	
	Blue	0-100	



OSD SETTING	Language	English, Español, Русский, Français, 한국, Português, Deutsch, Türkçe, 简体中文, 日本語, Polski, Italiano, Nederlands	Sets the OSD language
	OSD H. POS.	0-100	Adjusts the horizontal position of the OSD menu
	OSD V.POS.	0-100	Adjusts the vertical position of the OSD menu
	OSD timer	0-60	Sets how long the OSD menu stays open without input (in seconds)
	Transparency	0-100	Sets the level of transparency of the OSD menu
RESET	Image auto adjust	N/A	Automatically adjusts the image of the display
	Colour auto adjust	N/A	Automatically adjusts the colour balance of the display
	Reset	N/A	Resets the monitor to factory default settings
	MPRT	On, Off	Turns the MPRT function on/off
MISC	Signal source	HDMI 1, HDMI 2	Selects the input signal source
	Volume	0-100	Adjusts the audio volume
	Low blue ray	0-100	Sets the level of blue light filtering
	Adaptive-Sync	On, Off	Turns the Adaptive-Sync function on/off
	Over driver	Off, Low, Middle, High	Setting these will decrease the monitor's response time speed
	LED effect	Normal, Off, Flicker	Changes the mode of the LED

ECO modes

There are various pre-set colour modes suited for various use cases available on this monitor. These can be accessed using the ECO modes menu. The modes include the following:

- Standard (suitable for most activities)
- Game (best suited general gaming)
- RTS (best suited when playing real-time strategy games)
- FPS (best suited when playing first-person shooter games)
- Movie (best suited when watching movies)
- Text (best suited when reading text)

GamePlus

The GamePlus menu allows you to change the appearance of crosshairs that appear when gaming.

CLEANING & CARE

- Ensure the monitor is turned off, unplugged, and cooled before cleaning.
- Clean the screen by wiping it with a dry microfibre cloth.
- Clean the monitor body with a slightly damp cloth with water.

SPECIFICATIONS

Model	KAMN32F16LC
Screen size	32"
Aspect ratio	16:9
Backlight	E-LED
Brightness	300cd/m ²
Panel	VA
Resolution	1920 x 1080
Refresh rate	165Hz
Response time	MPRT 1ms
Viewing angle	178° (H) 178° (V) (Typical)
Contrast ratio	3000:1
VESA mounting	75 x 75mm
Colours	16.7M
Adaptive Sync	Yes
Signal Input	x1 DisplayPort, x2 HDMI 1.4
Voltage	220-240V
Frequency/amplitude	50Hz, 2.0A



Audio	
Audio out	Yes
Speakers	No
Accessories	
Power cable	Yes
DisplayPort cable	Yes
Additional functions	
Low blue light	Yes
Flicker free	Yes
Physical dimensions	
Dimensions (with stand)	712.5 x 505.6 x 226.5mm
Dimensions (without stand)	712.5 x 422.8 x 113.3mm
Net weight	7.07kg
Gross weight	9.09kg



NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com